


AIR BELT SANDER

84123 - DAT-ABS SPARE PARTS LISTING

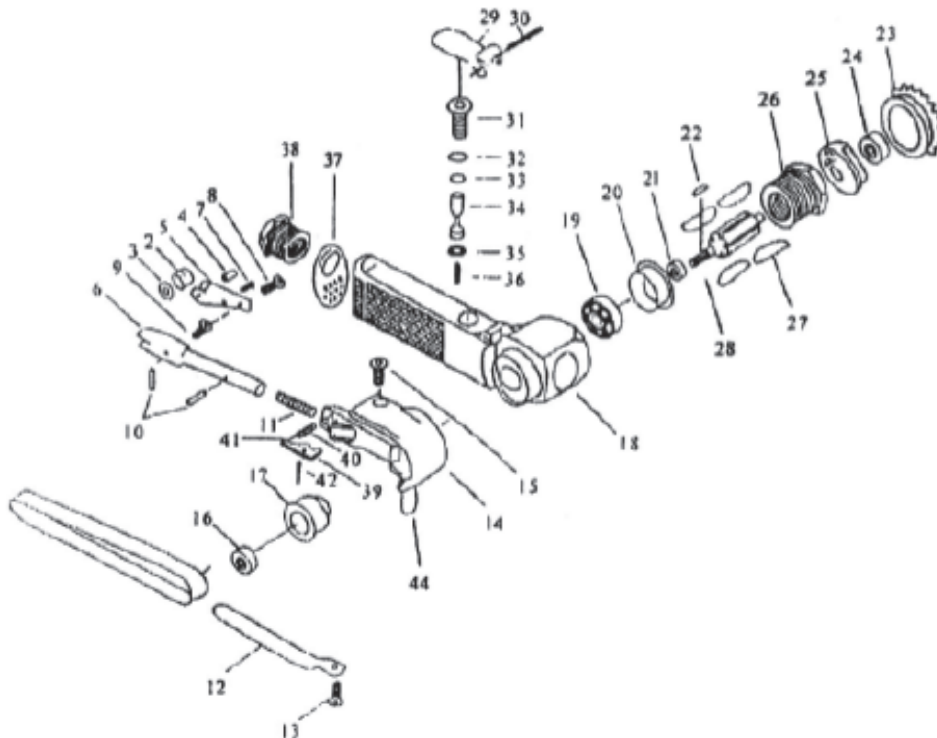

KEY No.	PART No.	STOCK No.	DESCRIPTION
2	YDAT-ABS-1	00599	Idle Pulley
3	YDAT-ABS-2	00600	Washer
4	YDAT-ABS-3	00601	Idle Pulley Screw
5	YDAT-ABS-4	00602	Bracket
6	YDAT-ABS-5	00603	Tension Bar
7	YDAT-ABS-6	00604	Hex Screw
8	YDAT-ABS-7	00605	Flat Head Screw
9	YDAT-ABS-8	00606	Spring
10	YDAT-ABS-9	00607	Spring Pin
11	YDAT-ABS-10	00609	Spring
12	YDAT-ABS-11	00610	Shoe
13	YDAT-ABS-12	00611	Flat Head Screw
14	YDAT-ABS-13	00612	Guard Assembly
15	YDAT-ABS-14	00613	Hex Bolt
16	YDAT-ABS-15	00614	Hex Pulley
17	YDAT-ABS-16	00615	Drive Pulley
18	YDAT-ABS-17	00617	Housing
19	YDAT-ABS-18	00618	Bearing
20	YDAT-ABS-19	00619	End Plate
21	YDAT-ABS-20	00620	Spacer
22	YDAT-ABS-21	00621	Sunk Key

KEY No.	PART No.	STOCK No.	DESCRIPTION
23	YDAT-ABS-22	00622	Cap
24	YDAT-ABS-23	00623	Bearing
25	YDAT-ABS-24	00625	End Plate
26	YDAT-ABS-25	00626	Cylinder
27	YDAT-ABS-26	00627	Rotor Blades
28	YDAT-ABS-27	00628	Rotor
29	YDAT-ABS-28	00629	Throttle Lever
30	YDAT-ABS-29	00630	Lever Pin
31	YDAT-ABS-30	00631	Valve Body
32	YDAT-ABS-31	00633	O-Ring
33	YDAT-ABS-32	00634	O-Ring
34	YDAT-ABS-33	00635	Valve Stem
35	YDAT-ABS-34	00636	O-Ring
36	YDAT-ABS-35	00637	Valve Spring
37	YDAT-ABS-36	00638	Muffler
38	YDAT-ABS-37	00639	Air Inlet
39	YDAT-ABS-38	00641	Tension Bar
40	YDAT-ABS-39	00642	Spring
41	YDAT-ABS-40	00643	Lever Pin M2x6
42	YDAT-ABS-41	00644	Lever Pin M2.5x10