


AIR PALM SANDER

84125 - DAT-APS SPARE PARTS LISTING

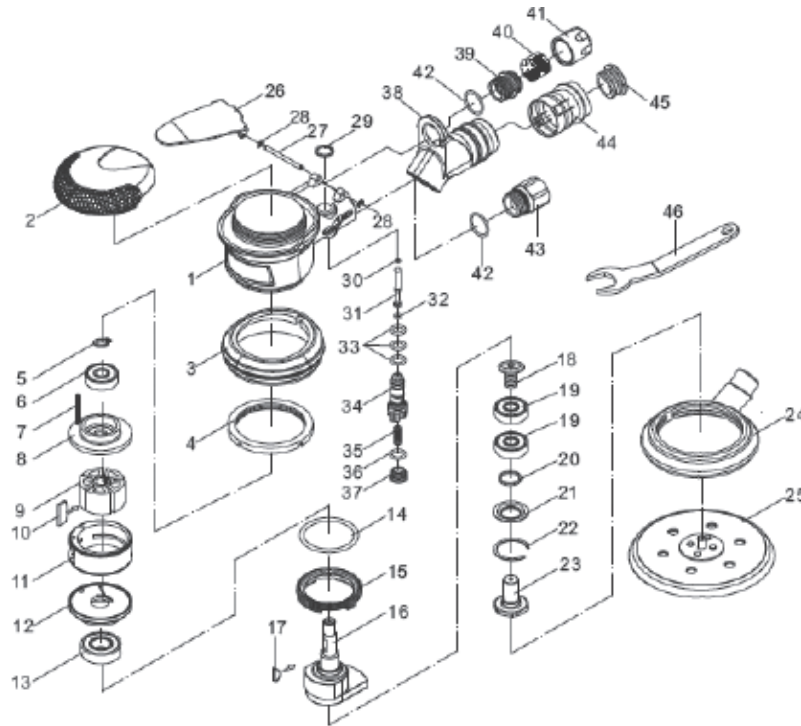

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YDAT-APS-1	00701	Housing
2	YDAT-APS-2	00702	Top Cover
3	YDAT-APS-3	00703	Bottom Cover
4	YDAT-APS-4	00704	Set Ring
5	YDAT-APS-5	00705	Snap Ring
6	YDAT-APS-6	00706	Bearing
7	YDAT-APS-7	00708	Spring Pin
8	YDAT-APS-8	00709	Rear Plate
9	YDAT-APS-9	00710	Rotor
10	YDAT-APS-10	00711	Rotor Blade
11	YDAT-APS-11	00712	Cylinder
12	YDAT-APS-12	00713	Front Plate
13	YDAT-APS-13	00714	Bearing
14	YDAT-APS-14	00716	O-Ring
15	YDAT-APS-15	00717	Lock Ring
16	YDAT-APS-16	00718	Crankshaft
17	YDAT-APS-17	00719	Semi-Round Key
18	YDAT-APS-18	00720	Screw
19	YDAT-APS-19	00721	Bearing
20	YDAT-APS-20	00722	Bearing Seal
21	YDAT-APS-21	00724	Bearing Shield
22	YDAT-APS-22	00725	Snap Ring
23	YDAT-APS-23	00726	Balance Seat

KEY No.	PART No.	STOCK No.	DESCRIPTION
24	YDAT-APS-24	00727	Pad Cover
25	ADAT-APS-25	00728	Sanding Pad
26	YDAT-APS-26	00729	Trigger Lever
27	YDAT-APS-27	00730	Pin
28	YDAT-APS-28	00732	E-Clip
29	YDAT-APS-29	00733	Snap Ring
30	YDAT-APS-30	00734	O-Ring
31	YDAT-APS-31	00735	Valve Stem
32	YDAT-APS-32	00736	O-Ring
33	YDAT-APS-33	00737	O-Ring
34	YDAT-APS-34	00738	Air Regulator
35	YDAT-APS-35	00739	Spring
36	YDAT-APS-36	00740	O-Ring
37	YDAT-APS-37	00741	Regulator Cap
38	YDAT-APS-38	00742	Vacuum Adaptor
39	YDAT-APS-39	00743	Outlet Bush
40	YDAT-APS-40	00744	Muffler Insert
41	YDAT-APS-41	00745	Muffler Cap
42	YDAT-APS-42	00746	O-Ring
43	YDAT-APS-43	00747	Air Inlet
44	YDAT-APS-44	00748	Revolving Tube
45	YDAT-APS-45	00750	Cover
46	YDAT-APS-46	00751	Wrench