

# ROTARY PUMP

20114

## 1. Product Introduction

---

### 1.1 Intended Use

This heavy-duty pump is designed for pumping low viscosity fluids such as oils, anti-freeze, add-blue, diesel & other fluids which are non-corrosive. The pump is supplied with a 2" BSP adaptor suitable for most 205 litre drums.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

### 1.2 Specification

Stock No.	20114
Part No.	RP-3
Pump type	Rotary vane
Flow Rate	600ml/revolution
Adaptor Collar Size	2" BSP
Net Weight	3kg

## 2. Health and Safety Information

---

**Important:** Read all the Health and Safety instructions before assembling, operating or maintaining this product. Failure to follow these instructions may result in injury or damage to the user or the product.


- **DO NOT** modify the pump and only use for its intended purpose.
- The pump is designed specifically for the transfer of low viscosity and non-corrosive fluids from reservoirs, tanks and drums. **ALWAYS** refer to the Safety Data Sheets for the substances being used before use.
- Maintain the pump in good condition and when replacing any parts only use spare parts recommended by Draper.
- Keep children and unauthorised persons away from the working area.
- Always wear protective gloves during operation and wash hands after use.
- **DO NOT** use the pump as a handle to move the fluid drum.
- **ALWAYS** clear up any spillages to avoid creating dangerous surfaces and environmental pollution.

## 3. Product Overview

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment. If any part is damaged or missing, do not attempt to use the product. Please contact the Draper Helpline; contact details can be found at the back of this manual.

Please visit [drapertools.com](http://drapertools.com) for our full range of accessories and consumables

- 1 Discharge Spout
- 2 Pump Body
- 3 Crank Arm
- 4 2" BSP Connector
- 5 3 × Extension Tubes

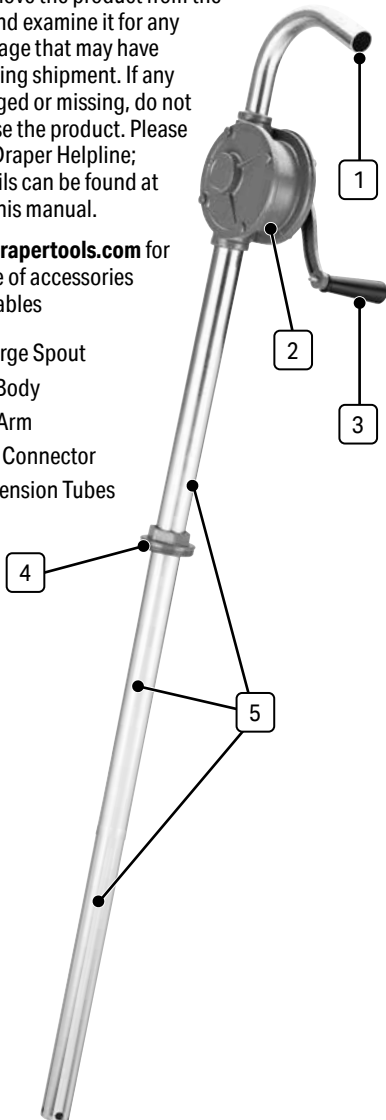

## 4. Preparing the Pump

### 4.1 Assembly

- Attach the spout (1) to the top of the pump body (2).
- Fit the crank handle (3) and secure with the handle bolt supplied.
- Connect the extension tubes (5) together and then attach to the bottom of the pump body.

## 5. Operating The Pump

### 5.1 Using the Pump

- Insert the bottom extension tube into the drum.
- Then slide the BSP connector (4) down and use the thumb screw to secure the pump to the drum.
- Before starting to use the pump check that the handle is secure.

## 6. Maintenance

- Keep the pump clean and well maintained.
- To prevent the components from becoming clogged, protect from damp, dust and debris.
- Store in a safe, dry, childproof location.

## 7. Warranty

Visit [drapertools.com/warranty](http://drapertools.com/warranty) for full details.

## Contact Details

**Draper Tools**  
Draper Tools Limited  
Hursley Road  
Chandler's Ford  
Eastleigh  
Hampshire  
SO53 1YF  
UK

**Draper Tools Europe B.V.**  
Oude Graaf 8  
6002 NL  
Weert  
Netherlands

**Website:** [drapertools.com](http://drapertools.com)  
**Email:** [sales@drapertools.com](mailto:sales@drapertools.com)

**Product Helpline:** +44 (0) 23 8049 4344  
**Telephone Sales Desk:** +44 (0) 23 8049 4333  
**General Enquiries:** +44 (0) 23 8026 6355

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.