



**4x4 / 8x8 HDMI Matrix Switch with Scaler**  
**VM5404H / VM5808H**  
**User Manual**



## EMC Information

**FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT:**  
This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**CE Warning:** This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## RoHS

This product is RoHS compliant.

## Safety

This product has been classified as Information Technology Equipment.

## SJ/T 11364-2006

The following contains information that relates to China.

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电器部件	●	○	○	○	○	○
机构部件	○	○	○	○	○	○

- : 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求之下。
- : 表示符合欧盟的豁免条款, 但该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。
- ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。



## User Information

---

### Online Registration

Be sure to register your product at our online support center:

International	<a href="http://eservice.aten.com">http://eservice.aten.com</a>
---------------	---

### Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-10-5255-0110
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988
United Kingdom	44-8-4481-58923

### User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

## Package Contents

---

The VM5404H / VM5808H package consists of:

- ◆ 1 VM5404H / VM5808H HDMI Matrix Switch with Scaler
- ◆ 1 Power Cord
- ◆ 1 IR Remote Control
- ◆ 1 IR Receiver
- ◆ 1 Mounting Kit
- ◆ 1 User Instructions\*

Check to make sure that all the components are present and that nothing got damaged in shipping. If you encounter a problem, contact your dealer.

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit, and/or any of the devices connected to it.

---

\* Features may have been added to the VM5404H / VM5808H since this manual was published. Please visit our website to download the most up-to-date version.

---

© Copyright 2014 ATEN® International Co., Ltd.  
Manual Date: 2014-10-15

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved.  
All other brand names and trademarks are the registered property of their respective owners.

# Contents

---

EMC Information	ii
RoHS	ii
Safety	ii
SJ/T 11364-2006	ii
User Information	iii
Online Registration	iii
Telephone Support	iii
User Notice	iii
Package Contents	iv
Contents	v
About this Manual	ix
Conventions	x
Product Information	x
<b>1. Introduction</b>	
Overview	1
Features	2
Requirements	3
Source Devices	3
Display Devices	3
Cables	3
Source Device Operating Systems	4
Components	5
VM5404H Front View	5
VM5404H Rear View	6
VM5808H Front View	7
VM5808H Rear View	8
IR Remote Control	9
<b>2. Hardware Setup</b>	
Rack Mounting	11
Grounding	12
Cable Connection	13
Installation Diagram	14
<b>3. Front Panel Configuration</b>	
Overview	15
Front Panel Pushbuttons	15
Enter Password	16
Main Screen	17
Port Switching	17
Input Port Selection	17
Output Port Selection	19

LCD Menu Organization	21
Menu Pushbutton	21
IP Setting	22
IP Address / Subnet Mask	22
Gateway	22
Serial Port Setting	23
Baud Rate	23
Operation Mode	24
EDID Mode	24
CEC	25
OSD	26
Output Status	27
Security Mode	28
Password	28
Change Password	29
Save to a Profile	30
Profile Pushbutton	31
IR Remote Control Operation	32
Change the Input source of an Output display	32
Power on/off individual Output displays	32
Power on/off all Output displays	33

## 4. Browser Operation

Overview	35
Logging In	35
Main Page	36
Menu Bar	36
Profile List	37
Adding/Playing a Profile	37
Profile List Options	39
Profile	39
Play Window	39
Profile Scheduling	41
Connection Profiles	42
Digital Signage Profile	42
Output Icon	43
Select Source	43
Traditional View	44
Output Options	44
Video Wall Profile	45
Video Wall Options	45
Number of Displays / Bezel Dimension	46
Blank Output	46
Independent Output	47
Grouping	47
Group	48

Display Preferences .....	48
Video Wall Example .....	49
Output Options .....	50
HDMI Video Options .....	50
Other Options .....	51
System Settings .....	52
General .....	53
Fan Status & Other .....	53
Port Name .....	54
Network .....	55
EDID .....	56
EDID Mode .....	57
Customized Mode .....	58
EDID & CEA Description .....	59
Customized EDID Settings .....	60
CEA Settings .....	63
Video Data .....	64
Firmware .....	66
User Management .....	67
New / Edit User .....	68
Permission Level .....	69
Telnet Operation .....	70
Configuration Menu .....	70
1. H – Call up the command list for help .....	70
2. GT – Set gateway address .....	71
3. IM – Set IP subnet mask .....	71
4. IP – Set IP address .....	71
5. LO – Load connections from profile .....	71
6. PW – Change password .....	71
7. RI – Read what input is connected to nn output .....	71
8. RO – Read what output is connected to nn input .....	72
9. SB – Set serial port baud rate .....	72
10. SS – Switch input to specified output .....	72
11. SV – Save the current connections into a profile .....	72
12. TI – Set timeout .....	72
13. VR – Software version information .....	72

## 5. RS-232 Commands

Serial Control Protocol Commands .....	73
Configuring the Serial Port .....	73
Verification .....	73
Switch Port Command .....	74
EDID Mode Command .....	76
Mute Command .....	78
CEC Command .....	79
Scaling Command .....	80

Fan Speed Command .....	82
Echo Command .....	83
Black Screen Command .....	84
Read Command .....	85
Reset Command .....	85
Baud Rate Command .....	86
Save/Load Profile Command .....	87
OSD Command .....	88

## **Appendix**

Safety Instructions .....	89
General .....	89
Rack Mounting .....	91
Technical Support .....	92
International .....	92
North America .....	92
Specifications .....	93
Limited Warranty .....	94



## About this Manual

---

This User Manual is provided to help you get the most from your VM5404H / VM5808H system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

**Chapter 1, Introduction**, introduces you to the VM5404H / VM5808H system. Its purpose, features and benefits are presented, and its front and back panel components are described.

**Chapter 2, Hardware Setup**, describes how to set up your VM5404H / VM5808H installation.

**Chapter 3, Front Panel Configuration**, explains the fundamental concepts involved in operating the VM5404H / VM5808H at the local site via the front panel LCD display using pushbuttons.

**Chapter 4, Browser Operation**, provides a complete description of the VM5404H / VM5808H's Browser Graphical User Interface (GUI), and how to use it to remotely configure and operate the VM5404H / VM5808H.


**Chapter 5, RS-232 Protocol Commands**, provides a complete list of the serial control protocol commands used when utilizing the RS-232 Serial Port so that an extra source device can be utilized in the installation.

**An Appendix**, provides specifications and other technical information regarding the VM5404H / VM5808H.

## Conventions

---

This manual uses the following conventions:

- `Monospaced` Indicates text that you should key in.
- [ ] Indicates keys you should press. For example, [Enter] means to press the **Enter** key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
- 1. Numbered lists represent procedures with sequential steps.
- ◆ Bullet lists provide information, but do not involve sequential steps.
- Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the *Start* menu, and then select *Run*.
-  Indicates critical information.

## Product Information

---

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	<a href="http://www.aten.com">http://www.aten.com</a>
North America	<a href="http://www.aten-usa.com">http://www.aten-usa.com</a>

# Chapter 1

## Introduction

### Overview

---

The ATEN VanCryst VM5404H / VM5808H 4 x 4 / 8 x 8 HDMI Matrix Switch with Scaler is a versatile solution that provides an easy way to route high definition video and audio from any of 4/8 HDMI sources to any of 4/8 HDMI displays at the same time. As a Matrix Switch, each input can be independently connected to any or all outputs, giving you the ultimate in flexibility and control in any multi-display audio/video installation.

The VM5404H / VM5808H features Seamless Switching, which employs FPGA matrix system architecture to seamlessly switch between multiple sources and multiple displays. With EDID Expert technology, the VM5404H / VM5808H selects the optimum EDID settings for smooth power-up and the highest quality display. It also features a high-performing scaling engine that converts the video resolution into the display's native resolution to give you the best image quality.

You can easily configure the VM5404H / VM5808H via the front panel LCD display and pushbuttons, and through the use of an IR Remote Control. The LCD provides a quick view of all port connections, and lets operators access the unit's built-in configuration utility.

Furthermore, the VM5404H / VM5808H allows convenient configuration and operation via an intuitive Graphical User Interface (GUI) using any web browser. The web GUI provides you with advanced features which include easy setup of custom Video Wall and Digital Signage configurations that can be saved and recalled. Because your VM5404H / VM5808H can be controlled over a standard TCP/IP connection, it conveniently integrates into any existing network for easy remote access. For complete system and install integration, serial control is standard through the VM5404H / VM5808H's built-in RS-232 port that allows the switch to be controlled through a high-end controller or PC.

The VM5404H / VM5808H is an ideal solution for applications that require HDMI outputs from multiple sources to be conveniently delivered to multiple destinations, such as for stage presentations, competitions, control centers, and system installations that require real-time reports.

## Features

---

- ◆ Connects any of 4 (VM5404H) or 8 (VM5808H) HDMI sources to any of 4 / 8 HDMI displays
- ◆ Long Distance Transmission – supports up to 15 m (24 AWG)
- ◆ HDMI (3D, Deep color); HDCP 1.4 compatible
- ◆ Video wall – provides up to 8/16 connection profiles that you can customize into layouts via web GUI
- ◆ Features a built in high-performance scaler function for best image quality
- ◆ Easily switch between multiple sources and multiple displays
- ◆ Seamless Switch – provides continuous video streams, real-time switching and stable signal transmission\*
- ◆ Built-in EDID wizard – provides an easy way to customize EDID settings
- ◆ EDID Expert technology – selects optimum EDID settings for smooth power-up and highest quality display
- ◆ Configuration and control via: Front panel LCD display, pushbuttons, IR remote control and web GUI
- ◆ System Operation:
  - ◆ Serial controller
  - ◆ Browser Graphical User Interface (GUI)
  - ◆ Telnet
- ◆ Built-in bi-directional RS-232 serial port for high-end system control
- ◆ Superior video quality – HDTV resolution of 480p, 720p, 1080i and 1080p (1920 x 1080)
- ◆ Supports Dolby True HD and DTS HD Master audio
- ◆ Consumer Electronics Control (CEC) support
- ◆ Power On Detection – If an HDMI source is powered off the VM5404H / VM5808H automatically switches to the next powered on source
- ◆ Firmware Upgradeable
- ◆ Rack Mountable
- ◆ All metal casing

---

**\*Note:** If Seamless Switching is enabled, the video output will not display 3D, Deep Color or interlace resolution (i.e., 1080i). For these features you must disable Seamless Switching.

---

## **Requirements**

---

The following devices are required for a complete VM5404H / VM5808H installation:

### **Source Devices**

- ◆ Computer or A/V source device with HDMI Type A output connector(s)

---

**Note:** A DVI/HDMI adapter is required when connecting a DVI source device.

---

### **Display Devices**

- ◆ Display devices or receivers with an HDMI Type A input connector

### **Cables**

- ◆ 1 HDMI cable for each source device you will be connecting
- ◆ 1 HDMI cable for each display device you will be connecting
- ◆ 1 Cat 5e cable
- ◆ 1 RS-232 serial cable

---

**Note:** No cables are included in this package. We strongly recommend that you purchase high-quality cables of appropriate length since this will affect the quality of the audio and video display. Contact your dealer to purchase the correct cable sets.

---


## **Source Device Operating Systems**

Supported operating systems are shown in the table below:

<b>OS</b>		<b>Version</b>
Windows		2000 and higher
Linux	RedHat	6.0 and higher
	SuSE	8.2 and higher
	Mandriva (Mandrake)	9.0 and higher
UNIX	AIX	4.3 and higher
	FreeBSD	3.51 and higher
	Sun	Solaris 8 and higher
Novell	Netware	5.0 and higher
Mac		OS 9 and higher
DOS		6.2 and higher


## Components

### VM5404H Front View

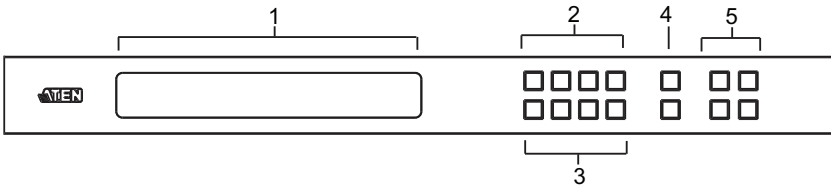

No.	Component	Description
1	LCD Display	The LCD Display gives a quick view of all port connections, and shows the various options for configuring and operating the VM5404H. For full details, see <i>Main Screen</i> , page 17.
2	Input Pushbuttons	These pushbuttons refer to the HDMI Input ports found on the VM5404H rear panel. Press to select the Input port. These pushbuttons may also correspond to menu options, connection profiles (P1–P4) and so on. <b>Note:</b> The <b>INPUT</b> (1–4) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
3	Output Pushbuttons	These pushbuttons refer to the HDMI Output ports found on the VM5404H rear panel. Press to select the Output port. These pushbuttons may also correspond to connection profiles (P5–P8). <b>Note:</b> The <b>OUTPUT</b> (1–4) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
4	Prev / Next Pushbuttons	These pushbuttons allow you to cycle through the menu options on the LCD display.
5	Function Pushbuttons	The function pushbuttons ( <b>MENU</b> , <b>PROFILE</b> , <b>ENTER</b> and <b>CANCEL</b> ) are for navigating the LCD built-in configuration utility. For full details, see <i>Front Panel Pushbuttons</i> , page 15. <b>Note:</b> The <b>MENU</b> and <b>PROFILE</b> front panel pushbuttons have built-in LEDs that light to indicate they have been selected.


## VM5404H Rear View

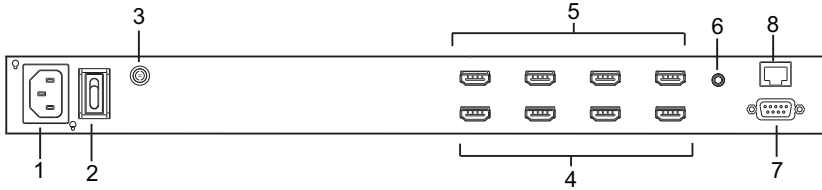

No.	Component	Description
1	Power Socket	This is a standard 3-pin AC power socket. The power cord from an AC source plugs in here.
2	Power Switch	This is a standard rocker switch that powers the unit on and off.
3	Grounding Terminal	The grounding wire attaches here. See <i>Grounding</i> , page 12, for further details.
4	HDMI Input Ports	The cables from your HDMI source devices plug into these ports.
5	HDMI Output Ports	The cables from your HDMI display devices plug into these ports.
6	IR Port	Connect the IR Receiver unit included with your product via this 3.5 mm Mini Stereo Jack.
7	RS-232 Serial Port	Connect a computer or high-end system controller via this serial port.
8	Ethernet Port	In order to access the VM5404H's Browser Graphical User Interface (GUI), the VM5404H must be connected to your network. The cable that connects the VM5404H to your LAN plugs in here. See <i>Cable Connection</i> , page 13, for further details




## VM5808H Front View

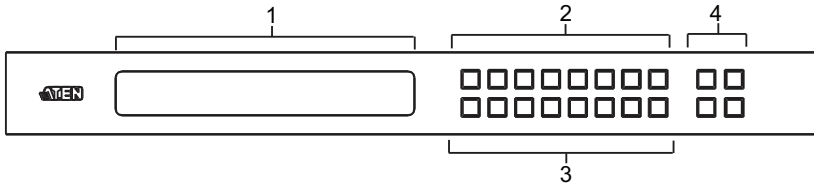


No.	Component	Description
1	LCD Display	The LCD Display gives a quick view of all port connections, and shows the various options for configuring and operating the VM5808H. For full details, see <i>Main Screen</i> , page 17.
2	Input Pushbuttons	These pushbuttons refer to the HDMI Input ports found on the VM5808H rear panel. Press to select the Input port. These pushbuttons may also correspond to menu options, connection profiles (P1–P8) and so on. <b>Note:</b> The <b>INPUT</b> (1–8) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
3	Output Pushbuttons	These pushbuttons refer to the HDMI Output ports found on the VM5808H rear panel. Press to select the Output port. These pushbuttons may also correspond to connection profiles (P9–P16). <b>Note:</b> The <b>OUTPUT</b> (1–8) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
4	Function Pushbuttons	The function pushbuttons ( <b>MENU</b> , <b>PROFILE</b> , <b>ENTER</b> and <b>CANCEL</b> ) are for navigating the LCD built-in configuration utility. For full details, see <i>Front Panel Pushbuttons</i> , page 15. <b>Note:</b> The <b>MENU</b> and <b>PROFILE</b> front panel pushbuttons have built-in LEDs that light to indicate they have been selected.

## VM5808H Rear View

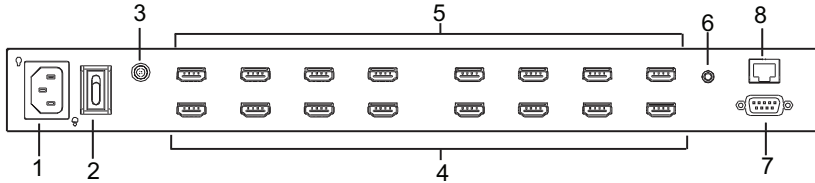

No.	Component	Description
1	Power Socket	This is a standard 3-pin AC power socket. The power cord from an AC source plugs in here.
2	Power Switch	This is a standard rocker switch that powers the unit on and off.
3	Grounding Terminal	The grounding wire attaches here. See <i>Grounding</i> , page 12, for further details.
4	HDMI Input Ports	The cables from your HDMI source devices plug into these ports.
5	HDMI Output Ports	The cables from your HDMI display devices plug into these ports.
6	IR Port	Connect the IR Receiver unit included with your product via this 3.5 mm Mini Stereo Jack.
7	RS-232 Serial Port	Connect a computer or high-end system controller via this serial port.
8	Ethernet Port	In order to access the VM5808H's Browser Graphical User Interface (GUI), the VM5808H must be connected to your network. The cable that connects the VM5808H to your LAN plugs in here. See <i>Cable Connection</i> , page 13, for further details

## IR Remote Control

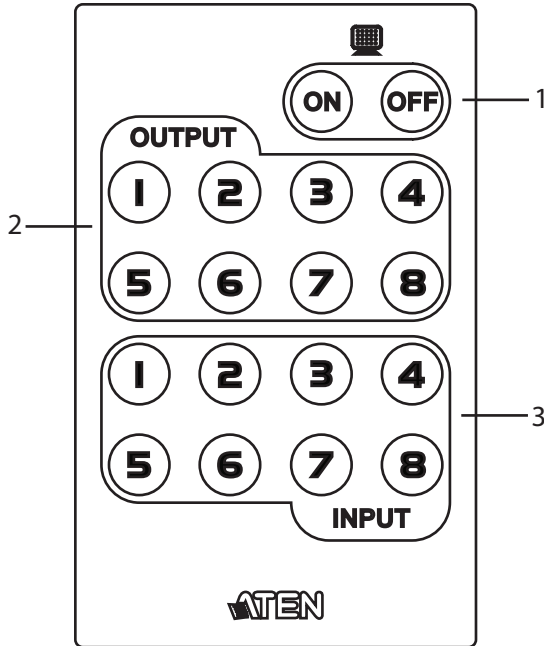

No.	Component	Description
1	Power ON/OFF	Use the <b>ON</b> and <b>OFF</b> pushbuttons to turn the Output displays on or off – by individual port, or all ports. (see <i>IR Remote Control Operation</i> , page 32)
2	Output Pushbuttons 1–8	Press <b>Output</b> display pushbuttons 1–8 to select the Output display you want to configure (see <i>IR Remote Control Operation</i> , page 32).
3	Input Pushbuttons 1–8	Press <b>Input</b> source pushbuttons 1–8 to select the Input source you want to display on a selected output (see <i>IR Remote Control Operation</i> , page 32).

**Note:** The VM5404H's IR remote control only supports use the 1~4 Input and 1~4 Output pushbuttons.

This Page Intentionally Left Blank

# Chapter 2

## Hardware Setup




1. Important safety information regarding the placement of this device is provided on page 89. Please review it before proceeding.
2. Make sure that the power to all devices connected to the installation are turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.

### Rack Mounting

---

The VM5404H / VM5808H can be mounted in a 19" (1U) system rack. For the most convenient front panel pushbutton configuration and operation at the local site, mount the unit at the front of the rack, as follows:

1. Use the M3 x 8 Phillips head hex screws supplied with the Mounting Kit to screw the rack mounting brackets onto the front of the unit.

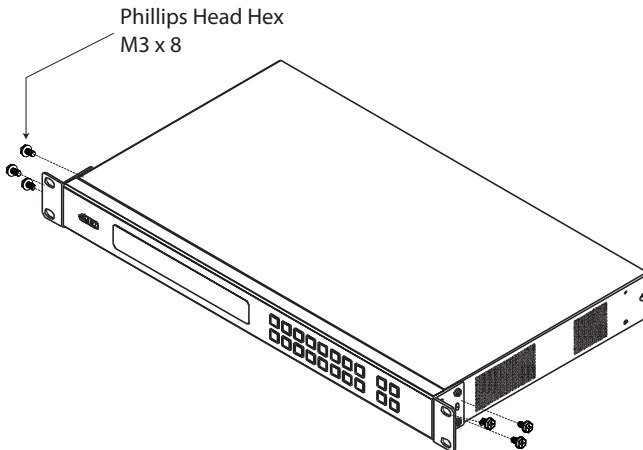


2. Position the unit in the front of the rack and align the holes in the mounting brackets with the holes in the rack.
3. Screw the mounting brackets to the rack.

## Grounding

---

To prevent damage to your installation, it is important that all devices are properly grounded.

1. Use a grounding wire to ground the VM5404H / VM5808H by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.

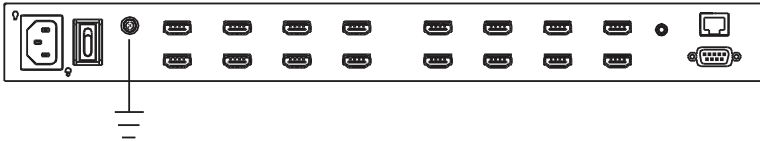

2. Make sure that all devices in your VM5404H / VM5808H installation are properly grounded.

---

## Cable Connection

---

Installation of the VM5404H / VM5808H is simply a matter of connecting the appropriate cables. Refer to the installation diagram on the following page (the numbers in the diagram correspond to the steps below), and do the following:

1. Use a grounding wire to ground the unit by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.


---

**Note:** Do not omit this step. Proper grounding helps to prevent damage to the unit from surges or static electricity.

---

2. Connect up to 4 (VM5404H) or 8 (VM5808H) HDMI video sources to the **HDMI Input** ports
3. Connect up to 4 (VM5404H) or 8 (VM5808H) HDMI display devices to the **HDMI Output** ports
4. Connect the IR Receiver into the **IR** port.
5. (Optional) If using the Browser Operation features (see *Browser Operation*, page 35), plug a Cat 5e cable from the LAN into the VM5404H / VM5808H's **Ethernet** port.
6. (Optional) If you are using the serial control function, use an appropriate RS-232 serial cable to connect the computer or serial controller to the VM5404H / VM5808H's female **RS-232 Serial** port.
7. Plug the power cord supplied with the package into the VM5404H / VM5808H's 3-prong AC socket, and then into an AC power source.
8. Power on the VM5404H / VM5808H and all devices in the installation.

## Installation Diagram

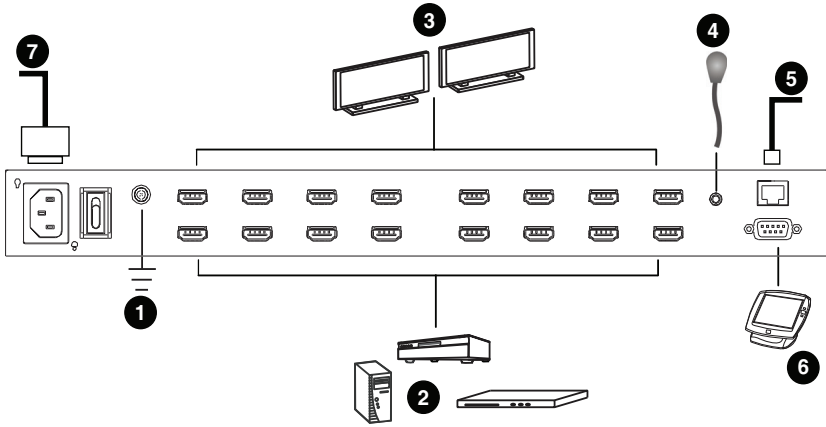



# Chapter 3

## Front Panel Configuration

### Overview

---

The VM5404H / VM5808H can be configured and operated locally via the front panel LCD/pushbuttons and IR Remote Control; remotely over a standard TCP/IP connection via graphical user interface (GUI) using a web browser; via a remote terminal session using Telnet; or by a RS-232 serial controller.

The local front panel operation is discussed in this chapter. Web GUI Operation is discussed in Chapter 4, and RS-232 serial control is discussed in Chapter 5.

### Front Panel Pushbuttons

---

The front panel features an LCD display and pushbuttons for convenient operation locally. This allows users to perform operations such as selecting which source shows on which display, viewing the IP settings, configuring the serial port, setting the EDID Mode / CEC / OSD /Output Status, selecting security settings, and loading/saving profiles.

 
Note the following front panel pushbutton functions:

- ◆ Use the **MENU** pushbutton to access the Menu page options: IP Setting, Serial Port Setting, Operation Mode, Security Mode, and Save to a Profile (see *LCD Menu Organization*, page 21).
- ◆ Use the **PROFILE** pushbutton to switch between the connection profiles which have been added to the Profile List (see *Profile List*, page 37). Pressing this pushbutton for longer than 3 seconds displays the Save to a Profile page (see *Save to a Profile*, page 30).
- ◆ Use the **CANCEL** pushbutton to go back to a previous page, return to the Main Screen, stop or exit an operation.
- ◆ Use the **ENTER** pushbutton to select options and confirm operations.
- ◆ Use the **INPUT / OUTPUT (1–8)** or **(1-4)** pushbuttons to select the Input/Output port. These pushbuttons may also correspond to menu options, connection profiles, and so on.
- ◆ The VM5404H provides **Prev / Next** pushbuttons to navigate the menus.
- ◆ Use pushbuttons **7/8** (Prev/Next) to navigate the VM5808H menus.

## Enter Password

Upon VM5404H / VM5808H startup, check the front panel LCD to view the loading progress. If the Password screen / LCD Menu fails to load, an error message displays. Reset the unit and try again.

If you are accessing the VM5404H / VM5808H for the first time, the Password screen appears as soon as the LCD loading process is done. Enter the default password 1234 to continue to the Main Screen (see *Main Screen*, page 17).



Additionally, the Password Screen appears if the VM5404H / VM5808H has been configured to require a password for Front Panel operation (see *Security Mode*, page 28).


To enter a password, do the following:

1. In the **Enter Password** field, check that the cursor is at the first asterisk (\*) and flashing.
2. Use the front panel Input Port pushbuttons (1–8) or (1–4) to enter the 4-digit password. After the fourth digit has been entered correctly, the Main Screen displays.
3. Press **Cancel** to clear the password. The digits revert to 4 asterisks and the cursor goes back to the first asterisk.

- 
- Note:**
1. The VM5404H / VM5808H password can be any four digit combination between 1111 to 8888 (VM5808H) or 1111 to 4444 (VM5404H). The default password is 1234.
  2. If you enter an incorrect password, the cursor goes back to the first digit and reverts to flashing. The Incorrect Password message displays at the bottom of the screen, but clears as soon as a new password is entered.
  3. If Password option is Enabled (see *Security Mode*, page 28), the LCD display time-out is 5 minutes by default.
-

## Main Screen

 The Main Screen shows the Input ports in the top row, which are tied to the Output ports shown in sequential order (1–8) at the bottom row.



- ◆ The front panel pushbutton label (1–8) corresponds to the **Input** ports and **Output** ports on the unit's rear panel.
- ◆ Use the **Menu** pushbutton to view the LCD Menu (see *LCD Menu Organization*, page 21).
- ◆ Use the **Profile** pushbutton to switch between profile connections (see *Profile List*, page 37).

## Port Switching

From the Main Screen, users can configure the Input-to-Output port connections to associate an Input source device to an Output display.

### Input Port Selection

Use the Input Port pushbuttons to select the Input port you want to configure.



To select which input source displays on each output port, do the following:

1. Press any Input port pushbutton (1–8). The Output port LED(s) tied to the said Input port light(s) up (steady).

In the example below, pressing Input port **1** shows it is tied to Output ports **1** and **2**.



(Continues on next page.)

*(Continued from previous page.)*

- To disconnect an Output port from an Input port, press the corresponding Output port pushbutton.

In the example below, Output port **2** has been disconnected from Input port **1**.



- To switch to another Input port, press any Input port pushbutton. The Output port LED(s) tied to the said Input port light(s) up (steady).

In the example below, pressing Input port **2** shows it is tied to Output ports **3** and **4**.



- To connect Output port **2** to Input port **2**, press the Output port **2** pushbutton. The Output port 2 LED flashes (0.5 sec on, 0.2 sec off). As a result, Input port **2** is now connected to Output ports **2**, **3** and **4**.

 


Once the signal from the selected Input port is successfully tied to the Output port, the LEDs turn off and the LCD information is updated.

- 
- Note:**
- Pressing an Input port a second time deselects it.
  - Input ports that are not configured or tied to any output port shows **NA** in the LCD screen.
  - Pressing the **Cancel** pushbutton once stops the Input Port Selection operation, and the LCD displays the active setting. Pressing the **Cancel** pushbutton again turns all LEDs off.
  - After 10 seconds of inactivity, all the LEDs turn off.
-

## Output Port Selection

Use the Output Port pushbuttons to select the Output port you want to configure.



To select which output display corresponds to each input source device, do the following:

1. Press any Output port pushbutton (1–8).

In the example below, Output port **1** pushbutton has been pressed. It is not tied to any Input port.



2. If an Output port pushbutton is pressed a second time, it is deselected and the LED turns off.
3. To connect the selected Output port(s) to an Input port, press the Input port pushbutton. to which you want the Output port(s) tied. The newly selected Input port LED flashes (0.5 sec on, 0.2 sec off), and the LCD information is updated.

In the example below, pressing Input port **2** ties it to Output ports **2, 3** and **4**.



4. To switch Output ports **2**, **3** and **4** to another Input port (and disconnect it from Input port **2**), press another Input port pushbutton to which you want it tied.

In the example below, Input port **3** has been pressed and is now connected to Output ports **2**, **3** and **4**.



- 
- Note:**
1. Pressing an Output port a second time deselects it.
  2. Pressing the **Cancel** pushbutton once stops the Output Port Selection operation, and the LCD displays the active setting. Pressing the **Cancel** pushbutton again turns all LEDs off.
  3. After 10 seconds of inactivity, all the LEDs turn off.
-

## LCD Menu Organization

The VM5404H / VM5808H has a built-in configuration utility via the front panel LCD, which can be controlled by pressing the **MENU** and front panel Input pushbuttons (1–8). User can cycle through the menu options, starting from IP Setting page, in the order shown in the table below:

Menu Page	Sub-Menu Page(s)	
IP Setting	IP Address	
	Subnet Mask	
	Gateway	
Serial Port Setting	Baud Rate	9600 / <b>19200</b> / 38400 / 115200
Operation Mode	EDID	<b>Default</b> / Port1 / Remix / Customized
	CEC	On / <b>NA</b>
	OSD	<b>On</b> / NA
	Output Status	<b>On</b> / NA
Security Mode	Password	<b>Enable</b> / Disable
	Change Password	Old Password   New Password
Save to a Profile	Save to a Profile No	01–08 (VM5404H); 01-16 (VM5808H)

**Note:** The highlighted values are the default settings of the VM5404H / VM5808H.

## Menu Pushbutton

Press the **MENU** pushbutton to switch between the Main Screen and LCD Menu page. When the Menu is active, the MENU pushbutton's built-in LED lights up:



From the Menu page:

- ◆ Press **1** to go to the IP Setting page (see *IP Setting*, page 22)
- ◆ Press **2** to go to the Serial Port Setting page (see *Serial Port Setting*, page 23)
- ◆ Press **8** to go to the next page(s) for the sub-menu pages

- ◆ Press **Menu** or **Cancel** to return to the Main Screen

 
## IP Setting

The IP Setting page displays the VM5404H / VM5808H's IP configuration. The values in the LCD Menu are read-only and can be edited via the Browser GUI (*User Management*, page 67).

### IP Address / Subnet Mask

To view the VM5404H / VM5808H's IP address and Subnet Mask, do the following:

1. From the Menu page, press **1** to see the IP Setting submenu. The IP address and Subnet Mask are then shown.




---

**Note:** The VM5404H / VM5808H default IP address is 192.168.0.60. The default Subnet Mask is 255.255.255.0

---

2. Press **8** to go to the next page.
3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous page without saving.

### Gateway

To view the VM5404H / VM5808H's gateway address, do the following:

1. From the Menu page, press **1** to see the IP Setting submenu, then press **8** to get to the next page. The gateway address displays.




---

**Note:** The default Gateway is 192.168.0.1.

---

2. Press **7** to go to the previous page.
3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous page without saving.



## Serial Port Setting

To configure the VM5404H / VM5808H's baud rate for its serial port connection, select Serial Port Setting from the Menu page.



## Baud Rate

To set the VM5404H / VM5808H's baud rate, do the following:

1. Select **Baud Rate Setting** from the Serial Port Setting submenu by pressing **1**:



2. Press pushbuttons 1–4 to make your selection.



Baud Rate options are:

- ◆ 1: 9600
- ◆ 2: 19200
- ◆ 3: 38400
- ◆ 4: 115200

---

**Note:** The default baud rate is 19200.

---

3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous step without saving.

## Operation Mode

The EDID Mode, CEC, OSD and Output Status features can be configured from the Operation Mode page.

- ◆ EDID (Extended Display Identification Data) is used to have the VM5404H / VM5808H automatically apply a preset video configuration or EDID Mode, which utilizes the best resolution across different monitors
- ◆ Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to one remote control
- ◆ The OSD, when enabled for a port, lets an attached display/monitor show real-time port switching information
- ◆ The Output Status shows whether the video/audio of an Output port is turned on or off

To configure the VM5404H / VM5808H’s operation mode settings from the Main Screen, use the **Menu** pushbutton to access the Menu page, press **8** to navigate to the next page, then press pushbutton **1** to access the Operation Mode page.



## EDID Mode

 
To configure the EDID Mode, do the following:

1. From the Operation Mode page, press pushbutton **1**:



*(Continues on next page.)*

2. Press pushbuttons 1–4 to make your selection.



EDID Mode options are:

EDID Option	Description
1: Port1	The EDID from port1 is passed to all video sources.
2: Default	The default EDID is passed to all video sources.
3: Remix	Uses the EDID of each connected display according to its connection when the VM5404H / VM5808H is first powered on, or immediately after pressing 3 to select the Remix option.
4: Customized	Automatically retrieves and saves the EDID settings of a connected monitor/display device to an input source port. This can be configured using the Browser GUI. See <i>Customized EDID Settings</i> , page 60.

3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous step without saving.


## CEC

 To configure the CEC setting, do the following:

1. From the Operation Mode page, press pushbutton **2**:



2. Press pushbuttons 1–8 to enable (**ON**) or disable (**NA**) the CEC feature for the output port. If the port does not support CEC, an **NA** is shown.



**Note:** The default CEC setting is NA.

3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous step without saving.

## OSD

 
The On-Screen Display or OSD feature enables real-time text updates to appear on the display device's screen for any configuration changes made to the Output port via the VM5404H / VM5808H's front panel, IR remote control or Browser GUI.

To configure the OSD setting for each output port, do the following:

1. From the Operation Mode page, press **8** to go to the next page, then press pushbutton **1**:



2. Press pushbuttons 1–8 to enable (**ON**) or disable (**NA**) the OSD feature for the output port.




---

**Note:** The default OSD setting is On.

---

3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous step without saving.

## Output Status

To configure the Output Status settings for each output port, do the following:

1. From the Operation Mode page, press **8** to go to the next page, then press pushbutton **2**:



2. Press pushbuttons 1–8 to enable (**ON**) or disable (**NA**) the video/audio of the output port.




---

**Note:** The default Output Status setting is On.

---

3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous step without saving.

## Security Mode

The Security Mode page allows users to manage the VM5404H / VM5808H's password-related settings; the **Password** page configures the VM5404H / VM5808H to require a password for local operation after the LCD display times out or is powered off/on; the **Change Password** option allows users to set a new password for the VM5404H / VM5808H.

To configure the VM5404H / VM5808H's password settings from the Main Screen, use the **Menu** pushbutton to access the Menu page, press **8** to navigate to the next pages, then press pushbutton **2** to access the Security Mode page.



## Password

1. To set the VM5404H / VM5808H to require a password for local operation, press pushbutton **1**.



2. To require a password after the LCD display times out or is powered off/on, press pushbutton **1**. Otherwise, press pushbutton **2**.



**Note:** If Password is Enabled, the LCD display's default time-out is 5 minutes.

3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous step without saving.

## Change Password

1. To change the password for accessing the unit, press pushbutton **2**.



2. In the Old Password field, the cursor flashes at the first digit. Enter the old password (see *Enter Password*, page 16). If the old password is entered correctly, you can proceed to the next step.



**Note:** If you entered an incorrect password, an error message appears and the cursor goes back to the first digit (flashing). The Incorrect Password message clears as soon as a new digit is entered.

3. In the New Password field, the cursor flashes at the first digit. Enter the new password using the front panel number pushbuttons (1111–8888).



4. Re-enter the new password in the following screen. The new password is applied by the VM5404H / VM5808H immediately.



If the password you entered does not match the one entered in the previous screen, an error message appears. Enter the new password correctly.

5. Press **Menu** to return to the Menu page.
6. Press **Cancel** to return to the previous step without saving.

## Save to a Profile

The switch allows users to store up to 8 (VM5404H) or 16 (VM5808H) (numbered P1–P16) different connection profiles that can be saved and recalled later.

The active Input-to-Output port connections on the LCD Main Screen is the configuration saved to a profile. When a user loads a profile, the change is immediate and the profile number is shown on the lower right corner of the LCD screen.

To save a profile once the desired port connections are set, do the following:

1. Press the **Menu** pushbutton to access the Menu page, then **8** to navigate to the next pages. Press pushbutton **1** to open the select Save to a Profile page.



2. On the page that opens, you are asked to give the profile a number. Use the front panel number pushbuttons to select a profile number into which you want to save the configuration.



**VM5404H:** Options are P1–P8 (when saving a profile via the LCD), where:

- ◆ Input port pushbuttons **1–4** correspond to Profile **P1** to **P4**
- ◆ Output port pushbuttons **1–4** correspond to Profile **P5** to **P8**

**VM5808H:** Options are P1–P16 (when saving a profile via the LCD), where:

- ◆ Input port pushbuttons **1–8** correspond to Profile **P1** to **P8**
- ◆ Output port pushbuttons **1–8** correspond to Profile **P9** to **P16**

3. Press **Enter** to store the configuration – the LCD shows Profile Saved.
4. Press **Menu** to return to the Menu page,
5. Press **Cancel** to return to the previous step without saving.

**Note:** Access the Save to a Profile page quickly by pressing the **Profile** pushbutton for longer than 3 seconds.



## Profile Pushbutton

The **PROFILE** pushbutton lets users conveniently switch between connection profiles that have been saved or added to the Profile List (see *Profile List*, page 37).

If a Profile is in use, its profile number (P1–P32) is shown on the lower right corner of the LCD display.



The Profile pushbutton functions as follows:

- ◆ Press the Profile pushbutton for 1–2 seconds to cycle between profiles stored in the GUI’s Profile List (from 1 up to 16, depending on how many are added to the list)
- ◆ Alternatively, after pressing the Profile pushbutton (lights), use the Input/Output pushbuttons to switch to a specific profile (from P1 to P16 only). Note that:
  - ◆ **Input** ports **1–8** or **1–4** correspond to Profile **P1** to **P8** or **P1** to **P4**
  - ◆ **Output** ports **1–8** or **1–4** correspond to Profile **P9** to **P16** or **P5** to **P8** (where Output Port 1=Profile 9, Output Port 2=Profile 10... Output Port 8=Profile 16)

The selected pushbutton lights steady, and the VM5404H / VM5808H immediately applies the port connections configured in the selected profile.

- ◆ When the Profile pushbutton is pressed for 3 seconds or more, the LCD directs to the Save to a Profile page (see *Save to a Profile*, page 30)
- ◆ Press the **Cancel** pushbutton to exit

---

**Note:** If there are no profiles configured on the VM5404H / VM5808H device, an error message “*No Profile List defined. Profile List can be edited via the Web GUI*” is displayed when the Profile pushbutton is pressed.

---

A Profile’s port connections can be edited using the front panel pushbuttons (see *Port Switching*, page 17) or via the *Connections* page of the Browser GUI (see *Main Page*, page 36). Additionally, the Profile List can be configured via the Profile page of the Browser GUI (see *Profile List*, page 37).

## **IR Remote Control Operation**

---

The IR remote control (*IR Remote Control*, page 9) included with the VM5404H / VM5808H can be used to:

- ◆ change the Input source of any Output display
- ◆ power on/off individual Output displays; or
- ◆ power on/off all Output displays simultaneously

Before using the remote control, a user must first plug the IR External Receiver into the rear panel of the VM5404H / VM5808H and place the receiver where the IR signal can be reached (see *IR Port*, page 8).

### **Change the Input source of an Output display**

To change the Input source of an Output display, using the remote control, do the following:

1. Press the **Output** port number (**1–8**) or (**1–4**) you want to change.
2. Within 2 seconds press the **Input** port number (**1–8**) or (**1–4**) you want the Output port to display.\*
3. Repeat steps 1-2 to change additional ports.

\*For the change to occur the Input number must be pressed within 2 seconds of pressing the Output number.

### **Power on/off individual Output displays**

To power on/off individual Output displays, using the remote control, do the following:

1. Press the **Output** port number (**1–8**) or (**1–4**) you want to power on/off.
2. Within 2 seconds press the **ON** or **OFF** pushbutton.\*
3. Repeat steps 1-2 to change the power status back on/off.

\*If the **ON** or **OFF** pushbutton is pressed *after* 2 seconds of pressing the Output port number, all the displays are powered on or off instead of just the intended Output port.

## **Power on/off all Output displays**

To power on/off all Output displays simultaneously, with the remote control, do the following:

1. Press the **ON** or **OFF** pushbutton.\*
2. Repeat step 1 to simultaneously change back the power status of all Output ports, to on or off, respectively.

\*The **ON** or **OFF** pushbuttons bring all displays to the same power status, regardless of the individual power statuses.

This Page Intentionally Left Blank

# Chapter 4

## Browser Operation

### Overview


---

The VM5404H / VM5808H can be configured over a standard TCP/IP connection via its built-in Graphical User Interface (GUI). Because it can be accessed from anywhere over a network or the Internet, operators can easily log in via web browser. Security is ensured by password protection and user-configurable time-out. The VM5404H / VM5808H supports three levels of remote users with various privileges, and up to 32 users can log into the GUI at one time. For full details, see the sections that follow.

### Logging In

---

To access the GUI, type the VM5404H / VM5808H's IP address into the address bar of any browser. If a Security Alert dialog box appears, accept the certificate – it can be trusted. The login screen appears:

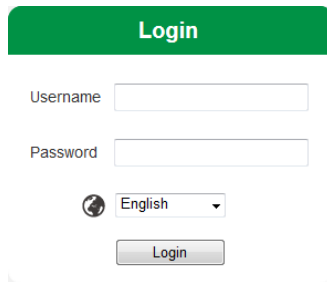

The screenshot shows a web-based login interface. At the top is a green bar with the word "Login" in white. Below this are two white input fields: "Username" and "Password". Under the "Password" field is a language selection dropdown menu with a globe icon and the text "English". At the bottom is a grey "Login" button.

- ◆ The default IP address is **http://192.168.0.60**
- ◆ The default Username and Password are: **administrator / password**
- ◆ Enter the username and password, then click **Login**.
- ◆ The same user can not be logged in simultaneously.
- ◆ Use the drop-down menu to select the GUI language


---

**Note:** The username supports lower case letters only.

---

## Main Page

The Main Page opens to the **Profile List**. This is where you configure the input to output connections by creating profiles. The page is divided into three parts: the *Menu Bar*, *Profile List*, and *Profile Scheduling*.

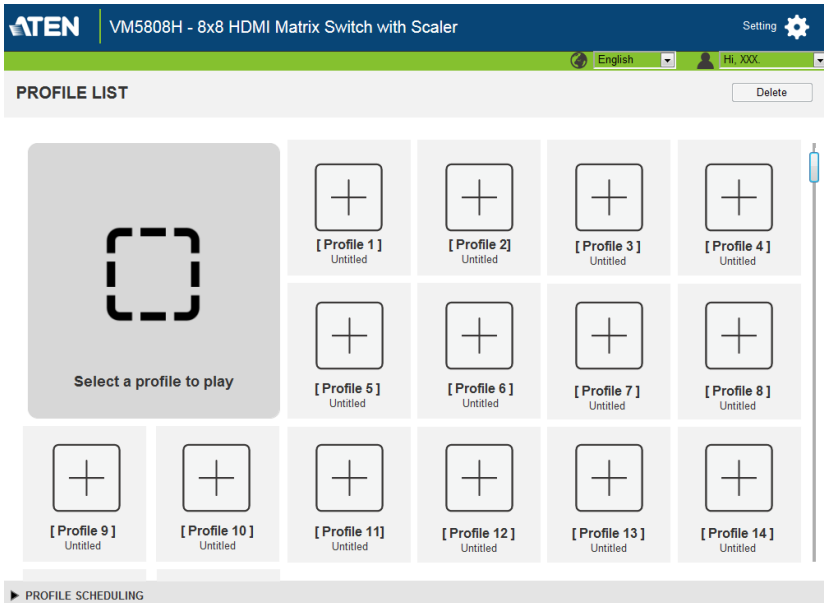

### Menu Bar


The Menu Bar consists of the *Settings* icon and two drop-down menus.



- ◆ Click **Settings** to enter the System Settings (see page 52).
- ◆ Click the **User** menu to select *Logout* or *User Management* (see page 67).
- ◆ Click the **Language** menu to select the GUI language .

## Profile List

The *Profile List* lets you configure the input to output port connections by creating profiles to use. You can store up to 8 (VM5404H) or 16 (VM5808H) differently configured profiles that can be saved and played by two methods: locally via the unit's front panel pushbuttons and via the web GUI.

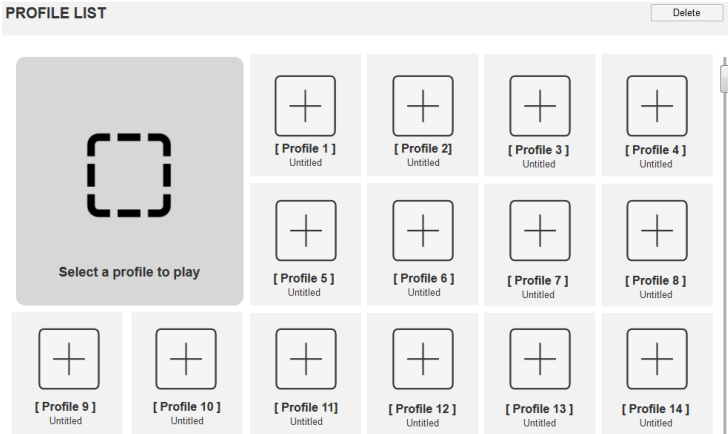


### Adding/Playing a Profile

To configure a connection profile:

1. From the Profile List, click a **[Profile]**.
2. Select the profile type:



Digital Signage

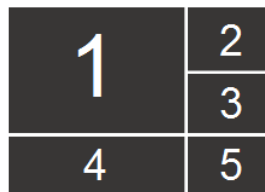


Video Wall


**Digital Signage:** Select this option for video that is displayed independently on separate monitors (page 42).

**Video Wall:** Select this option for monitors that are displayed together - tiled or as a large screen (page 45).

- Configure the input to output connections for a Digital Signage (**page 42**) or Video Wall (**page 45**) profile.
- New profiles appear in the *Profile List*, as shown here:

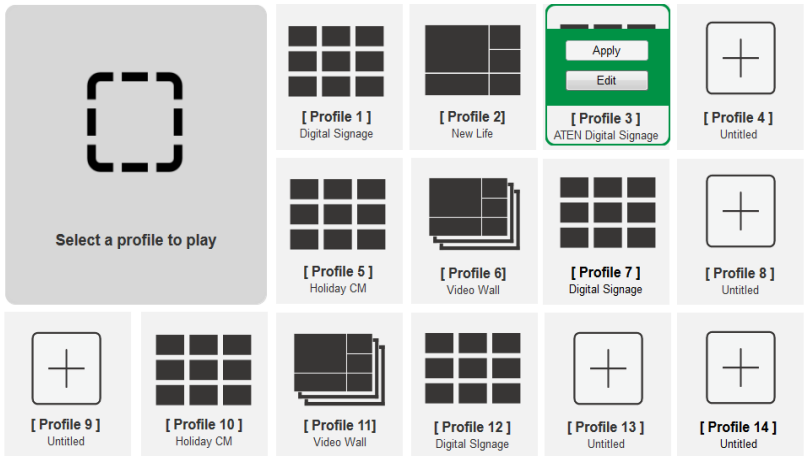

- Select the profile and click **Apply**.
- The profile appears in the large **Play** window and the connections start:

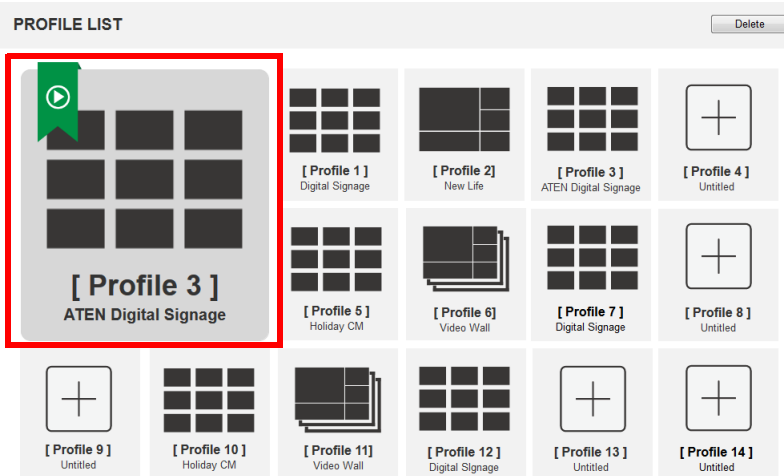


**Note:** More information about Profile List page options are provided on the next page.



## Profile List Options


Clicking a *Profile* or the *Play* window opens a pop-up menu with options.

### Profile

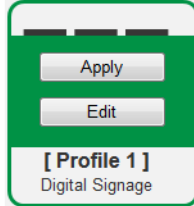

Option	Description
Apply	Click <b>Apply</b> to put the profile in the Play window. This allows you to start the profile connections.
Edit	Click <b>Edit</b> to configure the profile's input to output connections.

### Play Window

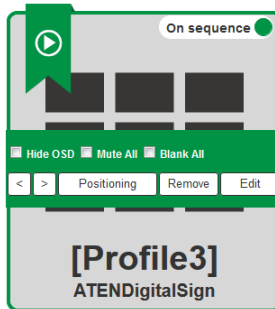





Option	Description
Hide OSD	Check <b>Hide OSD</b> to show/hide text updates that appear on the display when configuration or port changes are made.
Mute All	Check <b>Mute All</b> to mute the audio for all ports.
Blank All	Check <b>Blank All</b> to turn off the video to all displays.
On Sequence	<b>On Sequence</b> will appear when a profile schedule is playing (see page 41).
<	Click < to go back to the previous profile in the sequence, when Profile Scheduling is in use. Only available with <i>On Sequence</i> .
>	Click > to advance to the next profile in the sequence, when Profile Scheduling is in use. Only available with <i>On Sequence</i> .

Option	Description
Positioning	Click <b>Positioning</b> to open a window that allows you to adjust the image position on each display. For Video Wall profiles you can also set the Bezel Dimension, which is the line size between each display.
Remove	Removes the profile from the Play window.
Edit	Click <b>Edit</b> to configure the profile's input to output connections.

## Profile Scheduling

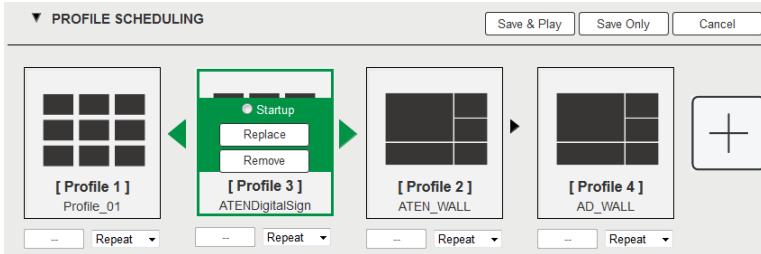 
*Profile Scheduling* is located below the Profile List. Scheduling allows you to queue and play connection profiles in sequence for a specific amount of time.



Option	Description
	Click to add profiles to the schedule in the order to be played, left to right, then set the amount of time each profile plays.
	Click a profile for a pop-up menu to appear: <ul style="list-style-type: none"> <li>◆ Select <b>Startup</b> to use the profile as the starting point for the schedule.</li> <li>◆ Click <b>Replace</b> to replace the selected profile with another profile.</li> <li>◆ Click <b>Remove</b> to delete the profile from the schedule.</li> <li>◆ Use &lt; &gt; to change the profile's position in the schedule.</li> </ul>
	Use the drop-down menu to select the duration (Hours, Minutes, or Seconds) and enter the amount of time for the profile to play. After the time expires the schedule switches to the next profile.  Use <b>Repeat</b> to stop the schedule and stay on that profile. If repeat isn't used the schedule will loop back to the first profile.
Save & Play	Click <b>Save &amp; Play</b> to save the schedule and put it in the Play window to start the connections schedule. After saving, the Profile Scheduling window will close and the schedule will start.
Save Only	Click <b>Save Only</b> to save the schedule as it appears. After saving, the Profile Scheduling window will close.  When a Profile Schedule is playing the <i>On Sequence</i> box will appear in the Play window.
Cancel	Click <b>Cancel</b> to discard changes and return to the Profile Schedule page.

## Connection Profiles

There are two types of profiles: *Digital Signage* and *Video Wall*. **Digital Signage** profiles are for displays where video is viewed on separate monitors. **Video Wall** profiles are for displays that are tiled together, where multiple monitors form one large screen – in various arrangements.

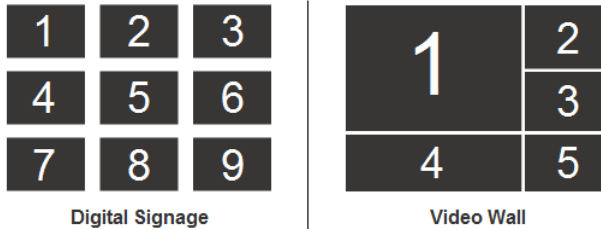

### Digital Signage Profile



Each icon represents an output port and the connected display. The large number is the **Input** port selected for the display. The small number (upper-left corner) is the **Output** port for the display. Click the icons to select options.

The screenshot shows the configuration interface for a Digital Signage profile. At the top, it says 'profile 5 | Profile\_05'. Below that, there are tabs for 'General', 'Output Option', 'OSD', 'Screen', and 'Audio'. The 'OSD' tab is selected. On the left, there is a 'Select Source' menu with 'Output: 1' and 'Video Input: 1'. Below the menu are three radio buttons: 'Fit Width of Output(s)' (selected), 'Fit Height of Output(s)', and 'Scale to Whole Output(s)'. On the right, there is a grid of 8 icons, each representing an output port (01-08). Each icon has a large number in the center and a small number in the top-left corner. The icons are labeled 'OSD:ON' and 'Screen'. The 'OSD' button is selected. The 'Traditional View' option is also visible.


- ◆ Select icons to choose the **Video Input** from the *Select Source* menu.
- ◆ Click the PEN icon or name to edit the profile name.
- ◆ Click **OSD** to select *Turn All On* or *Turn All Off*.
- ◆ Click **Screen** to select *Blank All* or *Show All*.
- ◆ Click **Audio** to select *Mute All* or *Turn All On*.
- ◆ Click **Save** to save the profile or **Save as** to save as a different profile number.
- ◆ Click *Traditional View* to use an alternate method for configuring connection profiles (see page 44).

## Output Icon



Option	Description
Output Icon	Click an Output icon(s) to highlight it in green and use the <i>Select Source</i> menu to set the video options (see <i>Select Source</i> below). The large number is the <b>Video Input</b> port selected for the display. The small number (upper-left corner) is the <b>Output</b> port of the display.
Mute / Video  	Click the <b>speaker</b> icon to mute the audio on/off. Click the <b>video</b> icon to turn the video off/on.
OSD: ON / OFF	Click <b>OSD:ON</b> / <b>OSD:OFF</b> to show/hide text updates that appear on the display when configuration or port changes are made.


## Select Source

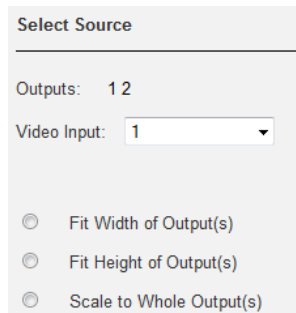

Option	Description
Select Source	The Select Source menu appears when you click an <b>Output</b> icon.
Outputs	Displays the Outputs that are selected for the configuration change.
Input	Use the drop-down menu to select the <b>Video Input</b> . Click <b>Save</b> or <b>Save as</b> to save the changes.
Radio Button	<ul style="list-style-type: none"> <li>◆ <b>Fit Width of Output(s)</b>: fits the video to the width of the display.</li> <li>◆ <b>Fit Height of Output(s)</b>: fits the video to the height of the display.</li> <li>◆ <b>Scale to Whole Output(s)</b>: fits the video on the entire display.</li> </ul>

## Traditional View

The Traditional View allows you to select the **Input** to **Output** connections using a simple grid.

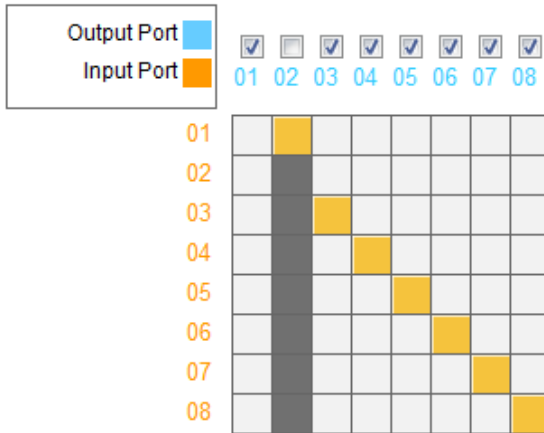


- ◆ From an *Output Port* column, click a box to select its **Input Port**. The box will turn orange.
- ◆ **Uncheck** an *Output Port* box to disable the video for that Output Port. The column will turn dark grey.
- ◆ **Check** an *Output Port* box to enable the video for that Output Port.
- ◆ Click **Save** to save the profile. Click **Save as** to save as a different profile number.

## Output Options

For instructions on the *Output Options*, see *Output Options*, page 50.

## Video Wall Profile

Each blank icon represents an Output port and the connected display. Use the icons to create Independent and Grouped Outputs. **Independent** Outputs will display video on a single monitor. **Grouped** Outputs will display video across multiple monitors as one large screen.

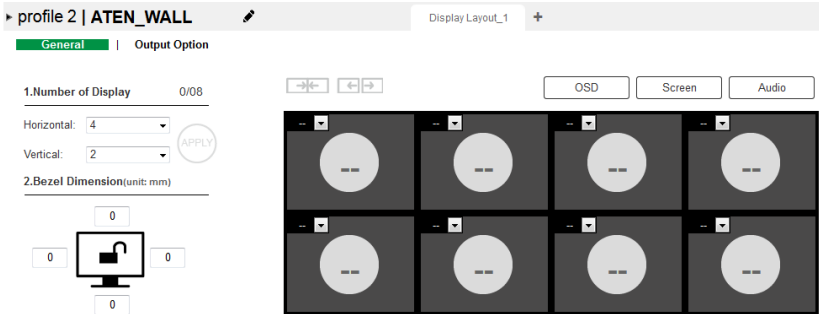

## Video Wall Options

- ◆ Click an icon to choose its **Output** and **Video Input** from the *Display Preference* menu (see page 47).
- ◆ Click multiple icons to Group Outputs (see *Grouping*, page 47) and choose the **Video Input** from the *Display Preference* menu.
- ◆ Use + next to **Display Layout \_1** to create additional layouts under the same profile.
- ◆ Click the PEN icon or name to edit the profile name.
- ◆ Click **OSD** to select *Turn All On* or *Turn All Off*.
- ◆ Click **Screen** to select *Blank All* or *Show All*.
- ◆ Click **Audio** to select *Mute All* or *Turn All On*.
- ◆ Click **Save** to save the profile or **Save as** to save as a different profile number.

## Number of Displays / Bezel Dimension

1.Number of Display 0/08


---



Horizontal:

Vertical:

2.Bezel Dimension(unit: mm)

---



Option	Description
Number of Displays	Use the <i>Horizontal</i> and <i>Vertical</i> drop-down menu to select the number of displays that make up the video wall. Match this to the physical layout of the displays. Click <b>Apply</b> to set the layout.
Bezel Dimension	Use the four boxes to increase/decrease the line size (gap) between the active displays.
Monitor Lock / Unlock  	Click the monitor icon to <b>Lock</b> the (4) bezel settings, so that when one size is changed they all change. Click the monitor icon to <b>Unlock</b> the (4) bezel settings, so that each size can be set independently.

## Blank Output



Option	Description
Blank Icon	Click Blank Output icons to highlight icons in green and use the Display Preferences menu to set the video options (see <i>Display Preferences</i> , page 48). Select a <b>single</b> icon to set the <b>Output</b> and <b>Video Input</b> for an independent display (see <i>Independent Output</i> , page 47). Select <b>multiple</b> icons and set the <b>Video Input</b> to group displays as one screen (see <i>Grouping</i> , page 47). <i>You must first set the Output port for each icon.</i>
Drop-down Menu	Use the drop-down menu to select the Output port.



## Independent Output




Option	Description
Independent Output	<p>Independent Outputs are displays that have their own <b>Video Input</b> and <b>Output</b> selected. Independent Outputs:</p> <ul style="list-style-type: none"> <li>◆ Display their own video</li> <li>◆ Icons have their own color and Video Input</li> </ul> <p>Select an Independent Output and use the <i>Display Preferences</i> (page 48) menu select the <b>Video Input</b>.</p>
Drop-down Menu	Use the drop-down menu to select the Output port.
Mute / Video	<p>Click the <b>speaker</b> icon to mute the audio on/off.</p> <p>Click the <b>video</b> icon to turn the video off/on.</p>
OSD: ON / OFF	Click <b>OSD:ON</b> / <b>OSD:OFF</b> to show/hide text updates that appear on the display when configuration or port changes are made.


## Grouping




Option	Description
Grouping	<p>Click multiple icons to Group Outputs (highlighted in green) and click → ← to group the displays into one screen*. Use the <b>Display Preferences</b> menu to select the <b>Video Input</b> for the group - each Output icon in the Group will appear with the same Video Input number and icon color (see <i>Group</i>, page 48).</p> <p><b>Note:</b> Before grouping you must set the Output port for each icon.</p>
Ungroup	Select a group and click ← → to ungroup the displays.

## Group

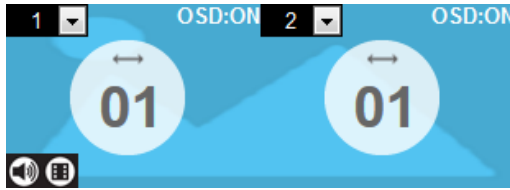

Option	Description
Group	<p>A <b>Group</b> (of Outputs) shares the same <b>Video Input</b> and displays the video together as one large screen. A Group of Outputs:</p> <ul style="list-style-type: none"> <li>◆ Displays video across multiple monitors to form one screen</li> <li>◆ Icons have the same color and Video Input number.</li> <li>◆ Select a Group and use the <i>Display Preferences</i> menu to select the <b>Video Input</b>.</li> <li>◆ To group outputs see <i>Grouping</i>, page 47.</li> </ul>
Mute / Video 	<p>Click the <b>speaker</b> icon to mute the audio on/off. Click the <b>video</b> icon to turn the video off/on.</p>
OSD:ON / OFF	Click <b>OSD:ON / OSD:OFF</b> to show/hide text updates that appear on the display when configuration or port changes are made.

## Display Preferences

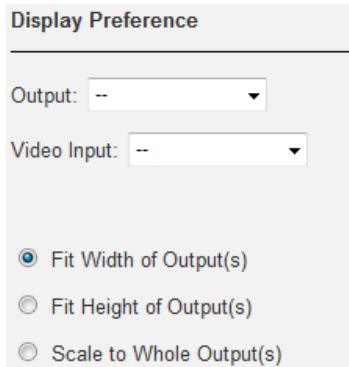

Option	Description
Display Preferences	Click Output icons for the Display Preferences menu to appear– to select the <b>Output</b> and/or <b>Video Input</b> port.

Option	Description
Output	Use the drop-down menu to select the <b>Output</b> port (Independent and single Blank icons only). If you select multiple displays the output ports selected will appear here. You can use the output icon's drop-down menu to change the output port for the display.
Video Input	Use the drop-down menu to select the <b>Video Input</b> port.
Radio Button	<ul style="list-style-type: none"> <li>◆ <b>Fit Width of Output(s)</b>: fits the video to the width of the display.</li> <li>◆ <b>Fit Height of Output(s)</b>: fits the video to the height of the display.</li> <li>◆ <b>Scale to Whole Output(s)</b>: fits the video on the entire display.</li> </ul>

### Video Wall Example

The example below shows a video wall with 8 displays.



- ◆ Each Group and Independent Output has a unique color.
- ◆ This video wall has 1 **Group** and 4 **Independent** displays.
- ◆ The Group will show **Video Input 02** across all four displays as one large screen.
- ◆ The Independent displays will show the video from their own **Video Input** – 03, 04, 05, and 06.
- ◆ Add Display Layouts to create separate video walls (see *Video Wall Options*, page 45).

## Output Options

The *Output Options* page is used to configure HDMI Video and OSD/CEC options.

### HDMI Video Options

*HDMI Video Options* allow you to set Seamless Switch options which determine how a display performs when the input port is changed.

Port	*Seamless Switch	Transition	Period	Scale Resolution
	Apply to All	Apply to All	Apply to All	Apply to All
Port1	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port2	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port3	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port4	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port5	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port6	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port7	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)
Port8	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF	Normal	1280x720@60Hz(720)

\*Seamless switch can not be turned off at video wall editor.

- ◆ The *Transition*, *Period* and *Scale Resolution* apply only when Seamless Switching is on.
- ◆ **Seamless Switch:** Turning *Seamless Switch* on removes the video distortion and delay seen when an input port is switched.
  - ◆ Use the drop-down menu to apply to all ports, or the ON/OFF button to enable/disable Seamless Switching per port.
- ◆ **Transition:** Allows you to fade the video display when the input port is changed. Use the period option to set the fade speed.
  - ◆ Use the drop-down menu to apply to all ports, or ON/OFF button to enable/disable Transitions per port.
- ◆ **Period:** Sets the fade speed for the Transition option.
  - ◆ Use the drop-down menu to apply an option (*Slow*, *Normal*, or *Fast*) to all ports, or lower drop-down menus to apply options per port.
- ◆ **Scale Resolution:** Forces the port to scale the video displayed to the selected resolution.

- ◆ Use the top drop-down menu to apply an option to all ports, or lower drop-down menus to apply options per port.
- ◆ Click **Save** to save the settings. Click **Save as** to save the settings as a different profile number.

## Other Options

This section allows you to set the OSD and CEC options.

Port	OSD	CEC
	Apply to All ▾	Apply to All ▾
Port1	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port2	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port3	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port4	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port5	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port6	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port7	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF
Port8	<input checked="" type="checkbox"/> ON	<input type="checkbox"/> OFF

- ◆ **OSD**: Sets the default OSD option for the port. When OSD is on: real-time text updates appear on the display when configuration and port changes are made to the output.
  - ◆ Use the drop-down menu to apply options to all ports, or ON/OFF button to enable/disable the OSD for a port.
- ◆ **CEC**: Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to one remote control.
  - ◆ Use the drop-down menu to apply options to all ports, or On/Off button to enable/disable CEC for a port.
- ◆ Click **Save** to save the settings. Click **Save as** to save the settings as a different profile number.

## System Settings

Click the *Settings* link from the Main page for the System Settings to open on the **General** page:


The screenshot shows the ATEN VM5808H - 8x8 HDMI Matrix Switch with Scaler web interface. The top navigation bar includes the ATEN logo, the device name, a 'Back to Profile List' link, the language 'English', and the user 'Hi. administrator'. Below this is a menu with tabs for 'System Settings', 'General', 'Port Name', 'Network', 'EDID', and 'Firmware'. The 'General' tab is active, displaying the 'Fan Status & Other' section. This section contains two fan speed indicators (I and O) with a 'Fan Speed' dropdown menu set to 'Low'. To the right, there is a 'Baudrate' dropdown menu set to '19200' and a checkbox for 'Fix HDCP' which is currently unchecked. At the bottom of the form are 'Save' and 'Reset' buttons.

- ◆ The *General* page allows you to set Fan, Baud Rate and HDCP settings.
- ◆ The *Port Name* page allows you to name each input and output port.
- ◆ The *Network* page allows configuration of the network settings.
- ◆ The *EDID* page is used to set the EDID modes.
- ◆ The *Firmware* page is for upgrading the device's firmware.
- ◆ Click **Back to Profile** to return to the Main page.

## General

The *General* page has three settings: Fan Status, Baud Rate and Fix HDCP.

Fan Status & Other

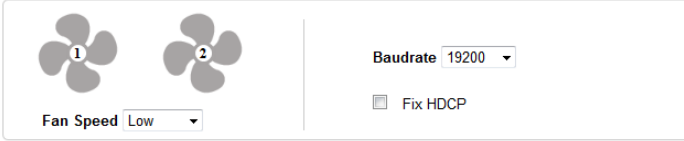

The screenshot shows a settings panel titled "Fan Status & Other". On the left, there are two fan icons labeled "1" and "2". Below icon "1" is a "Fan Speed" dropdown menu currently set to "Low". On the right side of the panel, there is a "Baudrate" dropdown menu set to "19200" and a checkbox labeled "Fix HDCP" which is currently unchecked.

### Fan Status & Other

- ◆ Use the drop-down menu to set the **Fan Speed**: High, Medium, or Low.
- ◆ Use the **Baud Rate** drop-down menu to select a serial port setting.
- ◆ Check **Fix HDCP** to fix the time delay when switching between HDCP and non-HDCP enabled devices. This setting improves Seamless Switching with HDCP enabled.

## Port Name

The *Port Name* page lets you name the input and output ports for easy identification.

The screenshot displays two side-by-side panels. The left panel is titled "Output Port" and contains eight rows, each with a port label (Port1 to Port8) and a text input field containing a default name (e.g., "01\_Port\_Out\_1"). The right panel is titled "Input Port" and also contains eight rows with similar port labels and default names (e.g., "01\_Port\_In\_1"). Below these panels are two buttons: "Save" and "Reset".

- ◆ To name an Input/Output port, enter a descriptive name of up to 16 multi-language characters (excluding ;,=,[]+=/?\|) in the corresponding field and click **Save**.
- ◆ Language characters available include: English, Simplified Chinese, Traditional Chinese, Korean, Japanese, German, Russian, French, Spanish, Portuguese, and Italian.
- ◆ To change an Input/Output port's name, enter another value and click **Save**.
- ◆ Input and Output port names can be the same.
- ◆ Click **Reset** to clear all stored names and restore the original names.

---

**Note:** The VM5404H will only have four Output Port and four Input Port fields to name.

---



## Network

The *Network* page lets you configure the IP settings, website timeout, and Telnet settings for connecting to the VM5404H / VM5808H.

DHCP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IP Address	<input type="text"/>
Subnet Mask	<input type="text"/>
Default Gateway	<input type="text"/>
Website Timeout	5 min ▾
MAC Address	00:10:74:AD:11:22
Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

**Enable** DHCP to allow the DHCP server to assign an IP address to the VM5404H / VM5808H. Select **Disable** to enter your own static IP address settings for the device.

Click **Reset** to use the following default values:

- ◆ IP Address – 192.168.0.60
- ◆ Subnet Mask – 255.255.255.0
- ◆ Default Gateway – 192.168.0.1
- ◆ Website Timeout\* – 5 minutes
- ◆ Telnet Enabled

Enter the values, then click **Save**. Changes may take a few seconds and after refreshing the page automatically redirects you to the IP address specified.

---

\* This option controls how long an inactive web connection stays logged into the VM5404H / VM5808H. Use N/A to disable to option. Any changes will take effect immediately.

---

## EDID

The *EDID Setting* page lets users view and select an EDID Mode so that the VM5404H / VM5808H can use the best resolution for its display(s).

EDID Mode	EDID & CEA Description	
<input checked="" type="radio"/> ATEN Default <input type="radio"/> Port1 Mode <input type="radio"/> Remix <input type="radio"/> Customized <input type="button" value="Apply"/>	<b>EDID</b> 1. Vendor/Product Identification 2. EDID Structure/Revision 3. Basic Display/Feature 4. Color Characteristics 5. Established Timings 6. Standard Timings 7. Detail Timing/Display Description 1 8. Detail Timing/Display Description 2 9. Monitor Description 10. Monitor Description	Model ID: 0x7801 Manufacturer ID: CMO Serial Number: 0x00000000 Manufacture Date: 2005 Week 13 Week of Manufacture: 13 Year of Manufacture: 2005
<b>Port EDID Status</b> Port 1 ATEN Default Port 2 ATEN Default Port 3 ATEN Default Port 4 ATEN Default Port 5 ATEN Default Port 6 ATEN Default Port 7 ATEN Default Port 8 ATEN Default	<b>CEA</b> 1. Display Support 2. Video Data 3. Audio Data 4. Speaker Allocation 5. Vendor Specific Data 6. Detail Timing/Display Description 1 7. Detail Timing/Display Description 2 6. Detail Timing/Display Description 3 7. Detail Timing/Display Description 4 6. Detail Timing/Display Description 5	

**Note:** The EDID Mode can also be selected via the Front Panel pushbuttons – see *EDID Mode*, page 24.

Extended Display Identification Data (EDID) is a data format that contains a display's basic information and is used to communicate with the video source/system.

## EDID Mode

In the left panel of the page, users can select a pre-configured EDID Mode using the **EDID Mode** radio buttons.

**EDID Mode**

ATEN Default

Port1 Mode

Remix

Customized

---

Port EDID Status

Port 1 ATEN Default

Port 2 ATEN Default

Port 3 ATEN Default

Port 4 ATEN Default

Port 5 ATEN Default

Port 6 ATEN Default

Port 7 ATEN Default

Port 8 ATEN Default

**EDID & CEA Description**

**EDID**

1. Vendor/Product Identification
2. EDID Structure/Revision
3. Basic Display/Feature
4. Color Characteristics
5. Established Timings
6. Standard Timings
7. Detail Timing/Display Description 1
8. Detail Timing/Display Description 2
9. Monitor Description
10. Monitor Description

**CEA**

1. Display Support
2. Video Data
3. Audio Data
4. Speaker Allocation
5. Vendor Specific Data
6. Detail Timing/Display Description 1
7. Detail Timing/Display Description 2
6. Detail Timing/Display Description 3
7. Detail Timing/Display Description 4
6. Detail Timing/Display Description 5

Model ID: 0x7801

Manufacturer ID: CMO

Serial Number: 0x00000000

Manufacture Date: 2005 Week 13

Week of Manufacture: 13

Year of Manufacture: 2005


Select the EDID Mode to use and click **Apply**. The VM5404H / VM5808H uses the settings configured for that EDID mode.

Options are:

- ◆ **ATEN Default:** All ports' EDID are the same as the hardware default EDID.
- ◆ **Port 1 Mode:** All ports' EDID are the same as Port 1's EDID.
- ◆ **Remix:** All ports' EDID use the best display resolution.
- ◆ **Customized:** See Customized Mode, see page 60.

## Customized Mode

Use the *Customized* Mode to automatically retrieve and save the EDID settings of a connected monitor/display device to an input source port.

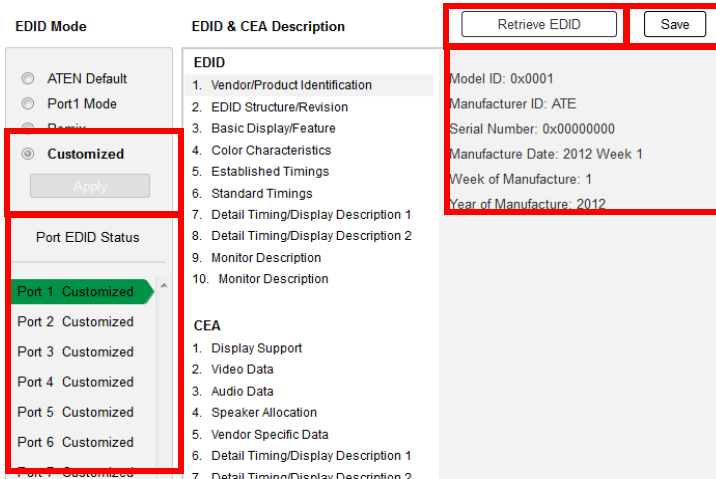

- ◆ In the left-most panel of the page, select **Customized** from the *EDID Mode* section and click **Apply**.
- ◆ **Port EDID Status**: Select which input source port you want to store the EDID configuration (01–08).
- ◆ **Retrieve EDID**: Click and a pop-up window appears to retrieve the EDID settings of a stored EDID configuration: *Customized EDID 01-08*, or *ATEN Default*. Select the port to retrieve:

### Caution

Select a port to retrieve.

- ◆ The right panel displays a summary of the acquired EDID settings that you can edit. Click **Save** and select the configuration for the **Current** or **All Ports** for the duration of the session.

### Save

Save changes to the current port or all ports?

## EDID & CEA Description

The right panel of the screen lets users view the configuration of the *EDID* and *CEA* Modes selected:

**EDID Mode**

ATEN Default  
 Port1 Mode  
 Remix  
 Customized

**Apply**

**Port EDID Status**

Port	EDID Status
Port 1	ATEN Default
Port 2	ATEN Default
Port 3	ATEN Default
Port 4	ATEN Default
Port 5	ATEN Default
Port 6	ATEN Default
Port 7	ATEN Default
Port 8	ATEN Default

**EDID & CEA Description**

**EDID**

1. Vendor/Product Identification
2. EDID Structure/Revision
3. Basic Display/Feature
4. Color Characteristics
5. Established Timings
6. Standard Timings
7. Detail Timing/Display Description 1
8. Detail Timing/Display Description 2
9. Monitor Description
10. Monitor Description

**CEA**

1. Display Support
2. Video Data
3. Audio Data
4. Speaker Allocation
5. Vendor Specific Data
6. Detail Timing/Display Description 1
7. Detail Timing/Display Description 2
6. Detail Timing/Display Description 3
7. Detail Timing/Display Description 4
6. Detail Timing/Display Description 5

Model ID: 0x7801  
 Manufacturer ID: CMO  
 Serial Number: 0x00000000  
 Manufacture Date: 2005 Week 13  
 Week of Manufacture: 13  
 Year of Manufacture: 2005

- ◆ From the left column, click the option that you want to view and/or edit. There are two categories: **EDID** (Extended Display Identification Data) and **CEA** (Consumer Electronics Association).
- ◆ When you highlight the menu items on the left column, the right column displays the current settings for the corresponding EDID configuration. Some of the screens are read-only.
- ◆ See *Customized EDID Settings*, page 60 for more information on these two columns.

## Customized EDID Settings

The EDID structure is comprised of 128 bytes in total – each heading shown in the left column corresponds to a specific number of bytes.

The pages for the pre-configured EDID Modes (Port 1, Default and Remix) cannot be edited. The pages for the Customized EDID, which can be edited, are discussed in the proceeding sections:

## Established Timings

This page lists video resolutions/timings that display devices can support.

The screenshot shows the EDID configuration interface. On the left, under 'EDID Mode', 'Customized' is selected. The 'EDID & CEA Description' section is visible, with 'Established Timings' selected. A red box highlights the following list of video resolutions and their selection status:

<input type="checkbox"/>	720x400 @ 70Hz
<input type="checkbox"/>	720x400 @ 88Hz
<input checked="" type="checkbox"/>	640x480 @ 60Hz
<input type="checkbox"/>	640x480 @ 67Hz
<input checked="" type="checkbox"/>	640x480 @ 72Hz
<input checked="" type="checkbox"/>	640x480 @ 75Hz
<input checked="" type="checkbox"/>	800x600 @ 56Hz
<input checked="" type="checkbox"/>	800x600 @ 60Hz
<input checked="" type="checkbox"/>	800x600 @ 72Hz
<input checked="" type="checkbox"/>	800x600 @ 75Hz
<input type="checkbox"/>	832x624 @ 75Hz (Apple Macintosh II)
<input type="checkbox"/>	1024x768 @ 87Hz, interlaced(1024*768)
<input checked="" type="checkbox"/>	1024x768 @ 60Hz
<input checked="" type="checkbox"/>	1024x768 @ 70Hz
<input checked="" type="checkbox"/>	1024x768 @ 75Hz
<input checked="" type="checkbox"/>	1280x1024 @ 75Hz
<input type="checkbox"/>	1152x870 @ 75Hz(Apple Macintosh II)

Buttons for 'Clear' and 'Select All' are located at the bottom of the list.

- ◆ Select the resolution(s) you want to use for the attached monitor/display device.
- ◆ Click **Clear** to deselect all the items.
- ◆ Click **Select All** to check all the items.
- ◆ Click **Save** to apply the changes.

## Standard Timings

This page shows eight resolutions/timings that display devices can support in addition to those listed in the Established Timings page.

EDID Mode:  ATEN Default  Port1 Mode  Remix  Customized

Apply

Port EDID Status

Port 1 Customized

Port 2 Customized

Port 3 Customized

Port 4 Customized

Port 5 Customized

Port 6 Customized

Port 7 Customized

Port 8 Customized

EDID & CEA Description

Retrieve EDID Save

EDID

- Vendor/Product Identification
- EDID Structure/Revision
- Basic Display/Feature
- Color Characteristics
- Established Timings
- Standard Timings
- Detail Timing/Display Description 1
- Detail Timing/Display Description 2
- Monitor Description
- Monitor Description

H Active Pixel	V Active Pixel	R Refresh Rate	Aspect Ratio
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10
H 256	V 160	R 61	16:10

CEA

- Display Support
- Video Data
- Audio Data
- Speaker Allocation
- Vendor Specific Data
- Detail Timing/Display Description 1
- Detail Timing/Display Description 2
- Detail Timing/Display Description 3
- Detail Timing/Display Description 4
- Detail Timing/Display Description 5

- ◆ Select the *H Active Pixel* from the drop-down menu.
- ◆ Select the *Aspect Ratio* from the drop-down menu.
- ◆ Click **Save** to apply the changes.

## Detail Timing / Display Description

This screen gives more video resolution options, and provides resolution/timing details.

EDID Mode:  ATEN Default  Port1 Mode  Remix  Customized

Apply

Port EDID Status

Port 1 Customized

Port 2 Customized

Port 3 Customized

Port 4 Customized

Port 5 Customized

Port 6 Customized

Port 7 Customized

Port 8 Customized

EDID & CEA Description

Retrieve EDID Save

EDID

- Vendor/Product Identification
- EDID Structure/Revision
- Basic Display/Feature
- Color Characteristics
- Established Timings
- Standard Timings
- Detail Timing/Display Description 1
- Detail Timing/Display Description 2
- Monitor Description
- Monitor Description

Resolution:

Pixel Clock (Hz): 74.25

Stereo Display  
Interlaced: Non-Interlaced  
Stereo Mode: none  
Sync type: Digital Separate  
Positive Vsync Polarity: yes  
Positive Hsync Polarity: yes

Resolution Detail

	Horizontal	Vertical
Image Size:	mm	mm
Active PTL:	pixel	lines
Blanking Time:	pixel	lines
Sync Offset:	pixel	lines
Sync Width:	pixel	lines
Border:	pixel	lines

CEA

- Display Support
- Video Data
- Audio Data
- Speaker Allocation
- Vendor Specific Data
- Detail Timing/Display Description 1
- Detail Timing/Display Description 2
- Detail Timing/Display Description 3
- Detail Timing/Display Description 4
- Detail Timing/Display Description 5

In the drop down menu, choose a resolution with values that fit the attached monitor/display device and click **Save**.

## Monitor Description

This screen lets you specify the viewing specifications, namely horizontal and vertical scan ranges and pixel clock rate, of your monitor/display device.

**EDID Mode**

ATEN Default

Port1 Mode

Remix

**Customized**

Port EDID Status

Port 1 Customized

Port 2 Customized

Port 3 Customized

Port 4 Customized

Port 5 Customized

Port 6 Customized

Port 7 Customized

Port 8 Customized

**EDID & CEA Description**

**EDID**

1. Vendor/Product Identification
2. EDID Structure/Revision
3. Basic Display/Feature
4. Color Characteristics
5. Established Timings
6. Standard Timings
7. Detail Timing/Display Description 1
8. Detail Timing/Display Description 2
9. Monitor Description
10. Monitor Description

**CEA**

1. Display Support
2. Video Data
3. Audio Data
4. Speaker Allocation
5. Vendor Specific Data
6. Detail Timing/Display Description 1
7. Detail Timing/Display Description 2
8. Detail Timing/Display Description 3
9. Detail Timing/Display Description 4
10. Detail Timing/Display Description 5

	Minutes	~	Max
Horizontal Scan Range:	15	~	102
Vertical Scan Range:	23	~	121
Pixel Clock Rate: (MHz)	80		(10~2550)

Enter the values that correspond to your device and click **Save** to apply the changes.



## CEA Settings

CEA is an extension data of the EDID structure, which further extends the standard definitions of EDID to support advanced features of monitors/display devices.

## Display Support

This screen describes the display's basic digital components.

The screenshot shows a web interface for configuring EDID and CEA settings. On the left, there is a sidebar for 'EDID Mode' with radio buttons for 'ATEN Default', 'Port1 Mode', 'Remix', and 'Customized' (selected). Below this is an 'Apply' button and a 'Port EDID Status' section with a list of ports from 1 to 8, each with a 'Customized' label. 'Port 1 Customized' is highlighted with a green arrow. The main area is titled 'EDID & CEA Description' and contains a 'Retrieve EDID' button and a 'Save' button. The 'EDID' section lists 10 items, with 'Basic Display/Feature' selected. The 'Basic Audio' section is highlighted with a red box and contains two checked options: 'YCbCr444' and 'YCbCr422'. The 'CEA' section lists 10 items, with 'Display Support' selected.

EDID Mode	EDID & CEA Description
<input type="radio"/> ATEN Default	<b>EDID</b>
<input type="radio"/> Port1 Mode	1. Vendor/Product Identification
<input type="radio"/> Remix	2. EDID Structure/Revision
<input checked="" type="radio"/> Customized	3. Basic Display/Feature
Apply	4. Color Characteristics
Port EDID Status	5. Established Timings
Port 1 Customized	6. Standard Timings
Port 2 Customized	7. Detail Timing/Display Description 1
Port 3 Customized	8. Detail Timing/Display Description 2
Port 4 Customized	9. Monitor Description
Port 5 Customized	10. Monitor Description
Port 6 Customized	<b>CEA</b>
Port 7 Customized	1. Display Support
Port 8 Customized	2. Video Data
	3. Audio Data
	4. Speaker Allocation
	5. Vendor Specific Data
	6. Detail Timing/Display Description 1
	7. Detail Timing/Display Description 2
	8. Detail Timing/Display Description 3
	9. Detail Timing/Display Description 4
	10. Detail Timing/Display Description 5

Select the YCbCr mode applicable to your display and click **Save**.

## Video Data

This screen lists additional video resolution/timing displays that may be supported by other devices, other than PC monitors (for example, 1080i).

The screenshot shows the 'EDID & CEA Description' configuration window. On the left, 'EDID Mode' is set to 'Customized'. The main area is divided into 'EDID' and 'CEA' sections. The 'Resolution' list is highlighted with a red box, showing various resolutions and their selection status. The 'Native' resolution is set to '1280 x 720p @ 59.94/60Hz 16:9'.

Resolution	Selection
1280 x 720p @ 59.94/60Hz 16:9	Native (Selected)
640 x 480p @ 59.94/60Hz 4:3	<input checked="" type="checkbox"/>
720 x 480p @ 59.94/60Hz 4:3	<input checked="" type="checkbox"/>
720 x 480p @ 59.94/60Hz 16:9	<input checked="" type="checkbox"/>
1280 x 720p @ 59.94/60Hz 16:9	<input checked="" type="checkbox"/>
1920 x 1080i @ 59.94/60Hz 16:9	<input checked="" type="checkbox"/>
720(1440) x 480i @ 59.94/60Hz 4:3	<input type="checkbox"/>
720(1440) x 480i @ 59.94/60Hz 16:9	<input type="checkbox"/>
720(1440) x 240p @ 59.94/60Hz 4:3	<input type="checkbox"/>
720(1440) x 240p @ 59.94/60Hz 16:9	<input type="checkbox"/>
2880 x 480i @ 59.94/60Hz 4:3	<input type="checkbox"/>

- ◆ Select the native resolution of the attached display device.
- ◆ Select the resolutions that work with the attached monitor/display device.
- ◆ Click **Clear All** to deselect all the items.
- ◆ Click **Save** to apply the changes.

## Audio Data

This screen lets you select advanced audio configurations for your device.

The screenshot shows the 'Audio Data' configuration interface. On the left, there are radio buttons for 'ATEN Default', 'Port1 Mode', 'Remix', and 'Customized' (which is selected). Below these is an 'Apply' button and a 'Port EDID Status' section with a list of ports from Port 1 to Port 8, all marked as 'Customized'. The main area is titled 'EDID & CEA Description' and contains two lists: 'EDID' (10 items) and 'CEA' (10 items). On the right, there are 'Retrieve EDID' and 'Save' buttons. A red box highlights the 'Audio Format 1' dropdown menu, which currently shows 'Linear PCM 2-channel'. Below it are dropdown menus for 'Audio Format 2' through 'Audio Format 6'.

Use the drop down menu to select the **Audio Format** (1~6) applicable to your audio output device, and click **Save** to apply the changes.

## Detail Timing / Display Description

This screen gives more video resolution options, and provides resolution/timing details (in addition to those specified in the EDID structure).

The screenshot shows the 'Detail Timing / Display Description' configuration interface. It has a similar layout to the Audio Data screen, with 'ATEN Default', 'Port1 Mode', 'Remix', and 'Customized' (selected) radio buttons, an 'Apply' button, and a 'Port EDID Status' section. The 'EDID & CEA Description' section lists 10 items. On the right, there are 'Retrieve EDID' and 'Save' buttons. A red box highlights the 'Resolution' dropdown menu. Below it, the 'Pixel Clock(MHz): 148.50' is shown. The 'Stereo Display' section includes 'Interface: Non-interfaced', 'Stereo Mode: none', 'Sync type: Digital Separate', 'Positive Vsync Polarity: yes', and 'Positive Hsync Polarity: yes'. The 'Resolution Detail' section contains a table:

	Horizontal	Vertical
Image Size :	mm	mm
Active P/L :	pixel	lines
Blanking Time :	pixel	lines
Sync Offset :	pixel	lines
Sync Width :	pixel	lines
Border :	pixel	lines

In the **Resolution** drop down menu, choose a resolution with values that fit the attached monitor/display device and click **Save**.

## **Firmware**

The *Firmware* page lets users view information about the firmware version and upgrade it, if needed. This is an Administrator only function.

Device & Slot	Model Name	Firmware Version
Video Matrix	VM5808H	V1.1.109

To upgrade the VM5404H / VM5808H's firmware, do the following:

1. Use the **Browse...** button to locate the firmware upgrade file. Make sure you have the correct file saved on your PC.
2. Click **Upgrade** to start the upgrade.

## User Management

Selecting **User Management** from the drop-down menu on the main page opens the *User Management* page, which lets you add, edit, or delete users and change the password for accessing the VM5404H / VM5808H's GUI.

**Note:** This is an Administrator only function.



- ◆ **Add account**– Click the add button to add another user to the list. The VM5404H / VM5808H supports up to 32 users at one time (See page 68 for more details).
- ◆ **Edit** – Click a user's edit button to change the users information. This option allows an Administrator to rename the user, set the password, add a description, and set the user's permission level (See page 68 for more details).
- ◆ **Delete** – Click the user's Delete button to remove the user and all user information attached to the account. The Administrator account can not be deleted.
- ◆ The default username and password are: administrator/password.

## New / Edit User

Use the New / Edit User page to name a user, set the user's password, add a description, and set the user's permission level (see *Permission Level*, page 69) for accessing the VM5404H / VM5808H's GUI.

Username

Password

Confirm Password

Please enter 5-16 characters without "+@=[:];'&<>?\| space

Description

Permission Level

- Administrator Connections, Open/Save Profiles, Manage users
- Advance User Connections, Open/Save Profiles
- Basic User Connections, Open Profiles

- ◆ Fill in the username or edit an existing one.
- ◆ Enter a password and re-type the password to confirm.

---

**Note:** Usernames and passwords accept multi-language characters, and must be 5–16 alphanumeric characters (excluding ;:=[]+=/?\|). Passwords are case sensitive. Usernames only support lower case letters.

---

- ◆ Add or edit the description for the user.
- ◆ Select the permission level that you want to grant the user (see *Permission Level*, page 69).
- ◆ Click **Create User** to save the data.
- ◆ Click **Cancel** to discard the changes and exit.
- ◆ If a user is logged in to the VM5404H / VM5808H's GUI, their user settings cannot be edited, and the fields in this screen are grayed out.

## Permission Level

At the bottom of the New/Edit User page is the permission section, which is used to set a user's permission level.

Username

Password

Confirm Password

Please enter 5-16 characters without \*+/@=|:;","&<>?|\ space

Description

Permission Level  **Administrator** Connections, Open/Save Profiles, Manage users

**Advance User** Connections, Open/Save Profiles

**Basic User** Connections, Open Profiles

The three available permission levels are as follows:

- ◆ **Administrator** – this level provides full access and control of the VM5404H / VM5808H, in addition to full User Management privileges.
- ◆ **Advanced User** – this level provides full access and control with no User Management privileges.
- ◆ **Basic User** – this level only provides basic functions (connections, and open profiles).

## Telnet Operation

---

The VM5404H / VM5808H can be operated and configured via a remote terminal session using Telnet.

To log into the VM5404H / VM5808H by means of a Telnet session, do the following:

1. On your computer, open a terminal (command line) session.
2. At the prompt, key in the VM5404H / VM5808H's IP address in the following way:  

```
telnet [IP address]:23
```
3. Press **Enter**. The login screen appears. At the login prompt, provide your Username and Password.

---

**Note:** If a user logs on using a Username that is already in session, the newest login takes effect and the previous session is replaced.

---

## Configuration Menu

Once a Telnet connection to the VM5404H / VM5808H is established, the device's text-based Configuration Menu comes up, with the following items:

### 1. H – Call up the command list for help

Command list:

GT – Set gateway address

IM – Set IP subnet mask

IP – Set IP address

LO – Load connections from profile *nn*

PW – Change password

RI– Read what input is connected to *nn* output

RO – Read what output is connected to *nn* input

SB – Set the serial port baud rate

SS – Switch input to specified port

SV – Save the current connections into profile *nn*

TI – Set timeout



VR – Software version information

Ctrl-Q – Quit

## 2. GT – Set gateway address

GT

Old gateway address: 192.168.0.1

New gateway address:

## 3. IM – Set IP subnet mask

IM

Old IP subnet mask: 255.255.255.0

New IP subnet mask:

## 4. IP – Set IP address

IP

Old IP address: 192.168.0.60

New IP address:

## 5. LO – Load connections from profile

LO 01

Load profile 01 OK.

## 6. PW – Change password

PW

Old password: \*\*\*\*\*

New password:

## 7. RI – Read what input is connected to *nn* output

RI 01

Input port 02 04 08 is connected to output port 01

## 8. RO – Read what output is connected to *nn* input

RO 01

Output port 02 is connected to input port 01

## 9. SB – Set serial port baud rate

SB 96

Serial port baud rate is set to 9600

## 10. SS – Switch input to specified output

SS 01, 03

Switch input 01 to output 03 (00: Local Port)

## 11. SV – Save the current connections into a profile

SV 01

Save the current connections into profile 01

## 12. TI – Set timeout

TI 30

Set 30 minute timeout

## 13. VR – Software version information

VR

Software version 1.0.

---

**Note:** For further information about these functions, please reference the equivalent Browser GUI functions earlier in this chapter.

---

# Chapter 5

## RS-232 Commands

### Serial Control Protocol Commands

---

The VM5404H / VM5808H's built-in bi-directional RS-232 serial interface allows system control through a high-end controller or PC. The RS-232 commands for the VM5404H and VM5808H are the same, with the only difference being that the VM5808H has 4 additional ports.

### Configuring the Serial Port

The controller's serial port should be configured as follows:

Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

### Verification

After entering a command, a verification message appears at the end of the command line as follows:

- ◆ **Command OK** - indicates that the command is correct and successfully performed by the switch
- ◆ **Command incorrect** - indicates that the command has the wrong format and/or values.

## **Switch Port Command**

The Switch Port command allows you to switch ports on the VM5404H / VM5808H.

The formula for the Switch command is as follows:

**Command + Input + Number + Output + Number + Control + [Enter]**

1. For example, to switch input port 02 to output port 05, type:

**sw i02 o05 [Enter]**

2. To switch output port 04 to the next port, type:

**sw o04 + [Enter]**

3. To turn off video output on port 03, type:

**sw o03 off [Enter]**

The following tables show the possible values for the **Switch Port** command:

Command	Description
sw	Switch command

Input Command	Description
i	Input command

Port number	Description
xx	01-08 port

Output Command	Description
o	Output command

Port number	Description
yy	01-08 port
*	All output ports

Control	Description
on	Turn on the display
off	Turn off the display
+	Next Port
-	Previous Port

- 
- Note:** 1. By default, input port 01 is tied to output port 01; input port 02 is tied to output port 02; and so on until port 08 (i.e., o01 i01, o02 i02).
2. Each command string can be separated with a space.
3. The **Port Number** can be skipped, and the default value will be used.
- 

The following table lists the available Switch Port commands:

Command	Input Command	Input Port	Output Command	Output Port	Control	Enter	Description
sw	i	xx	o	yy *		[Enter]	Switch Input Port xx to Output Port yy (xx:01~08; yy:01~08, *)
sw			o	yy *	on off	[Enter]	Turn on Output Port yy Turn off Output Port yy (yy:01~08, *)
sw			o	yy *	+ -	[Enter]	Switch Output port yy to next Output port. Switch Output port yy to previous Output port. (yy:01~08, *)

## **EDID Mode Command**

Extended Display Identification Data (EDID) is a data that contains a display's basic information and is used to communicate with the video source.

The formula for the EDID command is as follows:

**Command + Control + [Enter]**

1. For example, to use the Port1 EDID mode, type:

**edid port1 [enter]**

The following tables show the possible values for the **EDID** command:

<b>Command</b>	<b>Description</b>
edid	EDID Mode command

<b>Control</b>	<b>Description</b>
port1	Implement the EDID of the connected display to Port 1, and pass it to the video source.
remix	Implement the EDID of each connected display according to its connection when the VM5808H is first powered on, or immediately after selecting the Remix option.
default	Implements ATEN's default EDID. (default)
customized	Implements the customized mode as set in the EDID system settings. (See <i>Customized EDID Settings</i> , page 60)

**Note:** Each command string can be separated with a space.

The following table lists the available EDID commands:

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
edid	port1	[Enter]	The EDID from Port 1 is passed to the video source.
edid	remix	[Enter]	The VM5404H / VM5808H implements the EDID of each connected display according to its connection when the VM5808H is first powered on, or immediately after selecting the Remix option.
edid	default	[Enter]	ATEN's default EDID is passed to the video source.

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
edit	custom	[Enter]	Implements the customized mode.

## **Mute Command**

Mute allows you to enable or disable an output port(s) audio.

The formula for the Mute command is as follows:

**Command + Output + Number + Control + [Enter]**

1. For example, to mute the audio coming from output port 1, type:

**mute o01 on [enter]**

The following tables show the possible values for the **Mute** command:

<b>Command</b>	<b>Description</b>
mute	Mute command

<b>Output Command</b>	<b>Description</b>
o	Output command

<b>Port number</b>	<b>Description</b>
yy	01-08 port (default is 01)
*	All output ports

<b>Control</b>	<b>Description</b>
on	Mute on; audio from HDMI output port is disabled
off	Mute off; audio output enabled (default)

---

**Note:** 1. Each command string can be separated with a space.

2. Skip the output port command to mute or enable the audio of all output ports.
- 

The following table lists the available Mute commands:

<b>Command</b>	<b>Output Port</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
mute	yy *	on	[Enter]	Audio on for output port yy (yy:01~08, *)
mute	yy *	off	[Enter]	Audio off for output port yy (default) (yy:01~08, *)



## **CEC Command**

Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to the same remote control.

The formula for the CEC command is as follows:

**Command + Output + Number + Control + [Enter]**

1. For example, to enable the CEC function on output port 1, type:  
**cec o01 on [enter]**

The following tables show the possible values for the CEC command:

Command	Description
cec	CEC command
Output Command	Description
o	Output command
Port number	Description
yy	01-08 port (default is 01)
*	All output ports
Control	Description
off	Disable CEC (default)
on	Enable CEC

**Note:** Each command string can be separated with a space.

The following table lists the available CEC commands:

Command	Output Port	Control	Enter	Description
cec	yy *	off	[Enter]	CEC off for output port yy (default) (yy:01~08, *)
cec	yy *	on	[Enter]	CEC on for output port yy (yy:01~08, *)

## Scaling Command

The Scaling command allows you to set a resolution for scaling the display connected to an output port.

The formula for the Scaling command is as follows:

**Command + Output + Number + Control + [Enter]**

1. For example, to turn scaling off for output port 02, type:  
**scaling o02 off [Enter]**
2. To set the scaling for output port 04 to 1920x1080@60Hz, type:  
**scaling o04 1080p [Enter]**
3. To set the scaling for all output ports to the connected display's native resolution, type:  
**scaling o\* native [Enter]**

The following tables show the possible values for the **Scaling** command:

Command	Description
scaling	Scaling command

Output Command	Description
o	Output command

Port Number	Description
yy	01-08 port
*	All output ports

Control	Description
off	Turn off the scaling function (by pass mode)
native	Map display's native resolution for scaling (default)
1080p	Scale to 1920x1080@60Hz
720p	Scale to 1280x720@60Hz
1920	Scale to 1920x1200@60Hz
1600	Scale to 1600x1200@60Hz
1400	Scale to 1400x1050@60Hz
1280	Scale to 1280x1024@60Hz
1024	Scale to 1024x768@60Hz

- Note:** 1. Each command string can be separated with a space.
2. The **Port Number** command string can be skipped, and the default value will be used.

The following table lists the available Scaling commands:

Command	Output	Port Number	Control	Enter	Description
scaling	o	yy *	off	[Enter]	Turn off scaling for port yy (by pass mode) yy: 01 ~ 08 or *
scaling	o	yy *	native	[Enter]	Enable display's native resolution for scaling on output port yy (default) yy: 01 ~ 08 or *
scaling	o	yy *	1080p	[Enter]	Scale output port yy to 1920x1080@60Hz yy: 01 ~ 08 or *
scaling	o	yy *	720p	[Enter]	Scale output port yy to 1280x720@60Hz yy: 01 ~ 08 or *
scaling	o	yy *	1920	[Enter]	Scale output port yy to 1920x1200@60Hz yy: 01 ~ 08 or *
scaling	o	yy *	1600	[Enter]	Scale output port yy to 1600x1200@60Hz yy: 01 ~ 08 or *
scaling	o	yy *	1400	[Enter]	Scale output port yy to 1400x1050@60Hz yy: 01 ~ 08 or *
scaling	o	yy *	1280	[Enter]	Scale output port yy to 1280x1024@60Hz yy: 01 ~ 08 or *
scaling	o	yy *	1024	[Enter]	Scale output port yy to 1024x768@60Hz yy: 01 ~ 08 or *

## **Fan Speed Command**

The Fan Speed command allows you to set the internal fan speed that cools the VM5404H/VM5808H.

To set the fan speed, use the following command:

**Command + Control + [Enter]**

1. For example, to set the internal fan to full speed, type:

**fan turbo [Enter]**

2. To turn the internal fan off, type:

**fan off [Enter]**

The following tables show the possible values for the **Fan Speed** command:

<b>Command</b>	<b>Description</b>
fan	Fan Speed Command

<b>Control</b>	<b>Description</b>
off	Turn internal fan off
low	Set internal fan to low speed
std	Set internal fan to normal speed (default)
high	Set internal fan to high speed
turbo	Set internal fan to full speed

---

**Note:** Each command string can be separated with a space.

---

The following table lists the available Fan Speed commands:

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
fan	off	[Enter]	Turns off internal fan
fan	low	[Enter]	Sets fan speed to low
fan	std	[Enter]	Sets fan speed to standard (default)
fan	high	[Enter]	Sets fan speed to high
fan	turbo	[Enter]	Sets fan speed to full

## Echo Command

The Echo function updates the RS232 controller when operations are made via the front panel pushbuttons, web browser, or telnet. The changes echo back to the RS232 controller to keep the settings in sync with the device.

The formula for the Echo command is as follows:

**Command + Control + [Enter]**

1. For example, to enable the echo feature, type:

**echo on [Enter]**

The following tables show the possible values for the **Echo** command:

Command	Description
echo	Echo command

Control	Description
on	Turns Echo function on
off	Turns Echo function off (default)

---

**Note:** Each command string can be separated with a space.

---

The following table lists the available Echo commands:

Command	Control	Enter	Description
echo	on	[Enter]	Turn on Echo function
echo	off	[Enter]	Turn off Echo function

## **Black Screen Command**

The Black Screen command turns a display screen black when no source signal is detected. This prevents the display from showing the default blue or other color used when no source signal is detected.

The formula for the Black Screen command is as follows:

**Command + Control + [Enter]**

1. For example, to enable the Black Screen function, type:

**blackscreen on [Enter]**

The following tables show the possible values for the **Black Screen** command:

<b>Command</b>	<b>Description</b>
blackscreen	Black Screen command

<b>Control</b>	<b>Description</b>
on	Turns Black Screen function on (default)
off	Turns Black Screen function off

---

**Note:** Each command string can be separated with a space.

---

The following table lists the available Black Screen commands:

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
blackscreen	on	[Enter]	Turn on Black Screen function
blackscreen	off	[Enter]	Turn off Black Screen function

## **Read Command**

The Read command allows you to view the current configuration, firmware and other information about the device.

The formula for the Read command is as follows:

**Command + [Enter]**

1. To view information about the device, type:

**read [Enter]**

The following table shows the possible values for the **Read** command:

Command	Description
read	Read command

**Note:** Each command string can be separated with a space.

The following table lists the available Read commands:

Command	Enter	Description
read	[Enter]	View information about the device

## **Reset Command**

The Reset command allows you to reset the VM5404H / VM5808H to the default factory settings.

The formula for the Reset command is as follows:

**Command + [Enter]**

The following tables show the possible values for the **Reset** command:

Command	Description
reset	Reset command

**Note:** Each command string can be separated with a space.

The following table lists the available Reset commands:

Command	Enter	Description
reset	[Enter]	Resets the device settings

## **Baud Rate Command**

The Baud Rate command allows you to set the RS-232 data rate for the VM5404H / VM5808H to use. Options are 9600, 19200 (default) 38400 and 115200.

The formula for the Baud Rate command is as follows:

**Command + Control + [Enter]**

1. For example, to set 38400 as the baud rate, type:

**baud 38400 [Enter]**

The following tables show the possible values for the **Baud Rate** command:

<b>Command</b>	<b>Description</b>
baud	Sets the RS-232 baud rate

<b>Control</b>	<b>Description</b>
9600	Use 9600 baud rate
19200	Use 19200 baud rate (default)
38400	Use 38400 baud rate
115200	Use 115200 baud rate

---

**Note:** Each command string can be separated with a space.

---

The following table lists the available Baud Rate commands:

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
baud	9600 / 19200 / 38400 / 115200	[Enter]	Sets the RS-232 baud rate



## Save/Load Profile Command

The Save/Load Profile command allows you to save and load connection profiles. Saving profiles will save the connections currently in use.

The formula for the Save/Load Profile command is as follows:

**Command + Profile + Number + Control + [Enter]**

- For example, to save the current connection configuration to profile 02, type:

**profile f 02 save [Enter]**

The following tables show the possible values for the **Save/Load Profile** commands:

Command	Description
profile	Save / Load profile
Profile	Description
f	Profile command
Profile Number	Description
yy	VM5404H: 01-08 (default is 01)
	VM5808H: 01-16 (default is 01)
Control	Description
save	Save the connection configuration
load	Load a saved profile

**Note:** Each command string can be separated with a space.

The following table lists the available Save/Load Profile commands:

Command	Profile	Profile Number	Control	Enter	Description
profile	f	yy *	save	[Enter]	Save the connections as profile yy. VM5404H: (yy:01~08, *)
					VM5808H: (yy:01~16, *)
profile	f	yy *	load	[Enter]	Load profile yy. VM5404H: (yy:01~08, *)
					VM5808H: (yy:01~16, *)

## **OSD Command**

To enable or disable the On-Screen Display (OSD) using the following command:

### **Command + Control + [Enter]**

1. For example, to enable the OSD, type:

**osd on [enter]**

The following tables show the possible values for the **OSD** command:

<b>Command</b>	<b>Description</b>
osd	Enable / Disable the OSD

<b>Control</b>	<b>Description</b>
on	OSD is enabled (default)
off	OSD is disabled

---

**Note:** Each command string can be separated with a space.

---

The following table lists the available OSD commands:

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
osd	on	[Enter]	OSD on
osd	off	[Enter]	OSD off

## Safety Instructions

---

### General

- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ This product is for indoor use only.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ◆ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.

- ◆ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - ◆ The power cord or plug has become damaged or frayed.
  - ◆ Liquid has been spilled into the device.
  - ◆ The device has been exposed to rain or water.
  - ◆ The device has been dropped, or the cabinet has been damaged.
  - ◆ The device exhibits a distinct change in performance, indicating a need for service.
  - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

## **Rack Mounting**

- ◆ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ◆ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ◆ Make sure that the rack is level and stable before extending a device from the rack.
- ◆ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ◆ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ◆ Ensure that proper airflow is provided to devices in the rack.
- ◆ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- ◆ Do not step on or stand on any device when servicing other devices in a rack.

## Technical Support

---

### International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: **<http://eservice.aten.com>**
- ◆ For telephone support, see *Telephone Support*, page iii:

### North America

Email Support		<a href="mailto:support@aten-usa.com">support@aten-usa.com</a>
Online Technical Support	Troubleshooting Documentation Software Updates	<a href="http://www.aten-usa.com/support">http://www.aten-usa.com/support</a>
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ◆ Product model number, serial number, and date of purchase.
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ◆ Any error messages displayed at the time the error occurred.
- ◆ The sequence of operations that led up to the error.
- ◆ Any other information you feel may be of help.

# Specifications

Function		VM5404H	VM5808H
Connectors	HDMI In	4 x HDMI Type A Female (Black)	8 x HDMI Type A Female (Black)
	HDMI Out	4 x HDMI Type A Female (Black)	8 x HDMI Type A Female (Black)
	Ethernet	1 x RJ-45 Female	1 x RJ-45 Female
	RS-232	1 x DB9 Female (Black)	1 x DB9 Female (Black)
	IR Port	1 x Mini Stereo Jack Female (Black)	1 x Mini Stereo Jack Female (Black)
	Power	1 x 3-prong AC Socket	1 x 3-prong AC Socket
	LCD	1 x LCD Module	1 x LCD Module
Switches	In	4 x Pushbuttons	8 x Pushbuttons
	Out	4 x Pushbuttons	8 x Pushbuttons
	Next	1 x Pushbutton	N/A
	Previous	1 x Pushbutton	N/A
	Cancel	1 x Pushbutton	1 x Pushbutton
	Menu	1 x Pushbutton	1 x Pushbutton
	Profile	1 x Pushbutton	1 x Pushbutton
	Enter	1 x Pushbutton	1 x Pushbutton
	Power	1 x Rocker	1 x Rocker
LEDs	Menu	1 x (Green)	1 x (Green)
	Profile	1 x (Green)	1 x (Green)
I/P Rating		100-240Vac, 50-60Hz; 1.0A	
Power Consumption		120V / 36.6W; 230V / 37.5W	120V / 60W; 230V / 62W
Environment	Operating Temp.	0–50°C	
	Storage Temp.	-20–60°C	
	Humidity	0–80% RH, Non-condensing	
Physical Properties	Housing	Metal	
	Weight	4.10 kg	4.03 kg
	Dimensions (L x W x H)	43.20 x 26.20 x 4.40 cm	

## **Limited Warranty**

---

IN NO EVENT SHALL THE DIRECT VENDOR'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, DISK, OR ITS DOCUMENTATION.

The direct vendor makes no warranty or representation, expressed, implied, or statutory with respect to the contents or use of this documentation, and especially disclaims its quality, performance, merchantability, or fitness for any particular purpose.

The direct vendor also reserves the right to revise or update the device or documentation without obligation to notify any individual or entity of such revisions, or update. For further inquiries, please contact your direct vendor.