


The Bulldog EuroClamp is intended for use on most popular cars, Vans, Caravans, Motorcycles and Trailers with the following Maximum Wheel/Tyre sizes:

**A - Height: 180mm. B - Width: 220mm.**

**Wheel trims must have holes to allow access for outer clamp arm.**

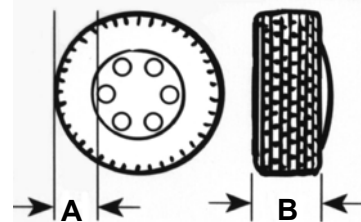

**N.B. MUST BE USED IN CONJUNCTION WITH LOCKING WHEEL NUTS/BOLTS.**


## Fitting Instructions



1. A - Inner Arm. B - Outer Arm.



2. Position inner arm behind wheel, hook into rim.

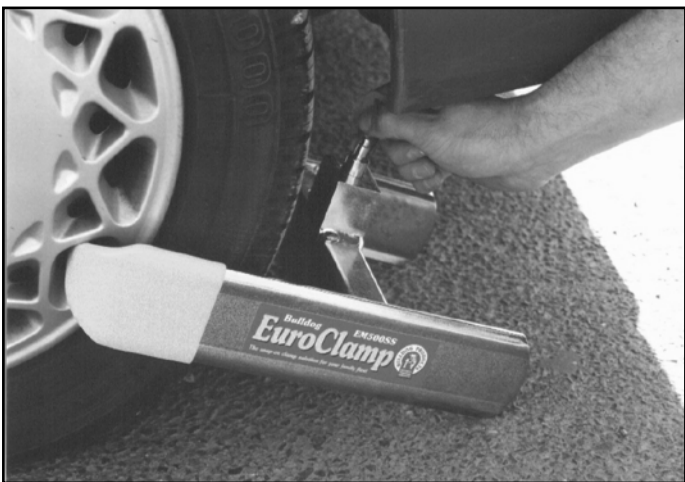

3. Slide inner and outer arms together, ensuring pointed outer arm fits into recess or hole in wheel, and push lock into nearest hole.



4. To remove clamp, insert key, rotate 1/2 turn, pull on key and/or press inner and outer arms together until lock pops out.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

### Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171 Fax: 01952 728117

Email [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com) [www.bulldogsecure.com](http://www.bulldogsecure.com)

MA16-2

### Lock Lubrication.

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.