

# BURTONSAFES

## THE SURE DEFENCE

### USER INSTRUCTIONS

#### KS SERIES KEY CABINET



#### THANK YOU FOR PURCHASING A KS SERIES KEY CABINET

KS Series is a high quality range of products.

- Electronic combination lock
- 3 - 8 digit user codes
- Anti-tamper alarm after 3 incorrect code entries
- External power supply
- Emergency override key
- Requires 4 x AA (LR6) alkaline batteries
- 2-year warranty in respect of materials and workmanship.

**WARNING: NEVER LEAVE YOUR EMERGENCY KEY IN THE SAFE**

**DO NOT LUBRICATE THE LOCK. IF NECESSARY, LUBRICATE THE LOCKING BOLTS.**

#### WARRANTY

- The KS Series Key Cabinet carries a 2-year warranty in respect of materials and workmanship.
- The warranty is valid upon presentation of a receipt or invoice indicating date of purchase.

#### OPENING THE SAFE: FOR THE FIRST TIME

Your new safe will arrive locked and without any batteries installed. Therefore to open your safe you will need to use the instructions given in section below for 'Opening your safe in an emergency'. Then when batteries have been installed the safe will be in factory default. To open your safe for the first time follow the steps below:

Input the factory default code 159 and press B.

You should hear a short beep and the green light will come on.

Turn the handle clockwise and pull the door towards you.

#### PROGRAMMING YOUR OWN CODE INTO THE SAFE

Begin with the safe door open and the locking bolts withdrawn

Press the red button on the inside of the door on the side, this can be found on the hinge side. You will then hear a beep and the orange light will come on.

Input your chosen code (1-8 digits) and then confirm your code by pressing either the "A" or the "B" button. This must be done within 15 seconds of the orange light appearing; otherwise you will have to start again from step 2.

Check that your code has been accepted by operating the bolt work several times with the door open.

#### OPENING THE SAFE

To open the safe, input your chosen code followed by either the "A" or the "B" button. You should hear a short beep and the green light will come on.

Turn the handle clockwise and pull the door towards you.

#### BATTERY REQUIREMENTS

If while inputting opening your chosen user code safe the red and green lights come on, this indicates that the batteries require changing. Your KS Series Key Safe requires 4 x "AA" (1.5V) size batteries, which should be fitted into the battery compartment on the back of the safe door.

Always ensure the batteries are correctly installed before closing the safe, use of alkaline batteries is recommended. If your batteries have run completely flat then you must re-programme your user code again following the steps described above.

# BURTONSAFES

## THE SURE DEFENCE

### USER INSTRUCTIONS

#### KS SERIES KEY CABINET



#### OPENING YOUR SAFE IN AN EMERGENCY

Your safe is supplied with 2 manual override keys. In case of emergency follow the steps below:

Remove the Burton Safes plate located next to the handle. Insert the override key into the keyhole and turn the key in an anti-clockwise direction.

Turn the handle in a clockwise direction.

Keeping hold of both the key and handle, pull the door towards you and the safe will open.

**WARNING! NEVER LEAVE YOUR EMERGENCY KEY IN THE SAFE**

#### INSTALLING THE SAFE

To reduce the risk of theft from your safe it should be secured to a wall. Your KS Series Key Safe has four 8mm holes in back and it is advisable to secure the safe using the fixing bolts provided. Depending on the type of wall you are fixing to it may also be necessary to fit brackets below the safe to help support its weight. Alternatively you may wish to counter sink your safe into the wall.

#### IMPORTANT NOTES

If the safe is without power for more than 1 hour the memory on the lock will be lost and it will revert back to the factory default code of 159.

If whilst performing the programming instructions twenty seconds pass between pressing any buttons, you must start again.

#### AFTER-SALE TECHNICAL ASSISTANT

If in doubt, ask for advice from the retail stockist where you made your purchase.