

Container Door Lock Fitting Instructions

The Bulldog Container Lock is intended for fitting to rear door bars of containers. Max bar diameter 38mm, distance to outside of bars 230mm up to 460mm.

A minimum clearance of 6mm is required between container door and rear of door bar.

Note Hole provided for security seal.



Fitting

- 1. Slide short hook around left hand bar.
- 2. Slide hook around right hand bar and into slot on short hook.
- 3. Press lock into nearest available hole.
- To remove Container Lock, insert key, rotate half turn, pull on key to withdraw lock, whilst the lock is withdrawn remove the key. The two halves can now be separated.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH. Tel: 01952 728171 Fax: 01952 728117

Email sales@bulldogsecure.com www.bulldogsecure.com

CT04-4

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism with WD40 (Or equivalent) minimum every four months.