

WINLOCK® INSTALLATION INSTRUCTIONS

For Winlock 'ODYSSEY' Tongue Drive Espag Window Handle

Changing the handle from 'Right-Hand' to 'Left-Hand' fitment.

Undo 2 fixing screws on rear that secure Cover Plate and remove;
Noting the orientation of counter-sunk holes. (C'sink facing upwards).

2. Remove Tongue and Drive Cam (Lift out).
3. Rotate handle through 180 degrees.
4. Replace Drive Cam matching up the LH arrows as shown in Fig. A.
5. Replace the Tongue matching up the LH arrows as shown in Fig. B.
6. Replace Cover Plate in correct orientation and secure with screws provided.
(C'sink facing upwards and ensuring spindle fully engages when re-fitted).

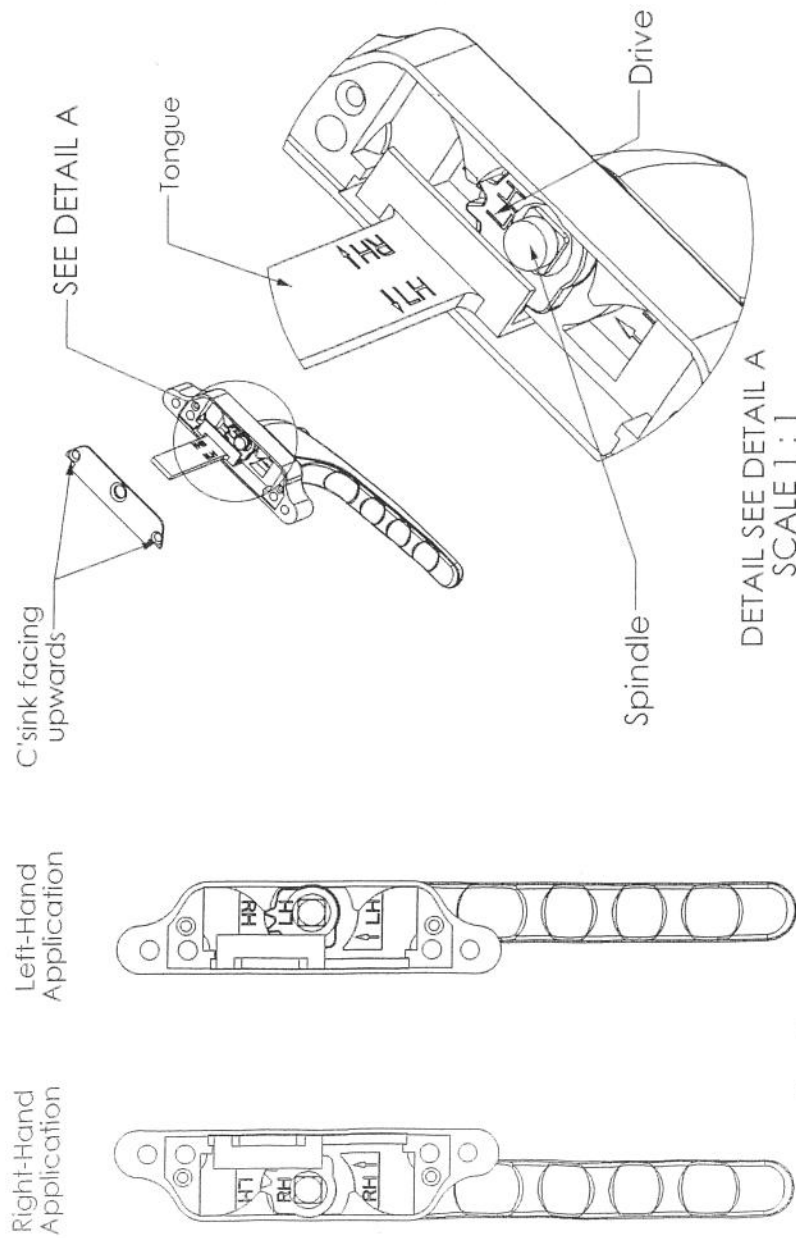


Fig. A

Removal of Lock Plug.

To prevent the handle being locked prior to fitment or the 'Snagging' process occurring, a 'Lock Plug' has been fitted.

To enable the lock to operate:

1. Rotate handle through 90 degrees.
2. Remove 'Lower' Lock Plug as shown in Fig. C.
3. Return handle to vertical, 'Latched' position.

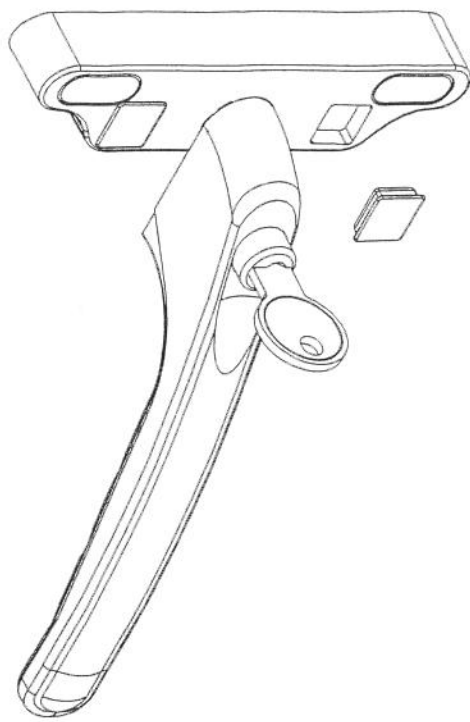


Fig. C (Shown in Left Hand Application)