



BEWARE! Read these instructions before installing and using the safe. Do not leave the emergency keys inside the safe deposit box.

1. INITIAL OPENING

- To open the safe for the first time, remove the cover of the emergency lock. Insert the emergency key and turn it anticlockwise. Turn the knob to open the safe deposit box.

2. INSERTING THE BATTERIES

- The safe deposit box requires 4 batteries, model AA (1.5V) The use of alkaline batteries is recommended.
- The battery compartment is found on the back of the door. Open the safe, open the plastic cover and insert the batteries required. Ensure the batteries are correctly positioned and close the plastic cover.

3. PROGRAMMING THE OPENING CODE

PROGRAMMING THE STANDARD CODE

- Press the red button located on the battery compartment on the back of the door of the safe deposit box. You will need to open the plastic cover to access it.
- When the yellow light comes on, enter the new code that you wish to use as the opening combination (between 3 and 8 digits), and press the button or . 2 beeps will sound as confirmation that the new code has been correctly recorded.
- Check that the new code opens the door correctly.
- If the yellow light comes on and 3 beeps sound, the change of code has not taken place, and it must be recorded afresh.

PROGRAMMING THE SECOND USER CODE

- Press the button "0" twice, and then press the red button located on the battery compartment on the back of the door of the safe.
- Enter your chosen code and then the button or .

4. OPENING THE SAFE DEPOSIT BOX

- Enter the opening code and press the button or . The green light will come on.
- Turn the knob clockwise and the door will open in 5 seconds.
- If you enter a wrong code three times consecutively, the safe deposit box will be blocked for 20 seconds and an alarm will be activated. If you enter an incorrect code another three consecutive times, the block and the alarm will last for 5 minutes.

Please note: The keypad will not function for as long as the block lasts. You will only be able to deactivate the alarm by opening the safe with the emergency key and removing the batteries.

5. OPENING THE SAFE WITH THE EMERGENCY KEY

- For your security, the safe deposit box comes with an emergency key for manual opening.
- If you have forgotten the opening code or the batteries have run out, remove the cover of the emergency lock, insert the emergency key and turn it anticlockwise. Turn the knob to open the door.

6. BATTERY REPLACEMENT WARNING

- If the red light comes on, this means that the batteries are low and you should proceed to replace them. (See section 2).

7. IMPORTANT

- In the event that the safe remains without batteries for more than 24 hours, you must insert the user code again.

GUARANTEE CERTIFICATE

The safe is guaranteed for a period of 24 months from the date of its purchase, as established by the Law 23/2003 dated July 10th on Guarantees in the Sale of Consumer Goods.

ABSS accepts the responsibility for lacks of approval declared within a period of two years in the event of any manufacturing fault which affects the functioning of the safe from the date of its delivery, according to the law. As from the first 12 months, the buyer must prove that the non-conformity already existed at the moment he received the safe.

The faults produced as a result of an improper use or installation, an excess of humidity or salinity, water or cement filtrations, force, the handling of the devices by non-authorized persons, disasters, impacts and falls are excluded from the guarantee.

The repair or substitution of any part due to a fault implies a 6-month extension to the guarantee of the part repaired or substituted. ABSS will accept the responsibility for the non-conformities that caused this repair when the same factory faults that caused the first repair are repeated.

IDENTITY DETAILS

Name of the supplier

Date of sale.....

Name of purchaser

Address of purchaser

IDENTIFYING DETAILS OF THE SAFE

Model

Series number

IMPORTANT:

- These details must be completed as clearly as possible and without delay by the supplier, who will stamp and sign on behalf of his company in the place indicated.
- The certificate remains in the possession of the purchaser.
- The purchaser must keep the RECEIPT for the purchase of the safe, together with the GUARANTEE CERTIFICATE to be able to accredit the date of purchase. Both documents are necessary to use the guarantee.

SUPPLIER'S STAMP