 
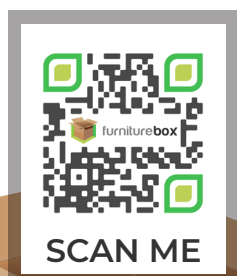 


Svit Chest of Drawers

ASSEMBLY GUIDE

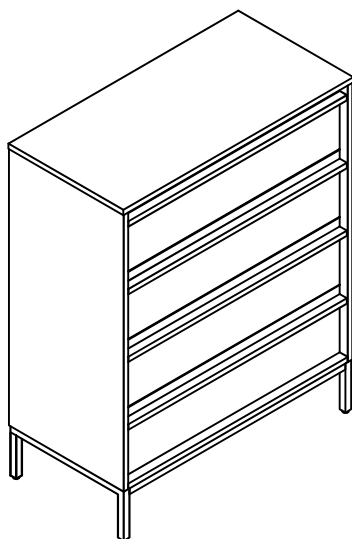

www.furniturebox.co.uk

Scan QR code for more tips,
and advice or visit
furniturebox.co.uk/club/general-club-page

Important - Please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- **Warning:** Unfixed furniture may tip over. We strongly advise you use the anti-tipping kit provided to secure your shelves to the wall. Please use appropriate fixings for your wall and get professional advice if unsure.



Follow us on Instagram
@furniturebox_uk

IMPORTANT INFORMATION



30 MINUTE
BUILD



TWO
PERSON



MAXIMUM
CAPACITY 80Kg

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

DESCRIPTION	PART NAME	Q'ty(PCS)
①		1
②		1
③		4
④		2
⑤		2


Parts for Leg Assembly


A		BOLT M6*12MM	6 PCS
B		BOLT M6*16MM	12 PCS
C		ALLEN KEY	1 PC
D		BOLT M4*20MM	12 PCS

NOTE: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

STEP 1

  Use a clean, flat, soft surface to avoid any bumps or scratches.
 Attach center leg [2] and 2 x long support tubes [4] using 4 x bolts [B].
 Tighten bolts [B] with Allen Key [C].

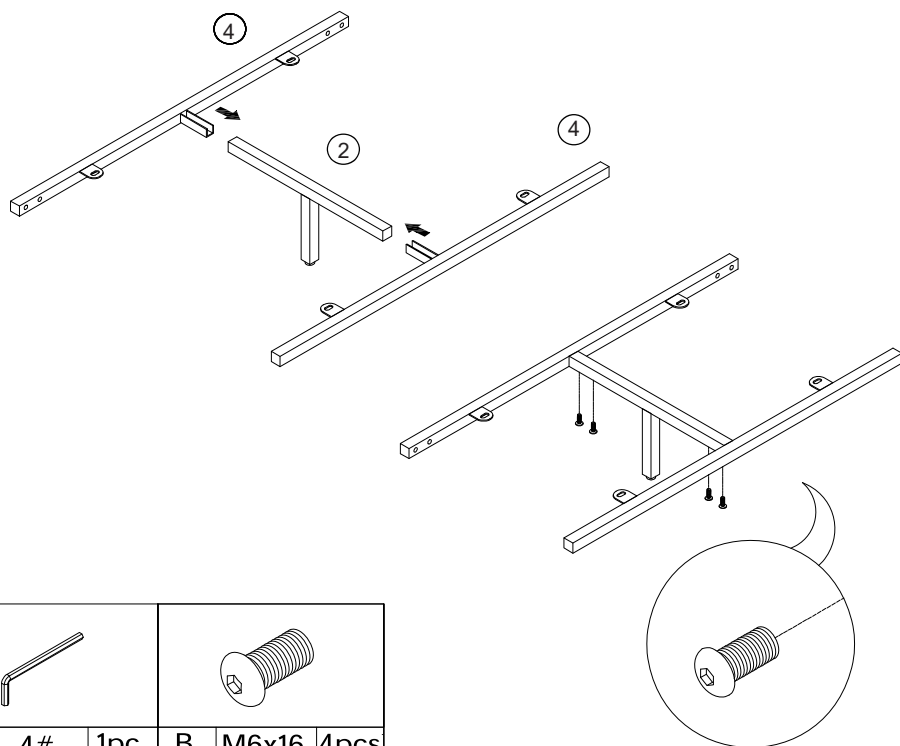


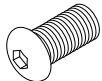					
C	4#	1pc	B	M6x16	4pcs



STEP 2

 
Attach 2 x legs [5] to the ends of support tubes [4] using 8x bolts [B]. Tighten bolts [B] with Allen Key [C].

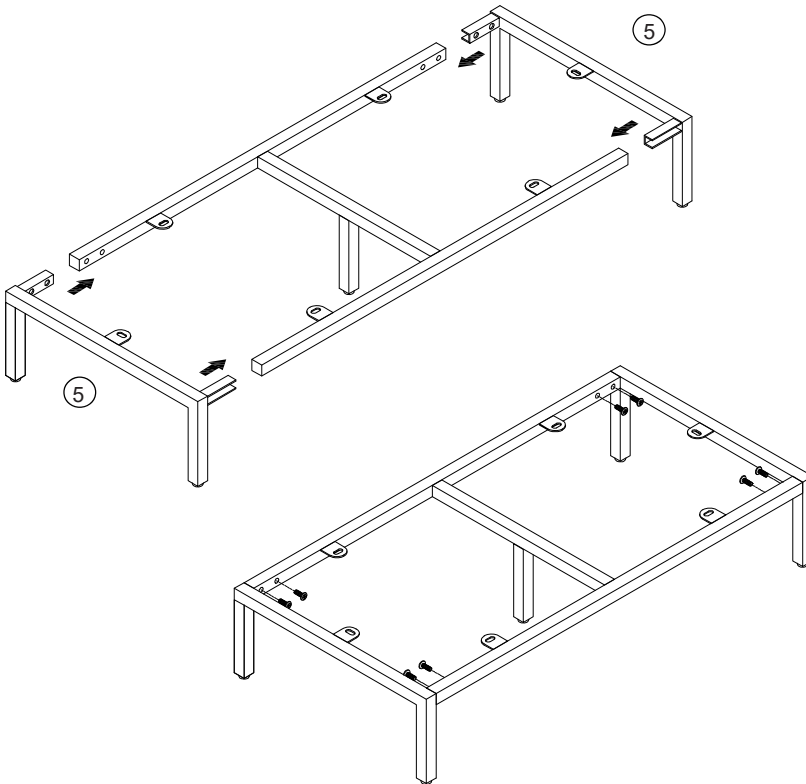


C	4#	1pc	B M6x16 8pcs

STEP 3

 Carefully, unpack the assembled chest.
Attach 1x handle [3] to each drawer front with 3 x bolts [D] using a screwdriver.


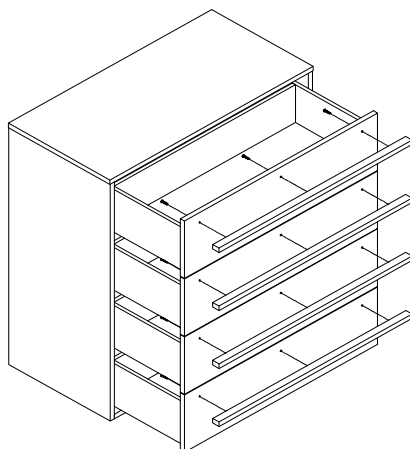


3

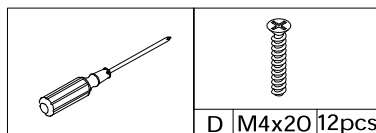 


STEP 4

  Carefully, place your chest on its back on a soft surface.
Attach the leg frame onto the bottom of the chest with 6 x bolts [A].
Fully tighten all bolts using a screwdriver.

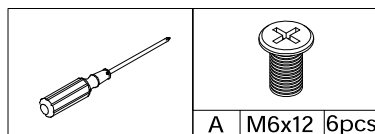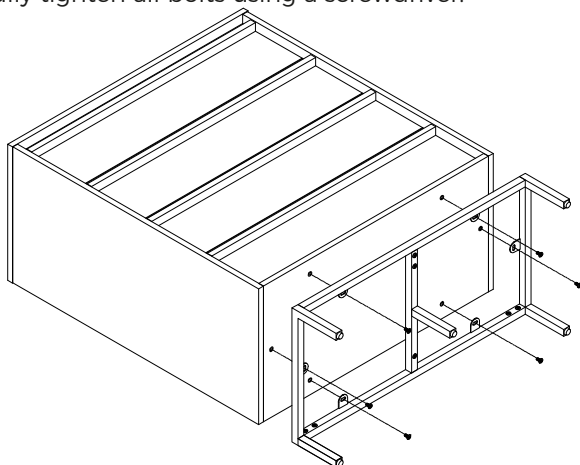

STEP 5

 Carefully, and with help, stand the chest on its legs.

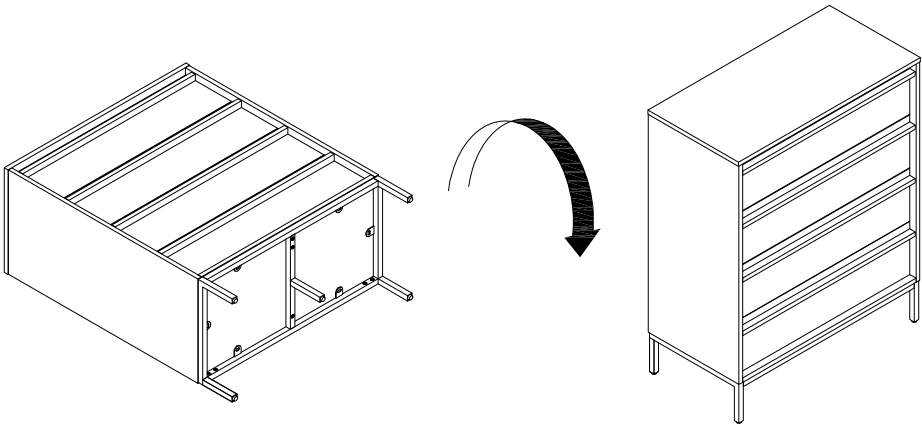

STEP 6

Anti Tipping Kit Instructions

 
Warning: Unfixed furniture may tip over. We strongly advise you use the anti-tipping kit provided to secure your furniture to the wall. Please use appropriate fixings for your wall and get professional advice if unsure.

The plastic anchors are designed for fixing to concrete walls only.

Please use appropriate fixings for your wall and get professional advice if unsure.


Hardware

- 4x Plastic brackets (P1)
- 2x Zip ties (P2)
- 4x Screws M4 *16 (P3)
- 4x Plastic anchor Ø6*30 (P4)
- 4x Wall screw M4 *40 (P5)

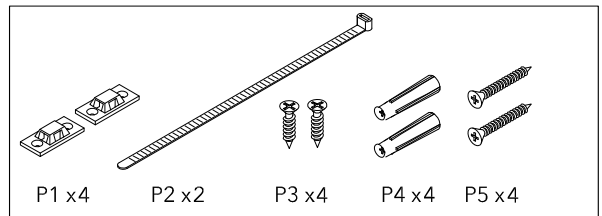

STEP 7

 We recommend the plastic connectors be fitted just below the top of the unit to remain invisible when the unit is in place. Fasten 2x Plastic brackets [P1] to the back of the side panels with 4 x screws [P3].

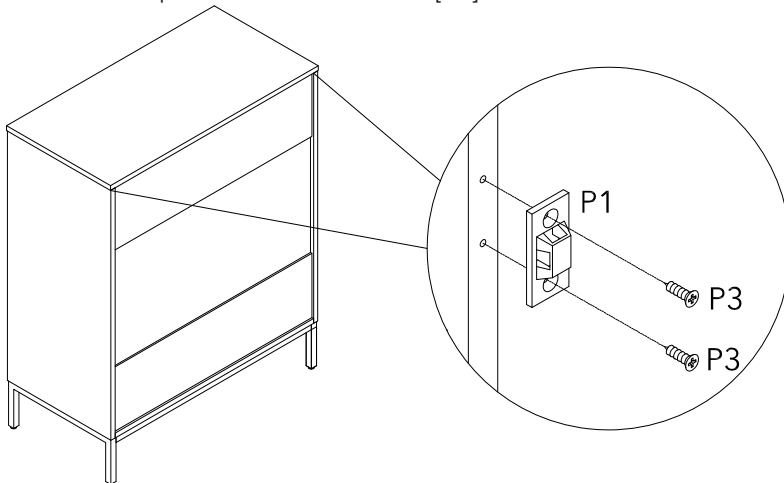

STEP 8

With help, move the chest into position. Mark fixing holes on wall and remove the chest

 
Carefully drill holes in the wall. Fix plastic brackets [P1] to the wall with 4 x plastic anchors [P4] and 4 x wall screws [P5].

Move the chest closer to the wall, and pass flat end of the cable tie through the plastic bracket [P1] on the wall, then loop the cable tie through the bracket [P1] on the chest.

Insert the flat end of the cable tie into the buckle of the cable tie, then tighten the cable tie.

Ensure everything is secure.

Your chest is now secured to the wall and ready to use.

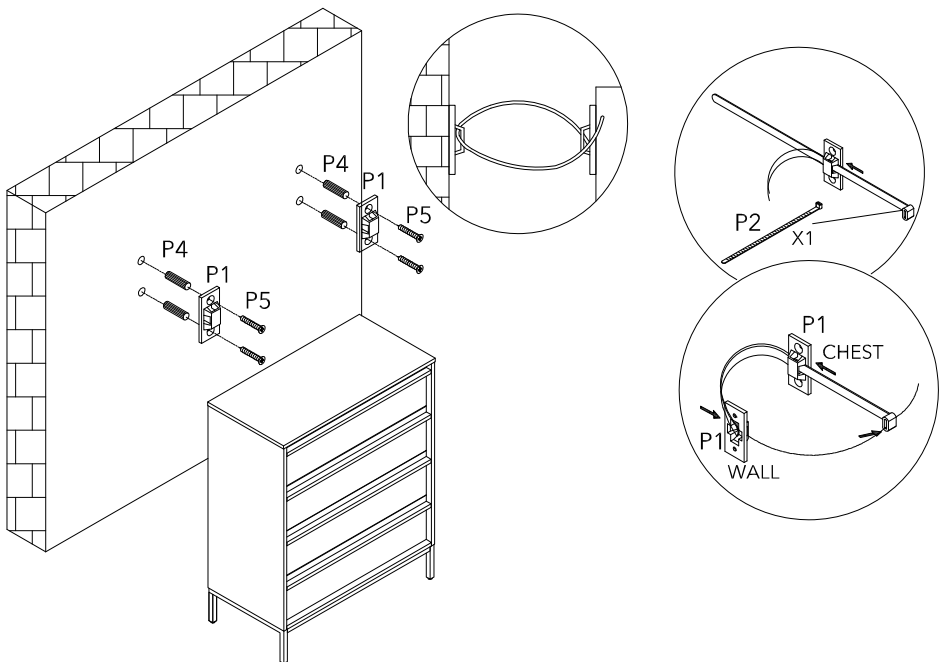



furniturebox



WE **L**♥**VE** INTERIORS! SHARE
YOURS WITH US ON SOCIAL MEDIA

1. follow us on Instagram
2. post your interior
3. tag us to be featured



@furnitureboxUK



@furniturebox_uk



 
@furnitureboxuk

www.furniturebox.co.uk

Follow us on Instagram
@furniturebox_uk

LOOKING GOOD!

Now you've assembled your product find out how to care for your item and keep it looking brand new.

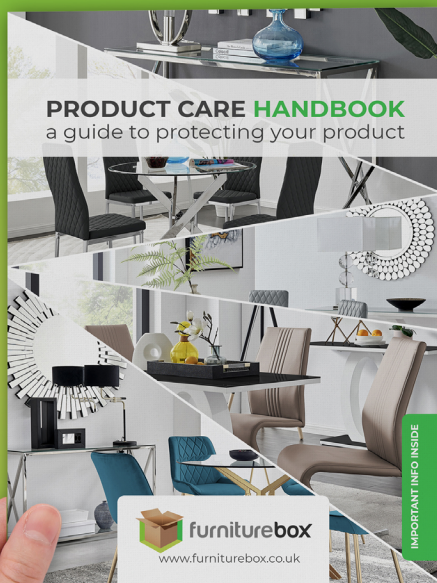

Look for your care guide in the box or visit:
www.furniturebox.co.uk/club/care-guide

www.furniturebox.co.uk



OUR 2 YEAR GUARANTEE

our products come with a 2 year guarantee
to give you peace of mind shopping at
Furniturebox

some garden furniture items have
a 1 year guarantee



WHAT THE GUARANTEE COVERS



PRE-INSERTED FIXINGS

e.g. loose metal threads



FAULTY JOINTS

e.g. legs bending



EXTERNAL FIXING FAULTS

e.g. metal discs removing
from table top



STRUCTURAL INTEGRITY

e.g. the frame of the
product



ACTIVATE YOUR GUARANTEE ONLINE

scan this QR code with your phone to read
the full guarantee online and register your
product. It only takes a moment to fill out.
Or visit: furniturebox.co.uk/our-guarantee



Furniturebox UK, Unit 6 St Modwen's Park,
Chippenham, SN15 5BD
Tel: 01747 863333 Email: sales@furniturebox.co.uk