 
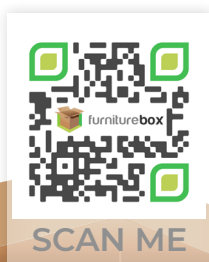 


URBI MEDIUM CABINET

ASSEMBLY GUIDE

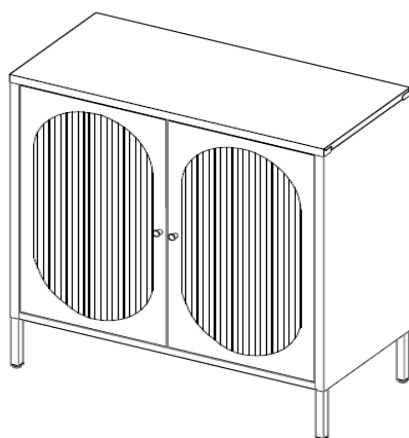

www.furniturebox.co.uk

Scan QR code for more tips,
and advice or visit
furniturebox.co.uk/club/general-club-page

Important - Please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- **Warning:** Unfixed furniture may tip over. We strongly advise you use the anti-tipping kit provided to secure your shelves to the wall. Please use appropriate fixings for your wall and get professional advice if unsure.



Follow us on Instagram
@furniturebox_uk

IMPORTANT INFORMATION



30 MINUTE
BUILD

 


TWO
PERSON



MAXIMUM
CAPACITY 50Kg


PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

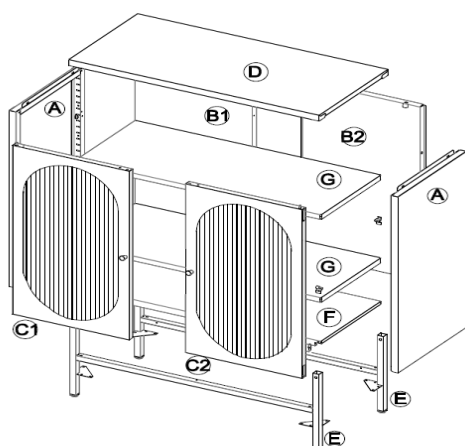

No.	Size	Qty
A	918x350x24mm	2
B1	890x430x23mm	1
B2	890x442x23mm	1
C1	871x423.5x20mm	1
C2	871x423.5x20mm	1
D	901x351.5x38mm	1
E	380x897x20mm	2
F	896x301x25mm	1
G	896x300x20mm	2



 1 x Screwdriver
(Not provided)

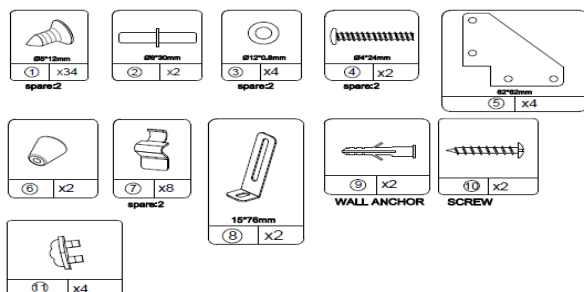


NOTE: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

STEP 1

Use a clean, flat, soft surface to avoid any bumps or scratches.


Attach 2 x side panels [A] to 2 x leg frames [E] by slotting [A] onto [E] with the plastic feet on the bottom.

 NOTE: Ensure the holes are nearest the outside as this will affect the door assembly.

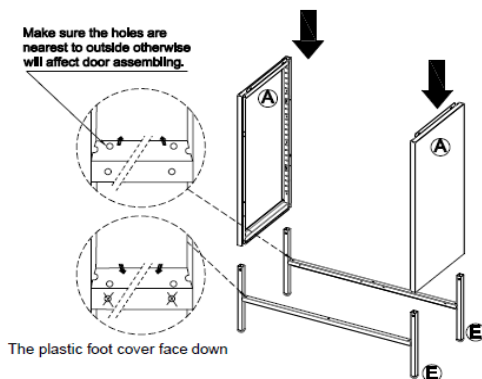


STEP 2

 Attach side panels [A] to 2 x leg frames [E] using 4 x corner brackets [5] + 4 x screws [1] to each bracket - 16 in total. Tighten with a screwdriver.

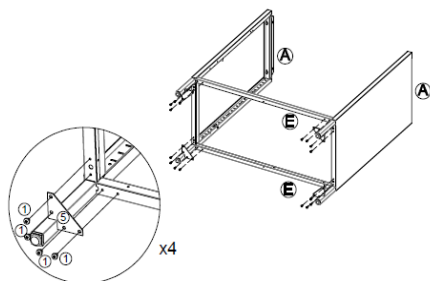



STEP 3

 Attach back panels [B1 + B2] onto 2 x side panels [A] and attach using 6 x screws [1]. Tighten with a screwdriver.

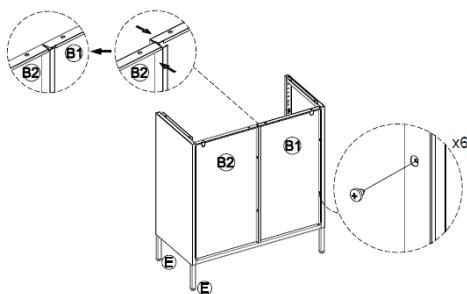

STEP 4

  Attach back panels [B1 + B2] onto frame parts [A+E] and attach using 4 x screws [1]
Tighten with a screwdriver.

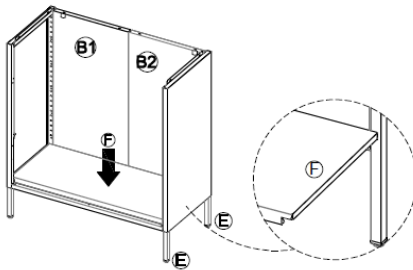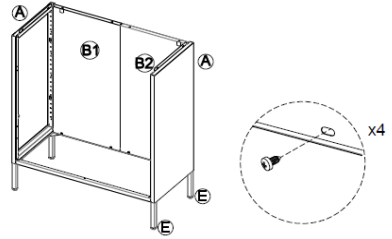



STEP 5

Slot 1 x base panel [F] into the bottom of the frame.

STEP 6

  Attach 1 x top panel [D] to 2 x side panels [A] using 4 x screw [1] and tighten with a screwdriver.

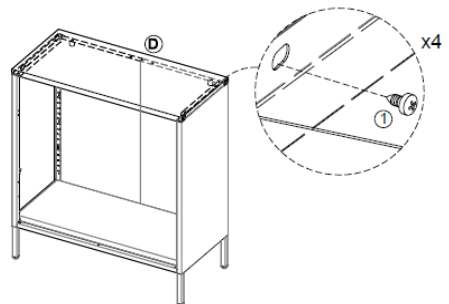


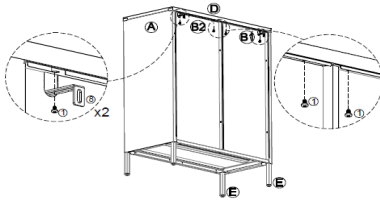


STEP 7

Attach top panel [D] to back panels [B1 + B2] using 2 x wall brackets [8] + 4 x screw [1] and tighten with a screwdriver.

STEP 8

  Slot 2 x shelves [G] into the cabinet by using 8 x shelf brackets [7]. Ensure the shelves are level.

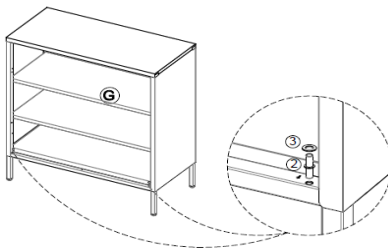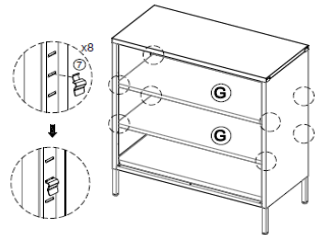


STEP 9

Insert 2 x dowel pin [2] + 2 x washer [3] to the corner of the cabinet frame as shown.




STEP 10

 Attach 1 x door handle [6] to door [C] using 1 x washer [3] + 1 x screw [4] through the pre-drilled hole. Tighten with a screwdriver. Repeat for the second door.

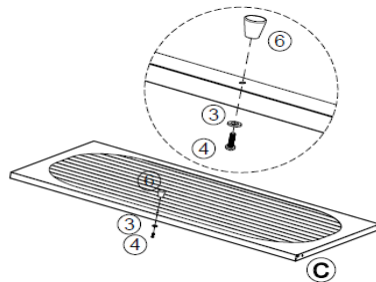

STEP 11

   Attach doors [C1 + C2] to the pre-assembled cabinet by slotting doors [C1 + C2] onto the pre-inserted dowel pins. Ensure to use the holes nearest the side panel and corner of the door.

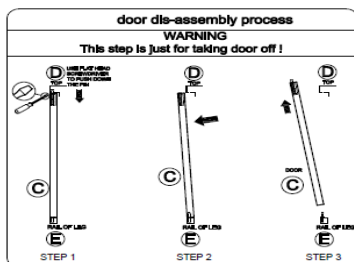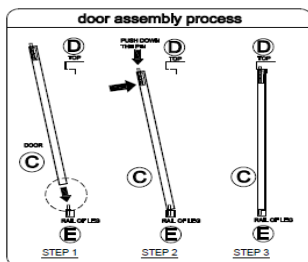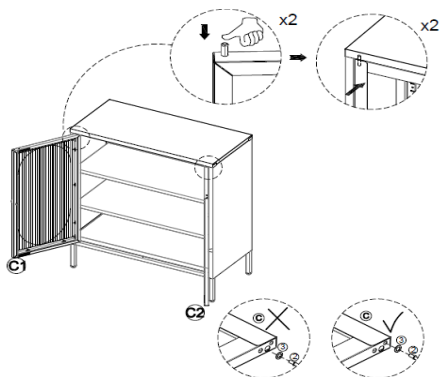


Anti Tipping Kit Assembly

STEP 12

Warning: Unfixed furniture may tip over. We strongly advise you use the anti-tipping kit provided to secure your shelves to the wall. Please use appropriate fixings for your wall and get professional advice if unsure.

Secure the cabinet to the wall with the 2 x pre-attached wall brackets [8]. Attach using 2 x rawl plugs [9] + 2 x screws [10].

 Check stability and adjust feet accordingly.
Your cabinet is now ready to use!

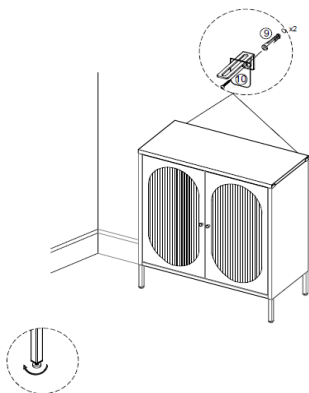

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.



OUR 2 YEAR GUARANTEE

our products come with a 2 year guarantee
to give you peace of mind shopping at
Furniturebox



WHAT THE GUARANTEE COVERS



PRE-INSERTED FIXINGS
e.g. loose metal threads



FAULTY JOINTS
e.g. legs bending



EXTERNAL FIXING FAULTS
e.g. metal discs removing
from table top



STRUCTURAL INTEGRITY
e.g. the frame of the
product



ACTIVATE YOUR GUARANTEE ONLINE

scan this QR code with your phone to read
the full guarantee online and register your
product. It only takes a moment to fill out.
Or visit: furniturebox.co.uk/our-guarantee

Furniturebox UK, Unit 6 St Modwen's Park,
Chippenham, SN15 5BD
Tel: 01747 863333 Email: sales@furniturebox.co.uk