

 


Portable Spot Cooler with Misting

User Manual

Read and save these instructions before use


Book 2 of 2. See separate Safety & Maintenance Guide

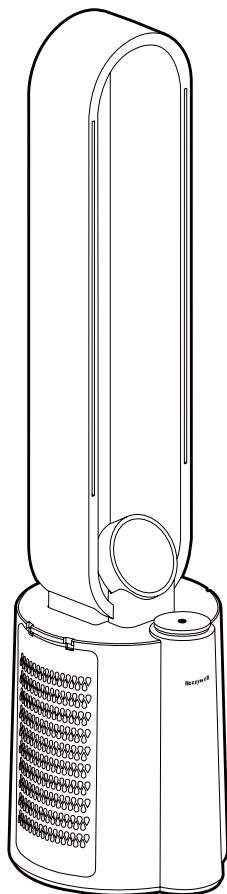

Model:
BMF01AE
BMF01AESS



 
www.honeywellaircomfort.com
E-mail: support.eu@jmatek.com

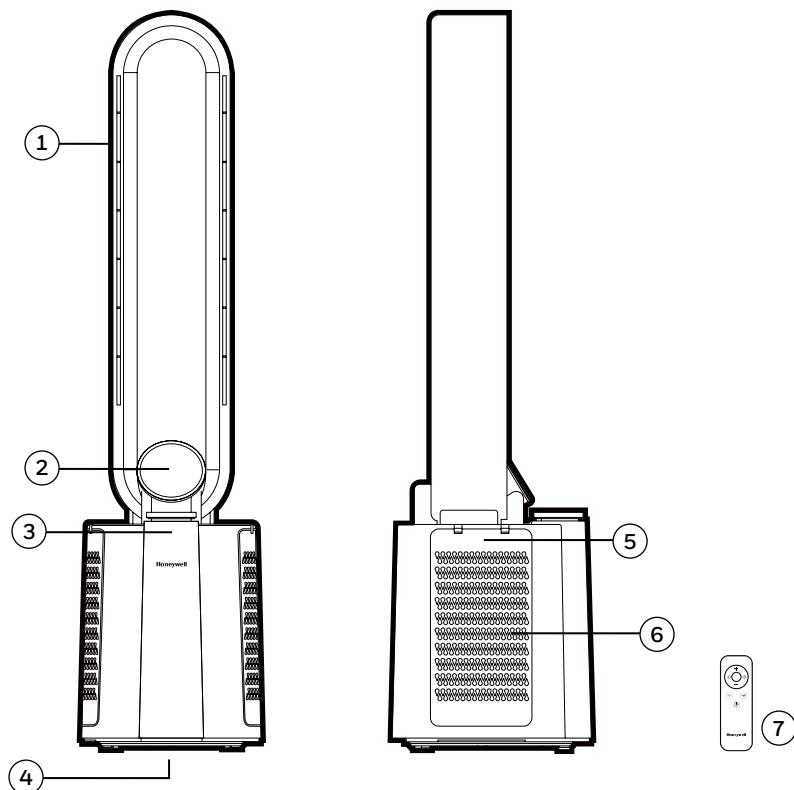

- | | |
|-------------------------|--------------------------------------|
| 1) Air Outlet | 5) Air Inlet Grille (Right & Left) |
| 2) Control Panel | 6) Carbon Dust Filter (Right & Left) |
| 3) Misting Water Bottle | 7) Remote Control |
| 4) Swing Base | |

WARNING -- READ AND SAVE THE AIR COOLER SAFETY & MAINTENANCE GUIDE AND USER MANUAL BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY DAMAGE AND/ OR IMPAIR ITS OPERATION AND VOID THE WARRANTY. IN CASE THERE IS ANY INCONSISTENCY OR CONFLICT BETWEEN THE ENGLISH VERSION AND ANY OTHER LANGUAGE VERSION OF THE CONTENT OF THIS MATERIAL, THE ENGLISH VERSION SHALL PREVAIL.

 CONTROL PANEL

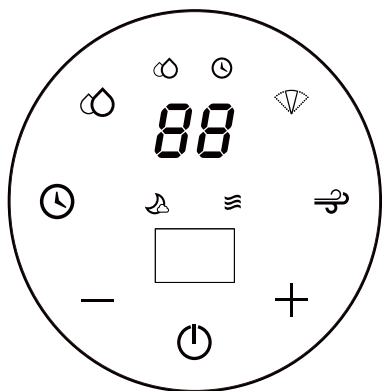

⏻ POWER ON/OFF

🌀 SWING

🕒 TIMER

💧 MIST COOLING

↻ WIND MODE

≡ NATURAL

🌙 SLEEP

+/- SPEED

FUNCTION BUTTONS

POWER ⏻

Press the button to turn the unit on, the ⏻ indicator light is illuminated on the control panel. The portable Spot Cooler with misting will start automatically in Normal mode at fan speed level 6, press the button again.

TIMER 🕒

While the unit is turned on, press the 🕒 button, until the desired time duration setting is selected. When duration setting is selected, the display will flash. When the set time has passed, the unit will automatically turn off (unit remains in Standby mode until power cord is unplugged from electrical socket). This function allows you to program the unit for up to 8 hours of use.

SPEED +/-




Press the + or - buttons to adjust the fan speed level. There are 12 fan speeds to choose from.

There are also 3 fan wind type modes: Normal, Natural and Sleep.

You can adjust fan speeds between 1 to 12 when the wind mode is set to Normal. Under Natural and Sleep modes, the fan speed can only be adjusted between speeds 1 to 3 (see more on next page).

FUNCTION BUTTONS (CONTINUED)

WIND MODE


Press the  button to select your desired wind mode: Normal, Natural  or Sleep 

Normal: The unit will run continuously at the set fan speed. Press **+** or **-** to adjust from speeds 1 to 12.


 
Natural: Press the **+** or **-** to adjust between High (Speed 3) , Medium (Speed 2), and low (Speed 1). The fan speed alternates between High, Medium, Low and Off to mimic a natural breeze.

Sleep: This mode is for comfort during the night. When SLEEP mode is selected, the fan speed randomly switches from high-medium-low-stop in random order and at random intervals. You may set the starting speed to be High (Speed 3) , Medium (Speed 2), or low (Speed 1). Each random program will reduce in speed every 30 minutes until the speed level reaches Low speed, where the fan will switch between low speed and stop at random intervals until you turn off the air cooler.

 
SWING






 
Press the  button until the indicator light is illuminated on the control panel. The cooler will begin to swing left to right automatically. To turn off, press the button again.

MIST COOLING

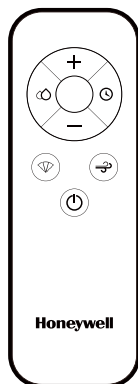Press the  button until the  icon is illuminated on the display panel, this activates mist cooling. The misting function will stop automatically will stop automatically when the water runs out from the misting water bottle. You must refill the misting water bottle with fresh tap water in order to continue using the misting function.

REMOTE CONTROL



	POWER:	ON / OFF
	SWING:	Activates rotation of the air cooler body
	WIND MODE:	Switch between normal, natural & sleep
	MIST COOLING:	Switch ON/OFF mist cooling function
	TIMER:	Controls the timer function for automatic off
	SPEED:	Adjusts fan speeds

NOTE:

- The remote control requires AAA (2 x 1.5V) batteries for replacement.
- Open the battery compartment at the back of the remote control and insert batteries inside. Care must be taken to insert the batteries according to the correct polarity (+ / -) markings shown inside the battery compartment.
- Always point the remote control signal transmitter towards the unit when operating. Make sure that the signal path is not obstructed.
- Remove the batteries if the unit is not going to be used for an extended period of time.
- Do not drop the remote control.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.
- Do not mix old and new batteries.
- Do not recharge the battery.
- Exhausted batteries are to be removed from the product and safely disposed of as per local regulations.
- Do not dispose of batteries in fire. Batteries may explode or leak.

WARNING: Caution for ingestion of the small battery. Keep away from children and animals.

COOLER LOCATION

Make sure to position the air cooler correctly before you set up and start using the product.
Please refer to the COOLER LOCATION section of the separate Safety & Maintenance Guide.

FILLING WITH WATER

CAUTION:

Unplug the unit from the electrical power outlet before emptying or refilling the water bottle.

Misting Water bottle Operation Instructions

1. Remove the water bottle from the unit. (Fig.1)
2. Open the water bottle cover.
(Rotate anticlockwise to open, clockwise to tighten.) (Fig.2)
3. Fill up with clean water.
4. Check if the water bottle is filled with water by rotating upside-down to ensure that the sponge rod in the water bottle is fully filled with water.
Screw cap onto bottle to lock it back in place.
5. Load the water bottle to the unit so that the two contacts of the humidifier fully contact the two contacts on top of the water bottle. (Fig.3)

Note:

The misting function will stop automatically when the bottle is empty (after running for approximately 1 hour continuously - how long it lasts depends on the humidity of the room).

Refill the water bottle to continue misting function.

Please refill water and turn on misting function if needed.

The water capacity refers to the total volume of water that can be contained within the air cooler water bottle.

The water capacity in the tank at the "Max." indicator level may be lower than the actual water capacity of the air cooler.

WARNING: Do not fill water jar with dirty water or salt water. This can damage the unit.


Fig.1



Fig.2



 Fig.3

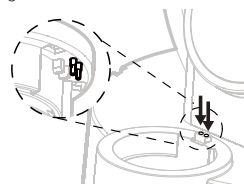

CLEANING & DRAINING THE WATER JAR

Below are instructions on how to clean and maintain your air cooler. If the cooler will not be used for a long period of time, please refer to the STORAGE & MAINTENANCE GUIDELINES located in the separate Safety & Maintenance Guide.

WARNING:

Before cleaning the unit, switch the unit OFF and disconnect from the electrical socket.

- Refill the water bottle with clean water and drain it completely.
- Do not run misting cooling with stale water in the bottle. You must empty the water bottle and refill with fresh water, especially if it has not been cleaned in a long time.
- Use a damp cloth to remove the dirt and dust from the surface of the unit. Never use corrosive elements or chemicals to clean this product.
- When the product is not in use, store the unit in a dry place out of direct sunlight.

 
CLEANING THE CARBON DUST FILTER

- The appliance is supplied with a Carbon Dust Filter.
- The Carbon Filter is located inside the Air Inlet Grille. See Figure 4 for instructions on how to remove them from the unit for cleaning and maintenance.

Removing the Carbon Dust Filter:

1. Carefully pull out the Air Inlet Grille from the cooler.
2. Slide out the Carbon Dust Filter .
3. Clean the Carbon Dust Filter by gently wiping with a damp cloth and let it air dry completely before replacing onto the unit.

WARNING: DO NOT operate the Air Cooler when the Air Inlet Grille is removed from the Air Cooler, or if there is a loose-fitting Air Inlet Grille. Doing so can cause serious injury or dangerous electrical shock.

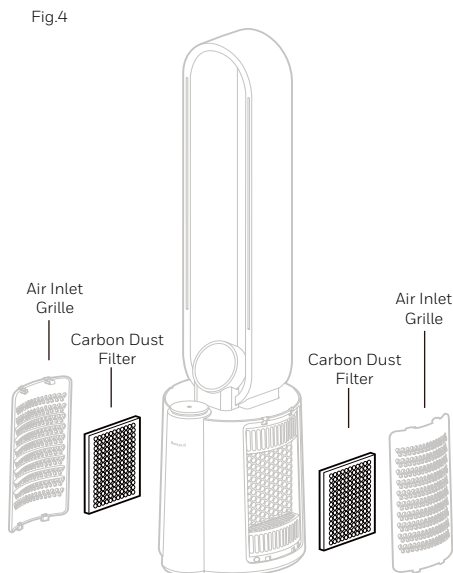

JMATEK UK Limited
Keizersgracht 62
1015 CS Amsterdam
Netherlands
Tel: +31 20 5207422
Support.eu@jmatek.com

© 2025 JMATEK Limited. All rights reserved.
The Honeywell Trademark is used under license from
Honeywell International Inc. Honeywell International Inc.
makes no representations or warranties with respect to this
product. This product is manufactured by
Airtel Int'l Corp. Ltd. (subsidiary of JMATEK Ltd.).

