 




EH1342

16W Insect Killer

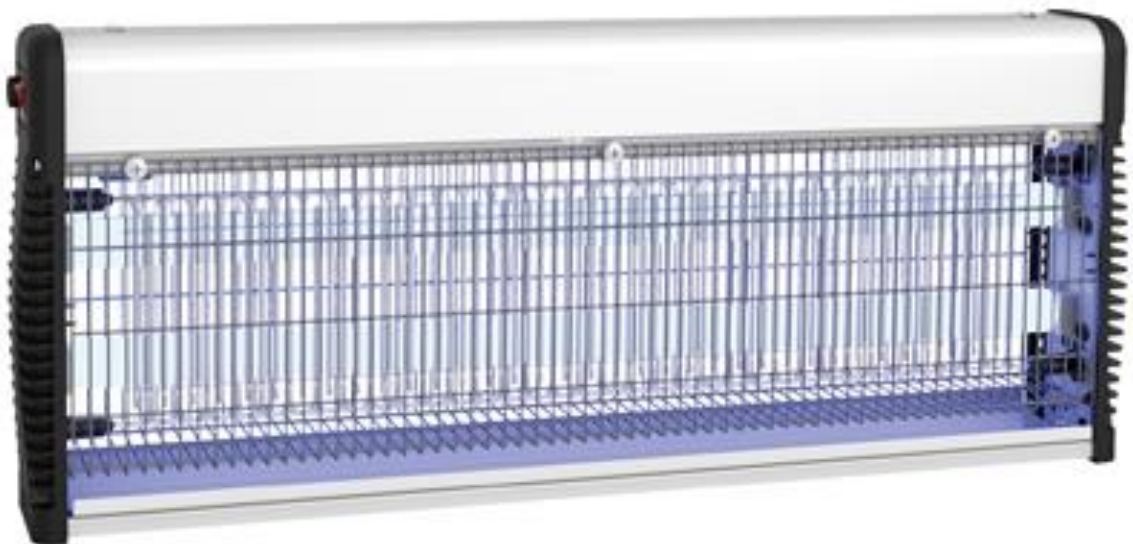

User Manual

Please retain for future reference

IMPORTANT

Installer and users please note:

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems, please contact our Customer Services.

PRODUCT SAFETY

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliance is indoor use only. The appliance is not suitable for use in barns, stables, and similar locations.
- The appliance is not to be used in locations where flammable vapors or explosive dust is likely to exist.
- Hang or mount the appliance in a place where children cannot reach. ($\geq 2.0\text{m}$)
- Never remove any fixed part of the appliance to make any internal adjustment avoiding electric shock. If the supply cord, the lamp, or other part of appliance is damaged, the manufacturer, its service agent or similarly qualified persons must replace it in order to avoid a hazard.
- Unplug the appliance before cleaning. Use suitable plastic brushes to clean the high voltage metal grid and throw away any insects on the collection tray every week.
- The insect killer is to be kept out of reach of children.



- Dangerous voltage
- Check the local voltage before working. Do not touch the internal high voltage grids during use because of electric shock danger. Never put metal objects inside the grids while working. Be sure to turn off and unplug the appliance when cleaning and repairing.
- Do Not touch the high-voltage grid.
- Do Not wash the appliance in water and keep dry.
- Repair should be carried out by the manufacturer or qualified persons.
- Please wait at least 10s between disconnecting the appliance from the mains supply and performing and cleaning or maintenance.

OPERATING INSTRUCTIONS

1. Place the unit on a clean, level surface out of the reach of children.
2. Ensure the power switch on the unit's side is in the OFF position.
3. Connect the mains plug to an appropriate socket outlet.
4. Switch the unit on by moving the switch to the ON position.
5. To switch the unit off, move the switch to the OFF position and disconnect from the mains supply.



Figure 1

HANGING INSTALLATION

1. Ensure the unit is powered off before hanging.
2. Locate the 2 x hanging points on the top of the unit (Figure 2).
3. Clip each end of the chain to the hanging points (Figure 3) and check the chain is not twisted.
4. Hang the unit at the centre of the chain on an appropriate fixing point.

Note: you must conduct a full site survey prior to installation of any fixings to ensure the fixing point will be safe and secure enough to bear the weight of the unit. Fitting should only be carried out by a competent person.



Figure 2

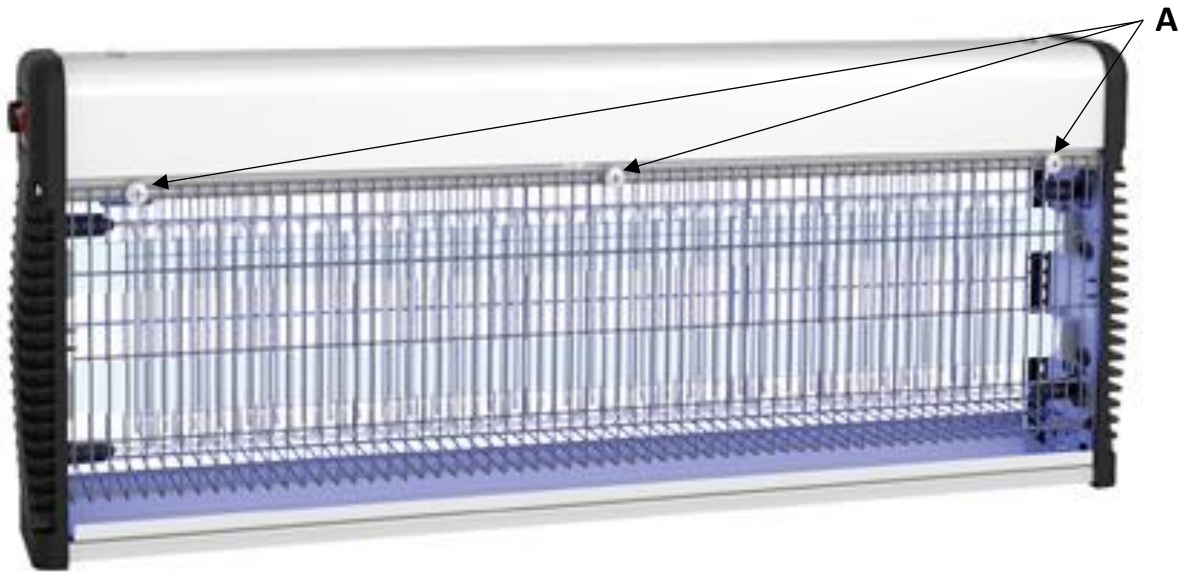 


Figure 3

CLEANING AND MAINTENANCE.

1. Ensure the unit is powered off and disconnected from the mains supply before cleaning.
2. The unit should be cleaned gently with a clean dry brush or cloth. Do not use water to clean the unit.
3. The collection tray should be removed and emptied periodically. Remove the tray by lifting it upwards slightly and pulling it forward.

REPLACING THE TUBES



1. Ensure the unit is disconnected from the mains power supply and the power switch is in the off position and wait at least 10s.
2. Remove the collection tray.
3. Lie the unit on its side, so that the electrical discharge grid is facing downwards.
4. Remove 3 screws from the front of the unit (marked A above).
5. The grille can be tilted up and away from the tubes, they are hinged at the bottom.
6. To remove the tubes, rotate them 90° (quarter-turn) and slide them up and out the holders.
7. To insert new tubes, slide the tube pins into the grooves in the holders and rotate 90° to lock them in place.
8. Replace the grille and secure using the screws removed in step 4.

POWER LEAD AND PLUG

 
If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced, proceed as follows:

Connect the brown (live) wire to the terminal “L”

Connect the blue (neutral) wire to the terminal “N”

Connect the yellow and green (earth) wire to the terminal “E”

Ensure the cord grip is positioned correctly (over the outer sheath of the cable) and is fully tightened.

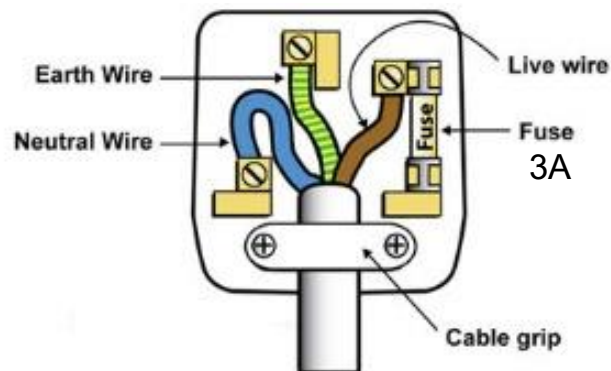

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste. Most local authorities have specific collection systems for appliances and disposal is free of charge to the end user. When replacing an existing appliance with a similar new appliance, your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Dimensions:	643 x 265 x 73 mm
Weight:	2.2 kg
Power supply:	230V ~
Power consumption:	16W
Bulb Type	2 x T8 10W UV-A LED Tube

SERVICE WARRANTY

Prem-I-Air guarantees the product free from defects in materials and workmanship for a period of 1 year. Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our help desk on (0845) 459 4816.

Prem-I-Air Appliances Ltd.

Lancots Lane
Sutton
St. Helens
Merseyside
WA9 3EX

www.prem-i-air.co.uk