

# devola

Comfortable living everyday



## 1500W Portable Fan Heater

DVSFH152BB / DVSFH152BS / DVSFH15WW / DVSFH15WS

### Instruction Manual

[devola.co.uk](http://devola.co.uk)

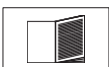
# Thank you for choosing Devola

Congratulations on the purchase of your new Devola product. Please read the following instructions carefully and follow them to prevent possible damages. We assume no liability for damage caused by disregard of the instructions and improper use.

## Contents




Safety information .....	1
Product information .....	3
Operating instructions .....	6
Cleaning and maintenance .....	8
Technical data .....	9
Warranty .....	10

## Safety information



Please read the USER MANUAL carefully before operation

### Product information

-  **DANGER** This symbol indicates a high-risk hazard that could lead to serious injury or death. Always follow the safety instructions in this manual to reduce risk.
-  **DO NOT COVER** Never cover the heater with clothing, towels, or any materials. Do not place magazines, spray cans, or other flammable items within 250 mm of the heater. Covering the heater poses a serious fire hazard.
-  **HOT SURFACE** This symbol means that parts of the heater become very hot during use and remain hot after switching off. Do not touch the heater until it has fully cooled down to avoid burns.

### Safety instructions

Please read these important safety instructions carefully before using the heater. They are intended to help prevent fire, electric shock, injury or property damage.

- **Use this heater only as described in this manual.** Any other use may result in fire, electrical shock, or injury. This will also invalidate the warranty.
- Always connect the heater to a **properly earthed 220–240V AC power supply.**
- **Do not use the heater if the power cord or plug is damaged.** Contact the retailer.
- **Do not extend the power cord** or use extension leads.
- Keep the **power cord away** from the heater body and hot surfaces.
- The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible.
- **Never cover the heater.** Covering it may cause it to overheat and catch fire.
- Do not place the heater:
  - Under curtains or near combustible materials (e.g. furniture, paper, bedding).
  - Within **1.5 metres** of any flammable objects.
  - Directly under a power outlet or terminal box.
- **Do not use in areas with flammable gases, vapours or dust** (e.g. garages or workshops).
- This appliance may be used by children aged 8 years and older, as well as by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, provided they have been properly supervised or instructed on the safe use of the appliance and understand the associated risks.
- Children must not play with the appliance. Cleaning and maintenance must not be carried out by children without appropriate supervision.
- Children under the age of 3 must be kept away from the appliance at all times unless under continuous supervision.

- Children aged between 3 and 8 years may only switch the appliance on or off, and only if it has been installed in its normal operating position and they have been supervised or instructed on its safe use and fully understand the potential hazards.
- Children between 3 and 8 years of age must not plug in, adjust settings, clean, or perform any maintenance on the appliance.
- Ensure the heater is **never positioned where it could fall into water**.
- Never operate the heater with **wet hands** or pull the plug out by the cord.
- The switch or controller **must not be reachable from any bodies of water**.
- CAUTION - Some parts can become very hot and cause burns. Extra attention should be taken when children are present.
- **Do not insert objects** into the heater.
- **Do not leave the heater on unattended** or while sleeping.
- Before cleaning or repositioning:
  - Switch the heater off.
  - Unplug from the mains.
  - Allow it to cool completely.
- Only clean the exterior with a **soft cloth** - no solvents or abrasives.
- **Do not attempt to open, repair or modify the heater yourself**. Contact the manufacturer.



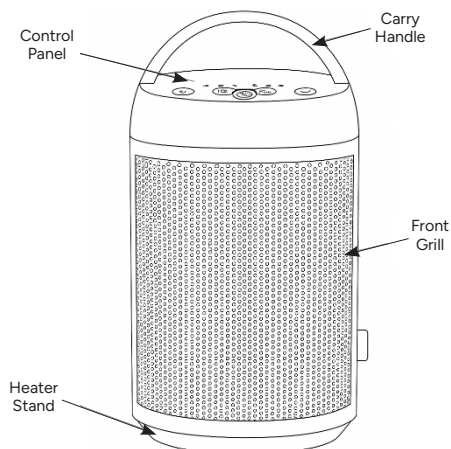
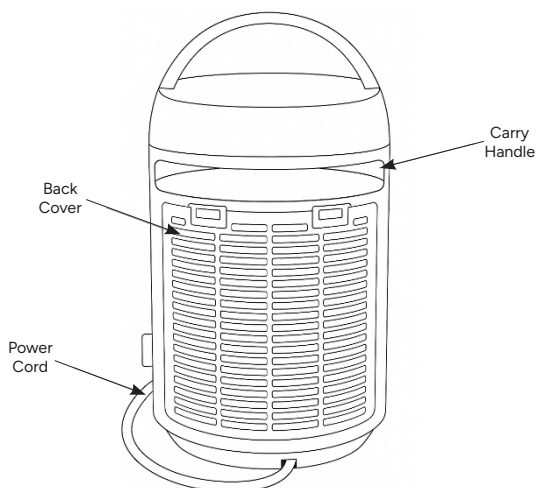
## Warning

**Failure to follow these instructions could lead to severe consequences**, including explosion, property damage, injury, or even death.

**To avoid danger of suffocation please remove all packaging materials** particularly plastic and EPS and keep these away from vulnerable people, children and babies.

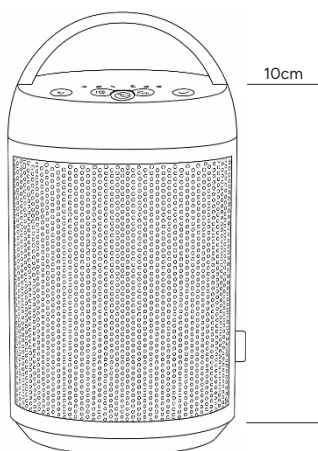
**To avoid the risk of accidental strangulation** from the supply cord all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.

This PTC ceramic heater is designed to provide supplementary heating, making it ideal for boosting the performance of an existing main heating system. It is not intended to be used as a primary heat source or for continuous, long-term operation.

**Front view****Rear view**

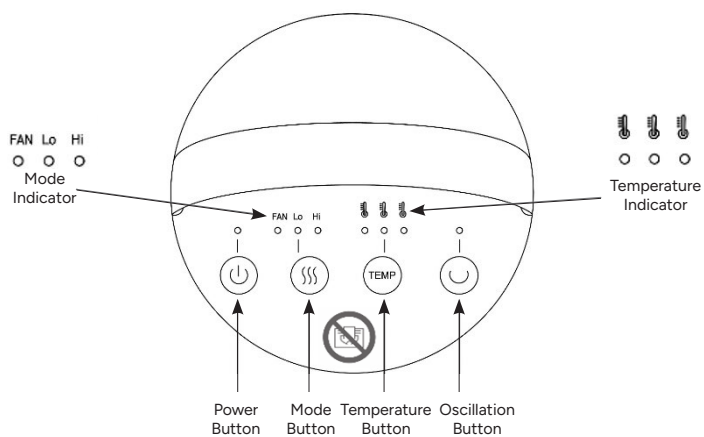
## Minimum clearances

To prevent overheating and ensure safe use, clearance from the heater should be at least 10 centimetres from walls or objects to avoid overheating.



## Technical data

Model	DVSFH15WW	White
	DVSFH15WS	White and Silver
	DVSFH15BB	Black
	DVSFH15BS	Black and Silver
Specification		
Voltage	220-240V~	
Frequency	50-60Hz	
Minimum Power	900W	
Maximum Power	1500W	
Product Size	14.5 x 14.5 x 28cm	
Product Weight	1.5Kg	
Cable Length	1.5m	
Features and Benefits		
Tip Over Switch	Yes	
Carry Handles	Yes	
Fan Function	Yes	
Display	Soft Touch Button Display	



**WARNING:** Risk of overheating  
- never cover the heater during operation.

Please read and follow the instructions below carefully to ensure safe and effective use of the heater.

### Powering on and off

When the plug is connected to the power outlet, the device will enter **standby mode**.

To turn on the heater, press the **Power** button. The heater will begin operating in Low Power Mode for the first use.

To switch off the heater, press the **Power** button again. The device will return to standby mode and the fan will cut out after 60 seconds.

### Mode selection

Once the device is switched on, press the Mode key to cycle through the available heating modes:

#### Fan Mode

Circulates air without heat. Ideal for use in warmer weather or for improving air circulation year-round.

#### Low Power Mode

The heater operates at 900W. Best for smaller rooms or when a mild level of warmth is needed. Helping save energy.

#### High Power Mode

The heater runs at 1500W, providing a faster and more even distribution of warm air throughout the room.

### Temperature control function

While the heater is operating, press the Temperature button to select your desired temperature level:

- Press once for **Low Temperature** (18°C)
- Press twice for **Medium Temperature** (23°C)
- Press three times for **High Temperature** (28°C)
- The corresponding LED indicator will light up based on the selected setting.

**Note:** If the ambient **temperature** detected by the heater is **higher than the set temperature**, the heater will stop operating and the selected temperature LED will flash to indicate this status.

Press the Temperature button a fourth time to exit the temperature control function.

- In this mode, the heater will continue to operate **regardless of the ambient temperature**.
- **No LED indicator** will be lit in this setting.

## Oscillation function

Press the Oscillation button to turn the automatic oscillation function on or off.

When enabled, the heater will rotate horizontally from left to right within a 60° range, helping to distribute warm air more evenly across the room.

## Auto power off function

To enhance safety, the heater will **automatically power off 8 hours of use**.

**To disable this function:**

- Unplug the heater and plug it back in.
- Do not turn the heater on.
- Within 10 seconds, press and hold the **Temperature** button for 5 seconds.
- The High temperature indicator will begin to flash slowly, indicating that the auto power-off function has been disabled.

**Note:** This function will automatically be re-enabled the next time the heater is plugged in.

## Tip-over protection

For your safety, the heater is equipped with a **tip-over switch**.

If the heater is accidentally knocked over or tilted beyond a safe angle, the power supply will be **automatically cut off**, and the heater will **stop operating**.

The heater will resume normal operation once it is **returned to an upright position**.

Please follow the cleaning and maintenance instruction carefully. Failure to follow these guidelines may void your warranty.

### Before you begin

- Always switch off the heater and unplug it from the socket before cleaning.
- If the heater is hardwired directly into the mains, it must be switched off at the isolator or circuit breaker before any cleaning begins.
- Allow the heater to cool down completely before handling or cleaning.
- Do not attempt to disassemble the heater to clean any internal components.

### Cleaning the heater

- Only the exterior surface of the heater should be cleaned by the user.
- Use a soft, dry cloth for routine cleaning.
- Operating the heater in an unclean or obstructed condition may lead to damage or reduced performance and may void the warranty.

### Storage

If the heater will not be used for a prolonged period, especially in humid or coastal areas, make sure it is:

- Fully cleaned and dried
- Stored in safe packaging to protect against dust and moisture.
- Kept in a dry, indoor location out of reach of children.
- By following these steps, you'll help maintain the performance, appearance, and safety of your heater for years to come.

### Repairs and servicing

- The heater contains no user-serviceable parts.
- Do not attempt to repair or modify any electrical or mechanical components.
- If the heater is damaged, defective, or not working correctly, return it to the retailer or contact a qualified service professional.

Category	Item	Symbol	Value	Unit	Description	Included
Heat Output	Nominal heat output	P <sub>nom</sub>	1500	kW	Single-stage heat output, no room temperature control	No
	Minimum heat output (indicative)	P <sub>min</sub>	900	kW	Multiple manual stages, no room temperature control	No
	Maximum continuous heat output	P <sub>max,c</sub>	1500	kW	With mechanical thermostat for room temperature control	No
	Electronic room temperature control	-	-	-	Heater includes electronic thermostat for room temperature regulation	No
Power Consumption	Power consumption in off mode	P <sub>o</sub>	N/A	W	With electronic temperature control and day timer	No
	Power consumption in standby mode	P <sub>sm</sub>	0.36	W	With electronic temperature control and weekly timer	No
	Power consumption in idle mode	P <sub>idle</sub>	0.46	W	-	-
	Power consumption in network standby mode	P <sub>ns</sub>	N/A	W	With presence detection functionality	No
	Standby mode with display of information	-	No	-	With open window detection	No
Efficiency	Seasonal space heating energy efficiency	$\eta_{s,on}$	91.5	%	Measured during active operation	-
Other Control Options	Distance control capability	-	-	-	Remote or app-based control functionality	No
	Adaptive start control	-	-	-	Automatically adjusts start time based on heating needs	No
	Working time limitation	-	-	-	Ability to set usage time limits	Yes
	Black bulb sensor	-	-	-	Sensor for radiant heat detection	No
	Self-learning functionality	-	-	-	Learns user habits to optimize heating schedule	No
	Control accuracy	-	-	-	High-precision control of room temperature	No

### Extend your Devola warranty for free

#### Register your product within 30 days of purchase

When you register your Devola product on our website within 30 days of purchase, we'll extend your standard manufacturer's warranty by an additional 12 months from the point of purchase – completely free of charge.

Register on the Devola website using the QR code below



If your product develops a fault within the warranty period, we'll either:

- Repair it at no extra cost
- Replace it with a new or refurbished item of similar condition
- any necessary postage costs

#### Please note:

- The warranty does not cover issues caused by general wear and tear, improper use, or damage not resulting from defects in materials or workmanship.
- Tampering with or opening the product will void your warranty.

If something goes wrong, get in touch with our **Customer Care Team** first. They'll guide you through the warranty process and ensure things are resolved smoothly



UK  
CA



Recycle unwanted materials instead of disposing of them. All appliances and packaging should be sorted and tendered at a regional recycling centre and be processed in an environmentally friendly manner.

## Product registration.

Register your warranty online  
within 30 days of purchase.

[www.devola.co.uk/warranty](http://www.devola.co.uk/warranty)

## Technical details.



## Support.

### Address

Unit 1, Reedswood Park Road  
Walsall WS2 8DQ

### Helpline

0800 043 4243

### Email

[info@devola.co.uk](mailto:info@devola.co.uk)

[devola.co.uk](http://devola.co.uk)