 
 


INSTALLATION MANUAL



Eastbrook Code	Adjustment	Eastbrook Code	Adjustment
69.0039	490-500	69.0040	690-700
69.0041	750-760	69.0042	790-800
69.0043	890-900	69.0044	990-1000
69.0045	1190-1200	69.0046	1390-1400

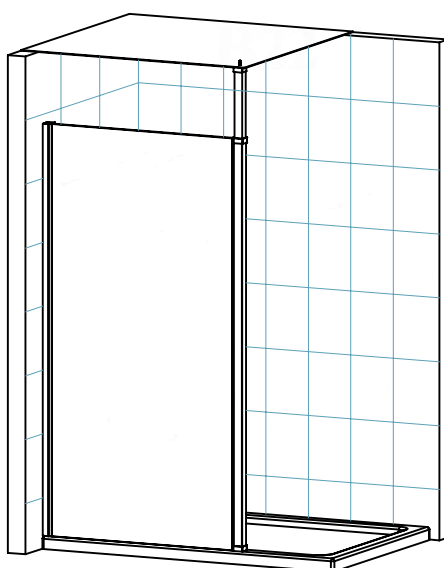

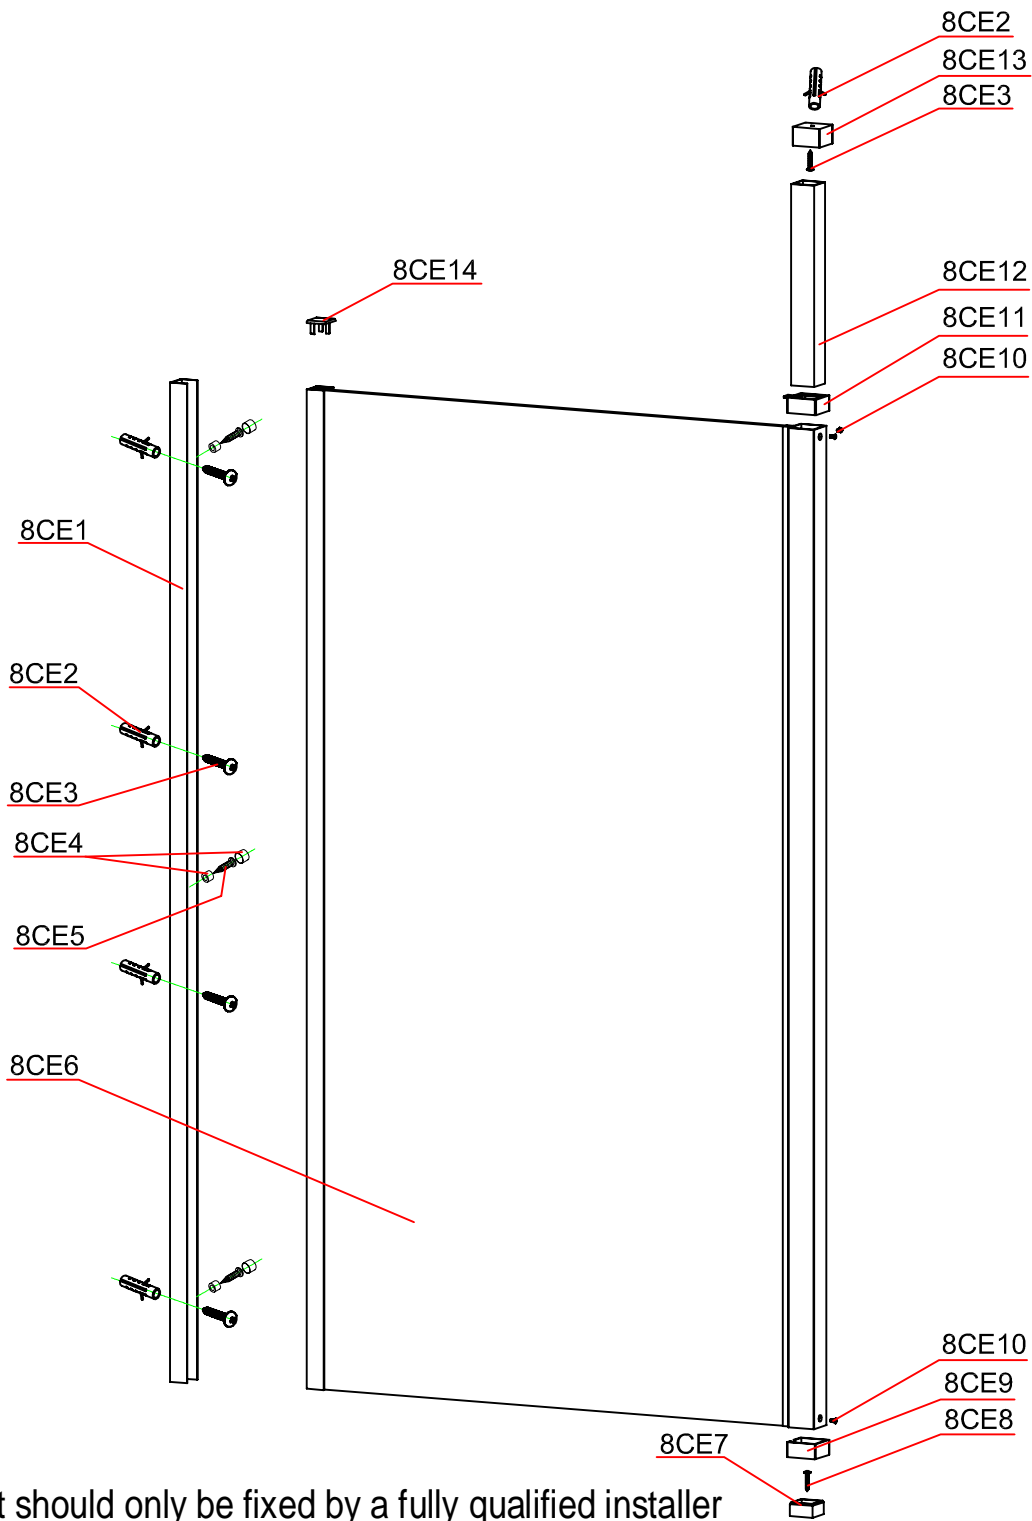


This product should only be fixed by a fully qualified installer

<p>8CE1</p> <p>1X</p>	<p>8CE2</p> <p>5X</p>	<p>8CE3</p> <p>5X</p>	<p>8CE4</p> <p>3X</p>	<p>8CE5</p> <p>3X</p>	<p>8CE7</p> <p>1X</p>	<p>8CE8</p> <p>1X</p>
<p>8CE9</p> <p>1X</p>	<p>8CE10</p> <p>3X</p>	<p>8CE11</p> <p>2X</p>	<p>8CE12</p> <p>1X</p>	<p>8CE13</p> <p>1X</p>	<p>8CE14</p> <p>1X</p>	


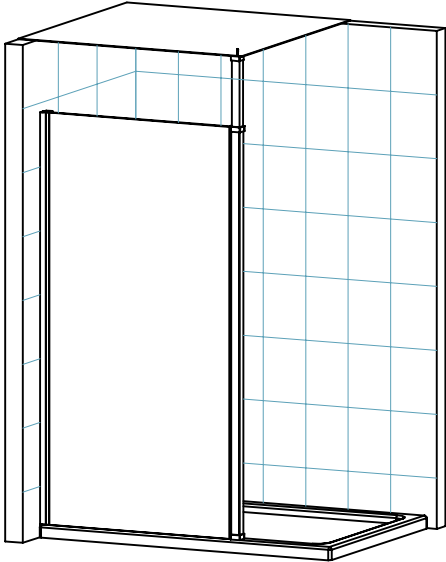 
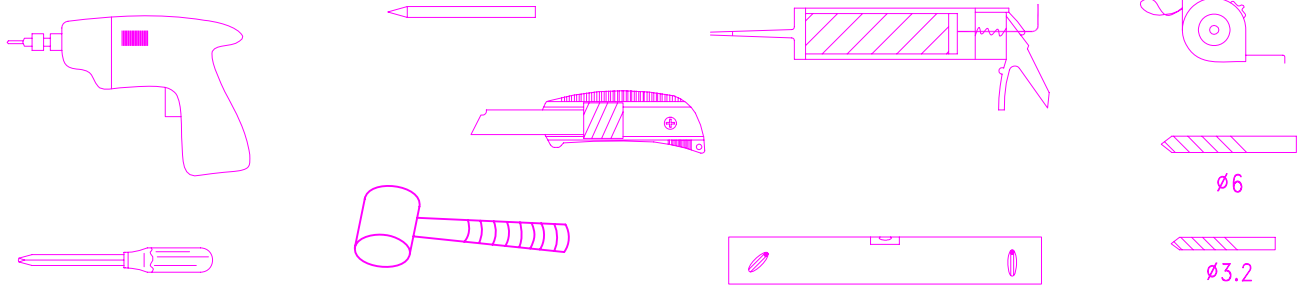 


LH



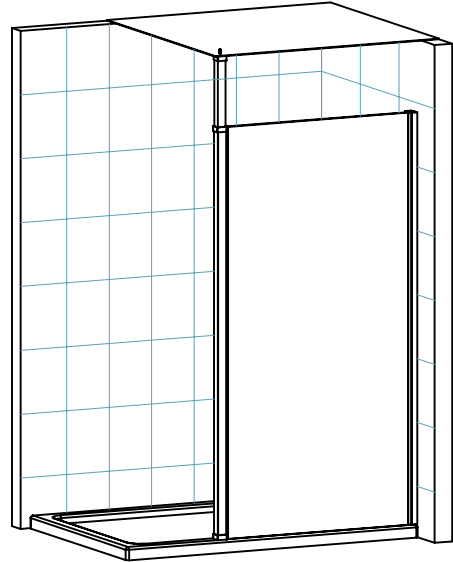 


RH

 
 
 
1L

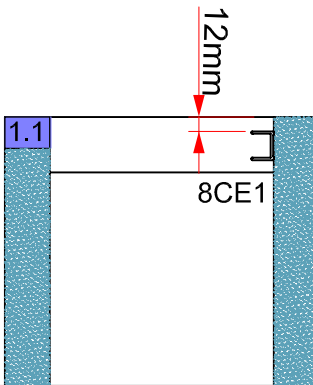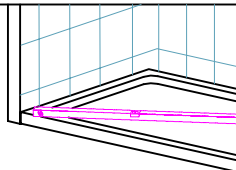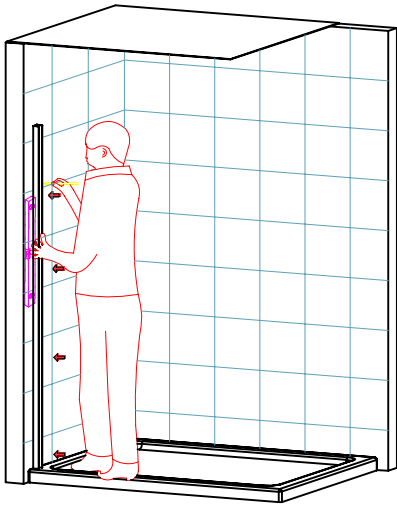




1R

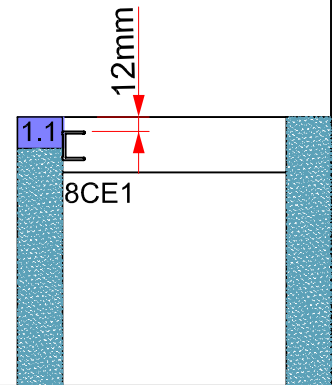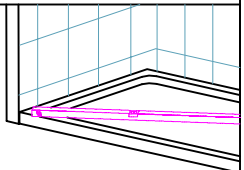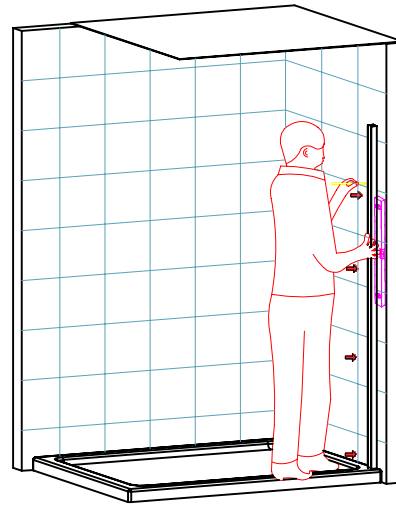   



2L

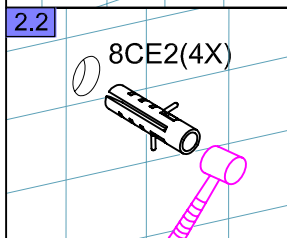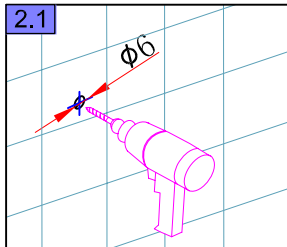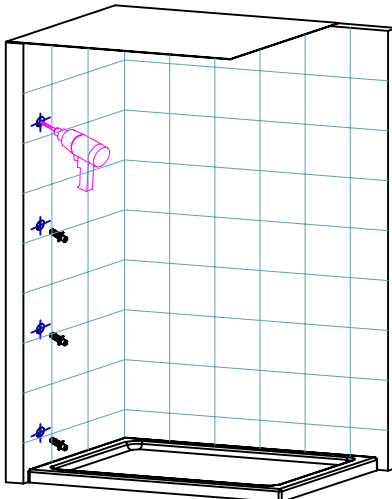   



2R

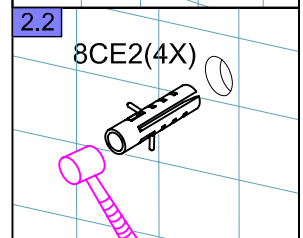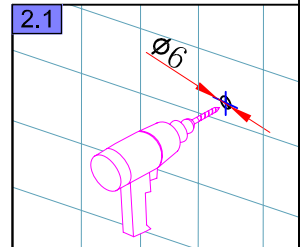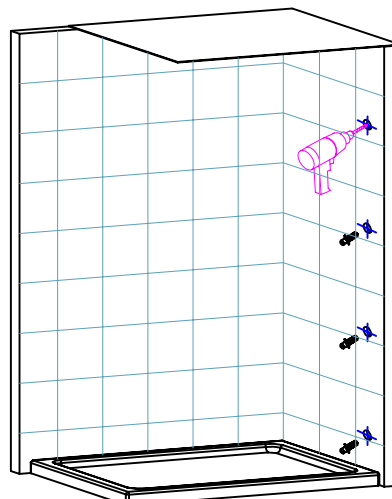   



3L

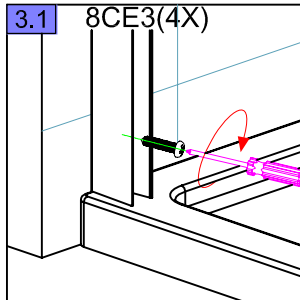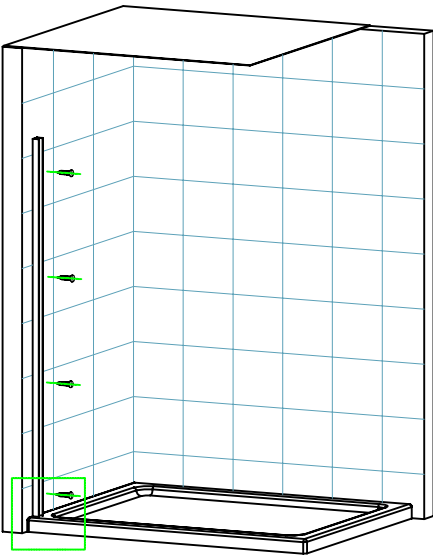  



3R

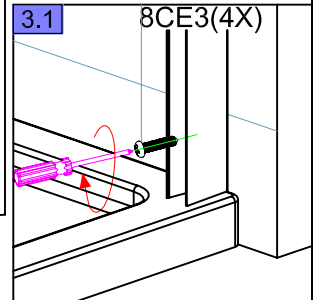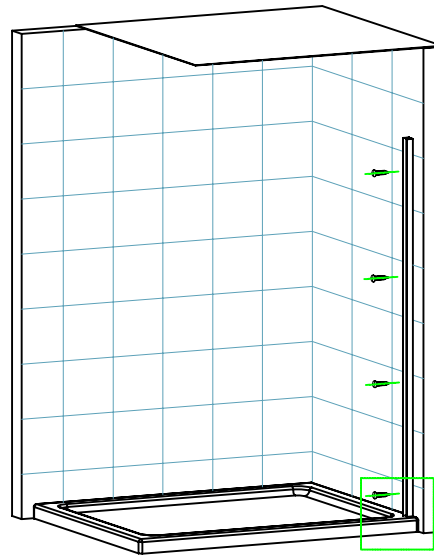  



4L

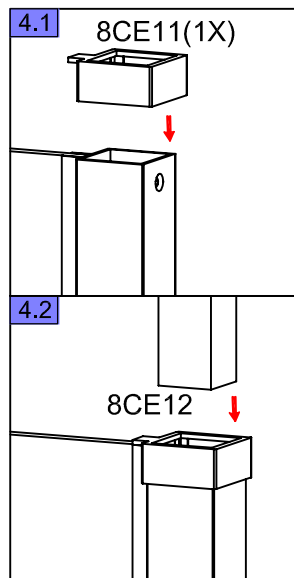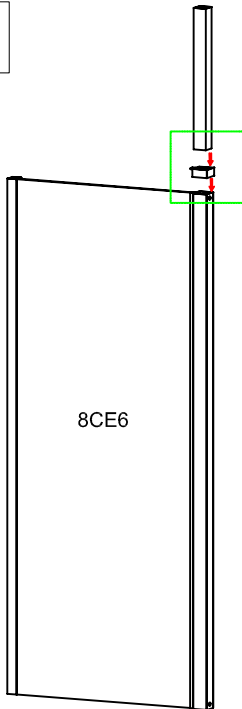  



4R

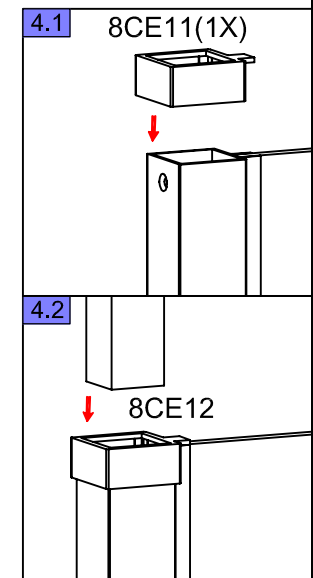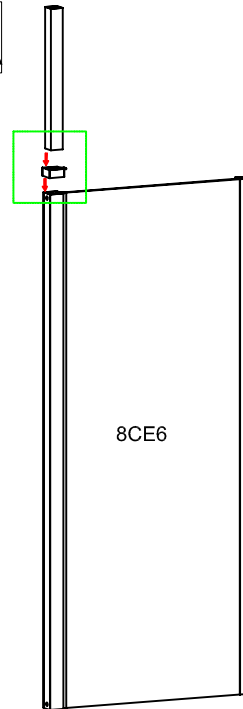  


5L

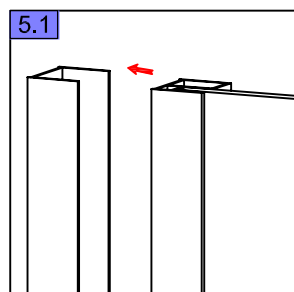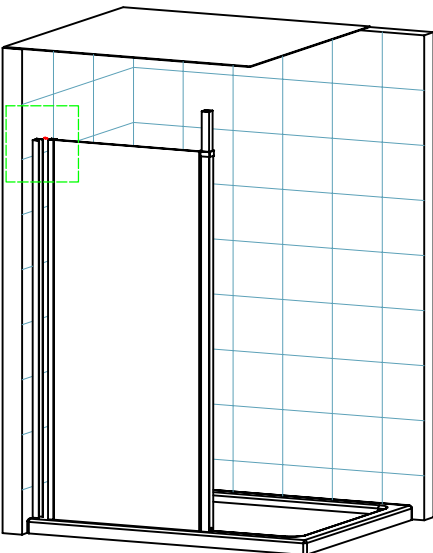  

5R

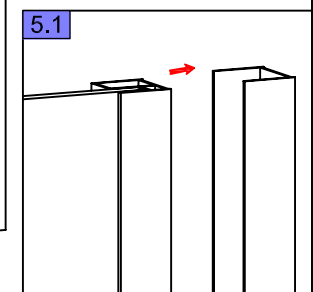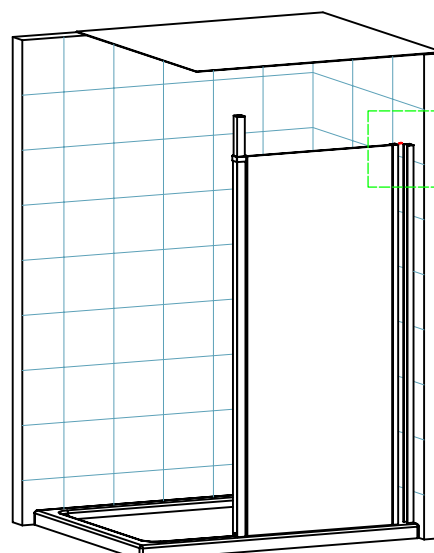  


6L

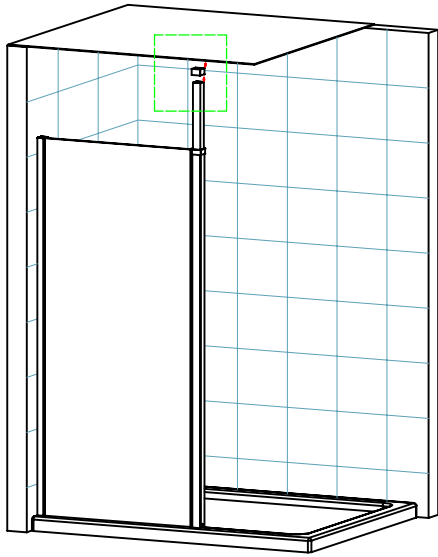 


6.1



 
6.2



 
6.3

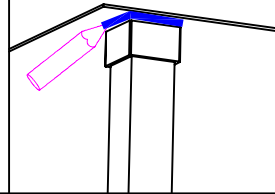


6R

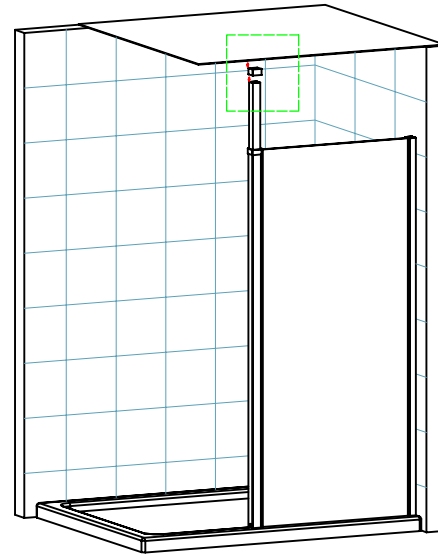 

 
6.1



 
6.2

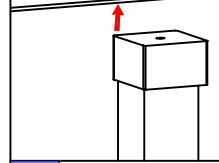

 
6.3

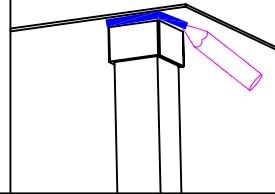


7L

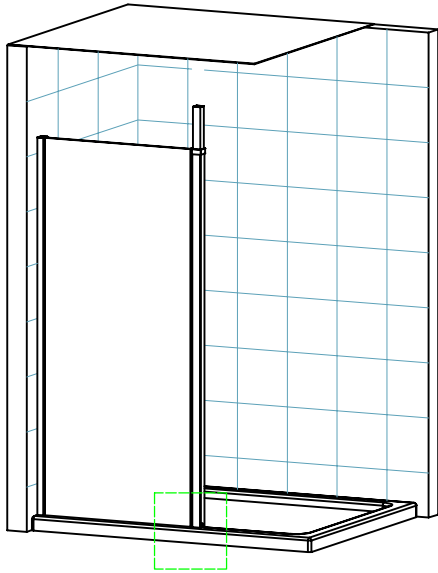 

 
7.1

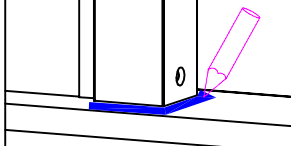


7R

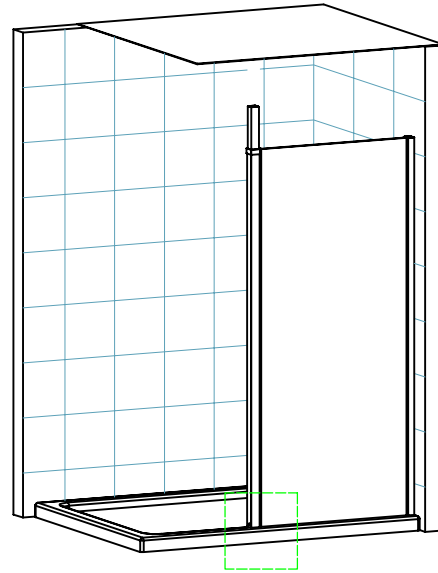 

 
7.1

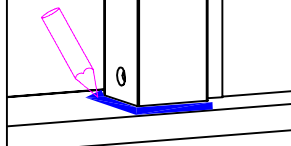


8L

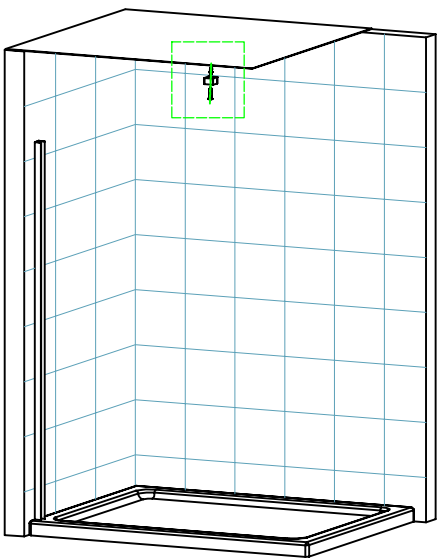 

 
8.1

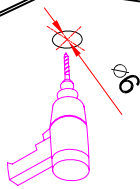

 
8.2

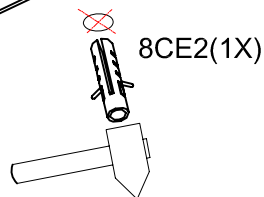

 
8.3

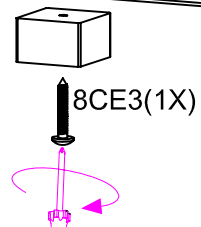


8R

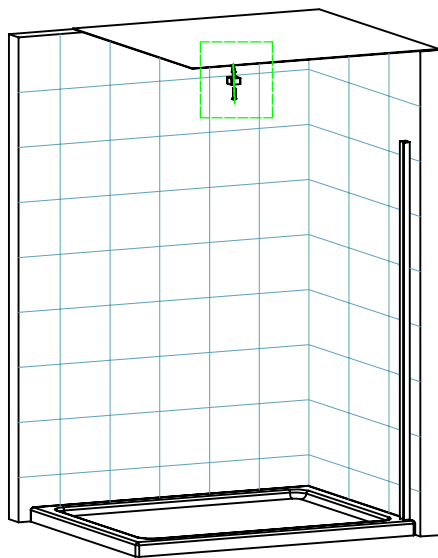 

 
8.1

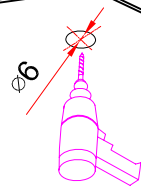


 
8.2

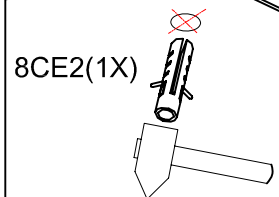


 
8.3

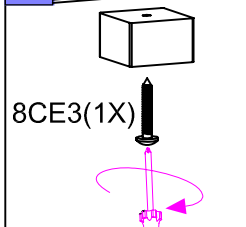



9L

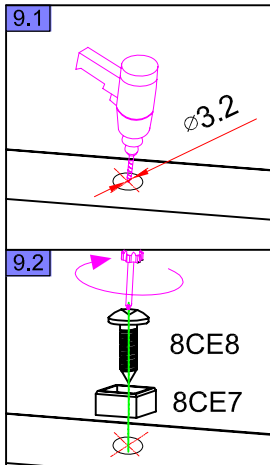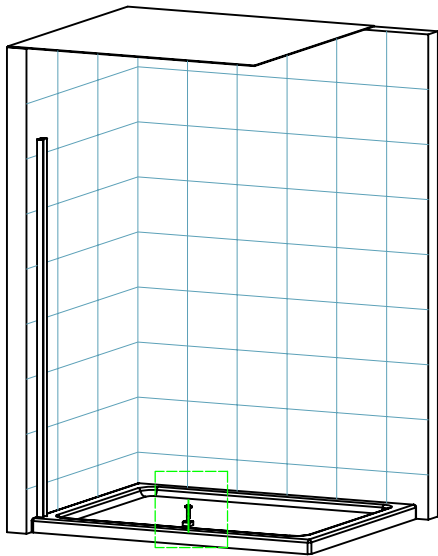  



9R

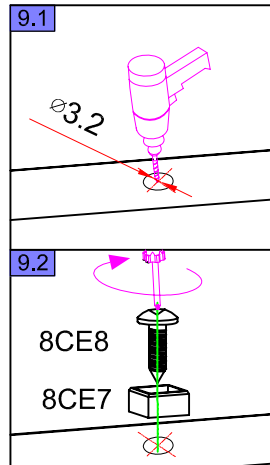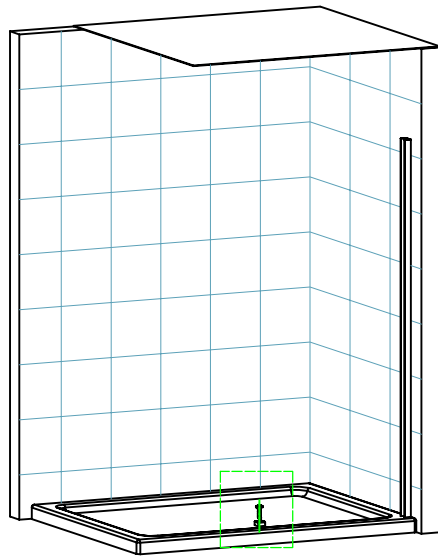  



10L

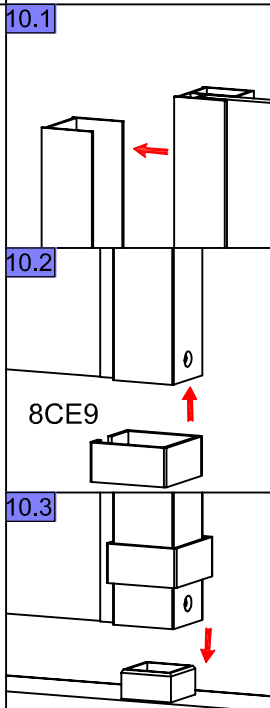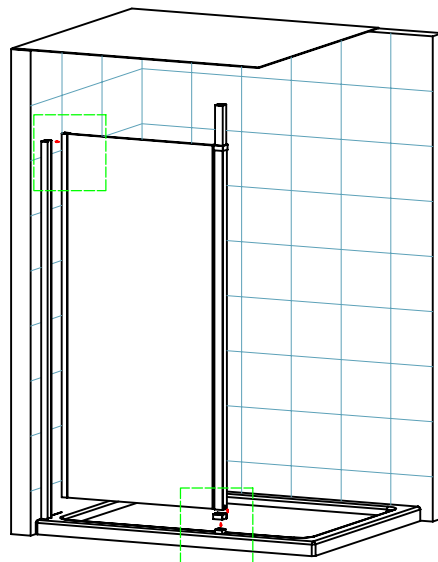  



10R

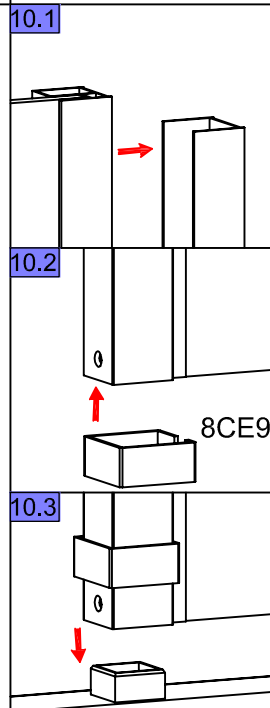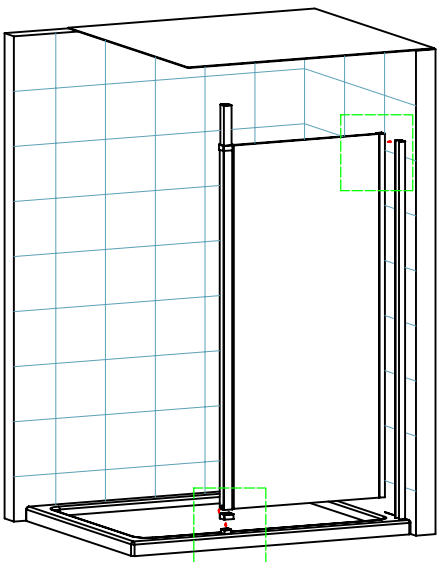  


11L

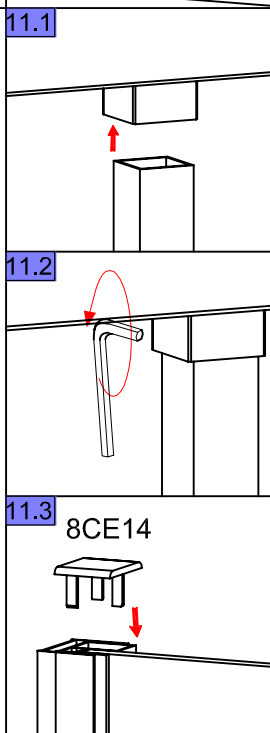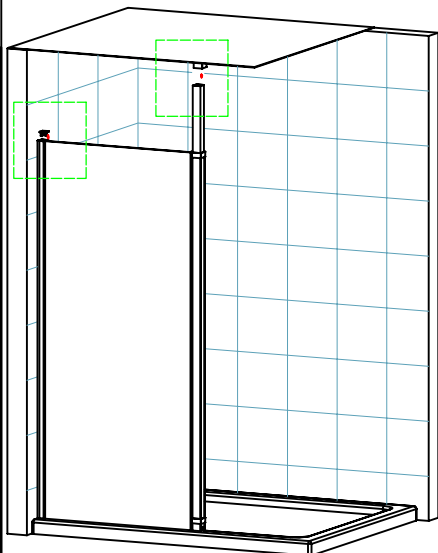  


11R

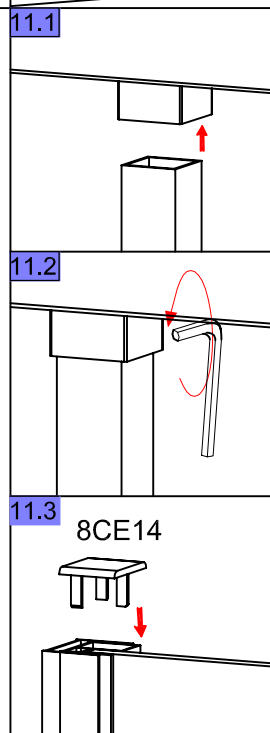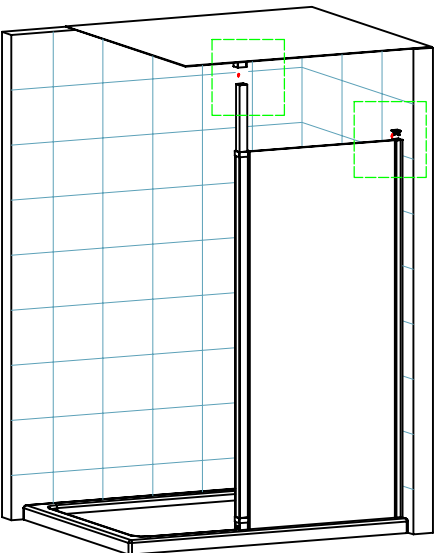  

12L

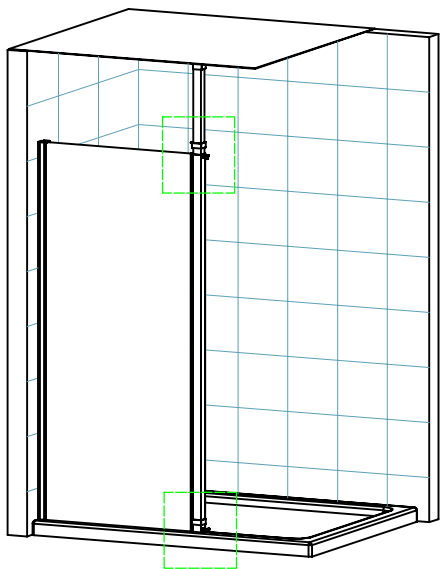 


 12.1

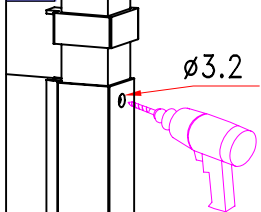


ø3.2

 12.2

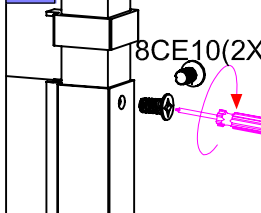


8CE10(2X)

 12.3

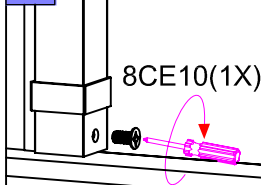


8CE10(1X)

 12R

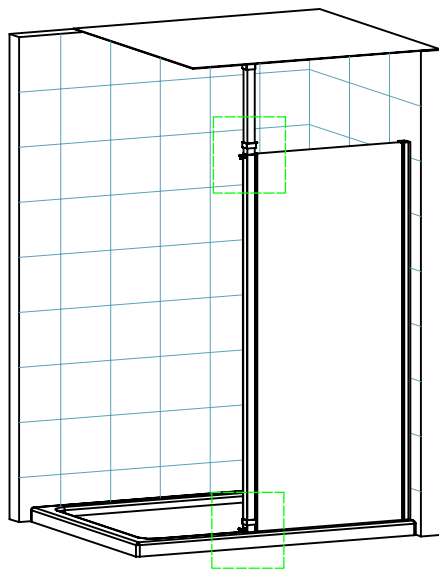


 12.1

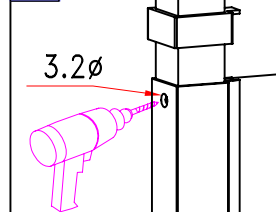


3.2ø

 12.2

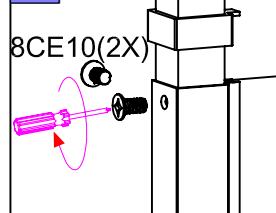


8CE10(2X)

 12.3

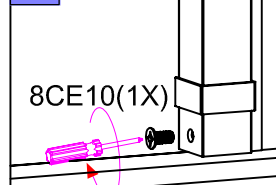


8CE10(1X)

 13L

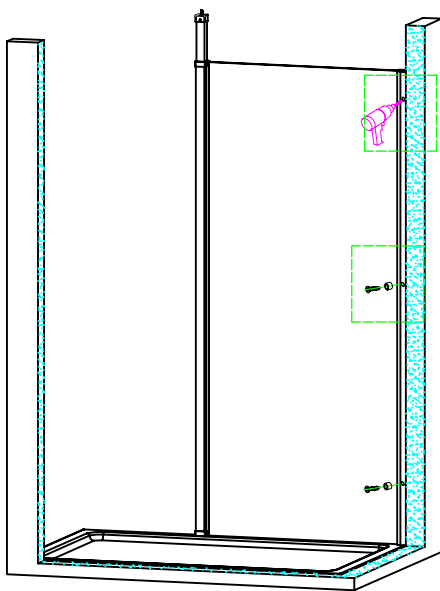


 13.1

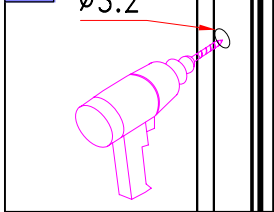


ø3.2

 13.2

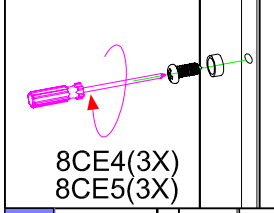


8CE4(3X)
8CE5(3X)

 13.3

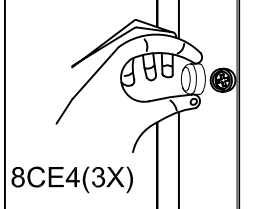


8CE4(3X)

 13R

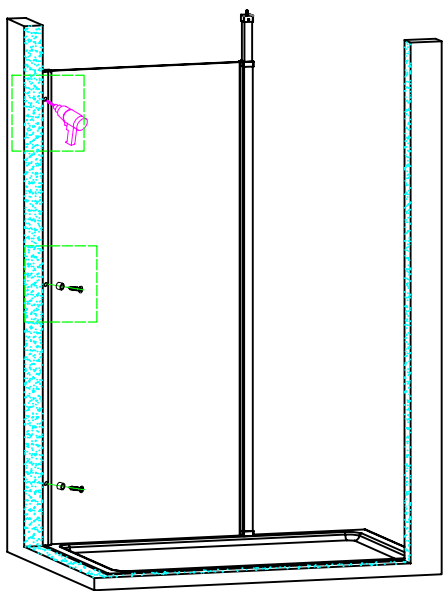


 13.1

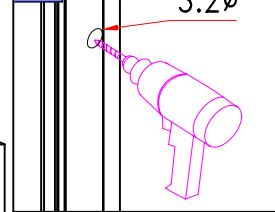


3.2ø

 13.2

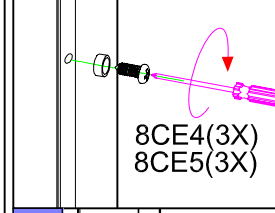

8CE4(3X)
8CE5(3X)


 
13.3

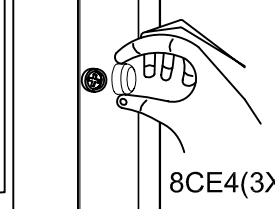

8CE4(3X)


14L

  Silicone on the outside of the screen only

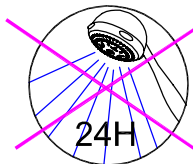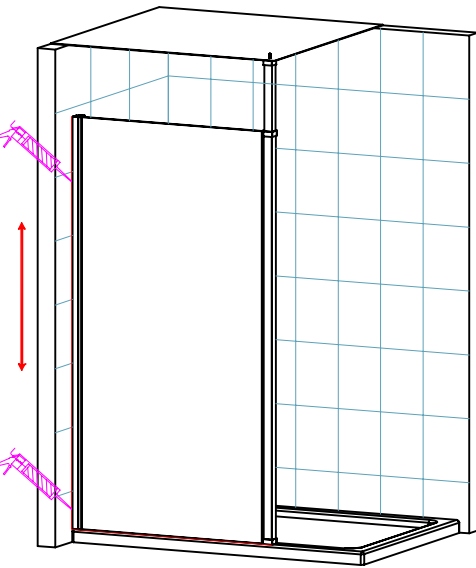



24H

 14.1

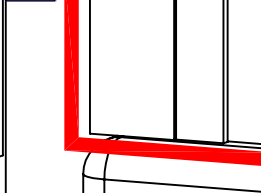


14R

  Silicone on the outside of the screen only

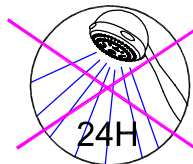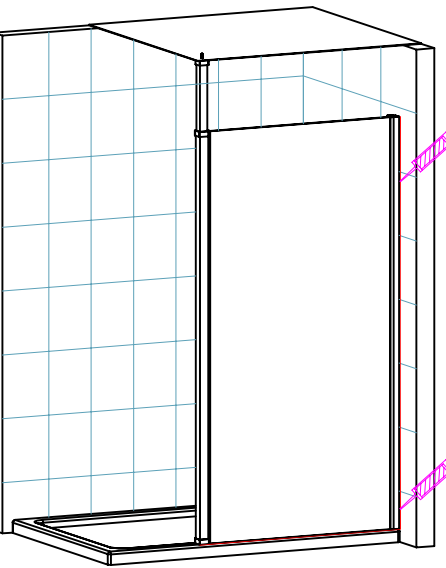

24H

 14.1

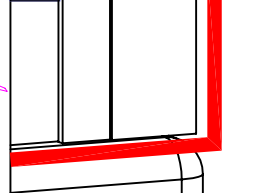

Cleaning & Maintenance

Don't clean the shower enclosure with irritant detergent such as alcohol,bleach or other chemical cleaners.

Only clean with warm soapy water.

After the installation is completed,should you find that there is notable noise when the glass door moves,you may add a small quantity of lubricant onto the roller wheel,slipping hook and the track.

Helpline: 01452 317890