



This product should only be fitted by a fully qualified installer.

1

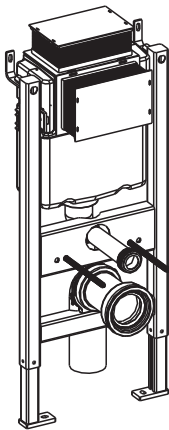


Soil pipe not supplied

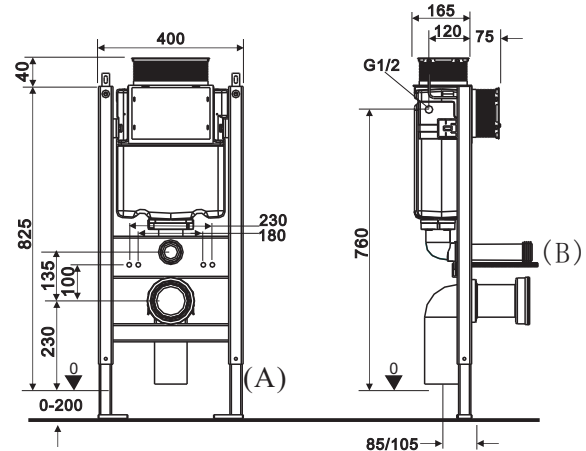


①Set frame to height required for chosen pan and soil pipe requirement. Adjust at section (A).

2

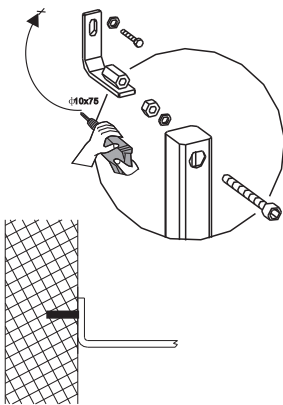


Fit wall straps to frame and attach to wall ②. Check floor fixing are in position required, then fix down with fittings supplied ③. Fit required pan connector (not supplied).


3

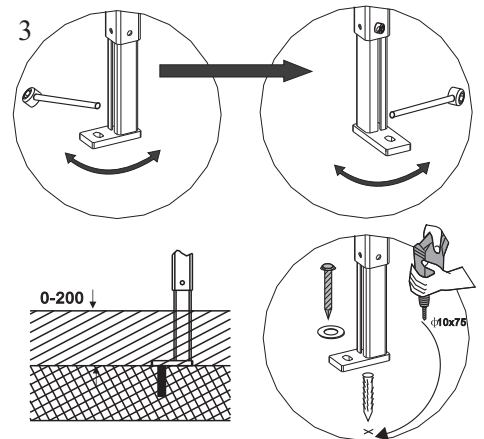


4

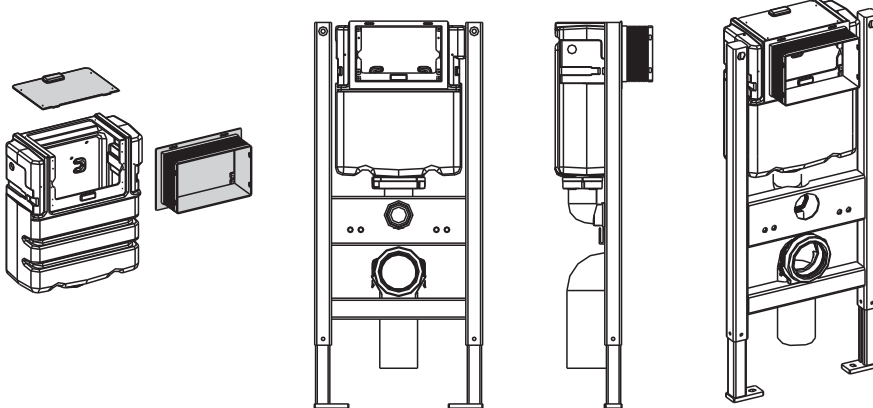



5

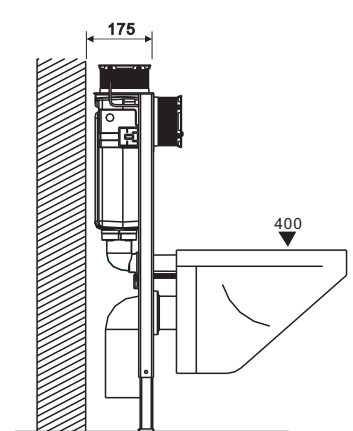

Fix partition wall spacer ④ . Fit chosen pan with bolts supplied ensure pan connector, bolts and male flush pipe (B) are left long enough for depth of partition wall and tiles ⑤ . Test flush and check all joints for leaks. Remove pan construct partition wall. It is the responsibility of the installer to ensure an access panel is provided to enable all maintainable parts to be changed without the need for any re-tiling or grouting.

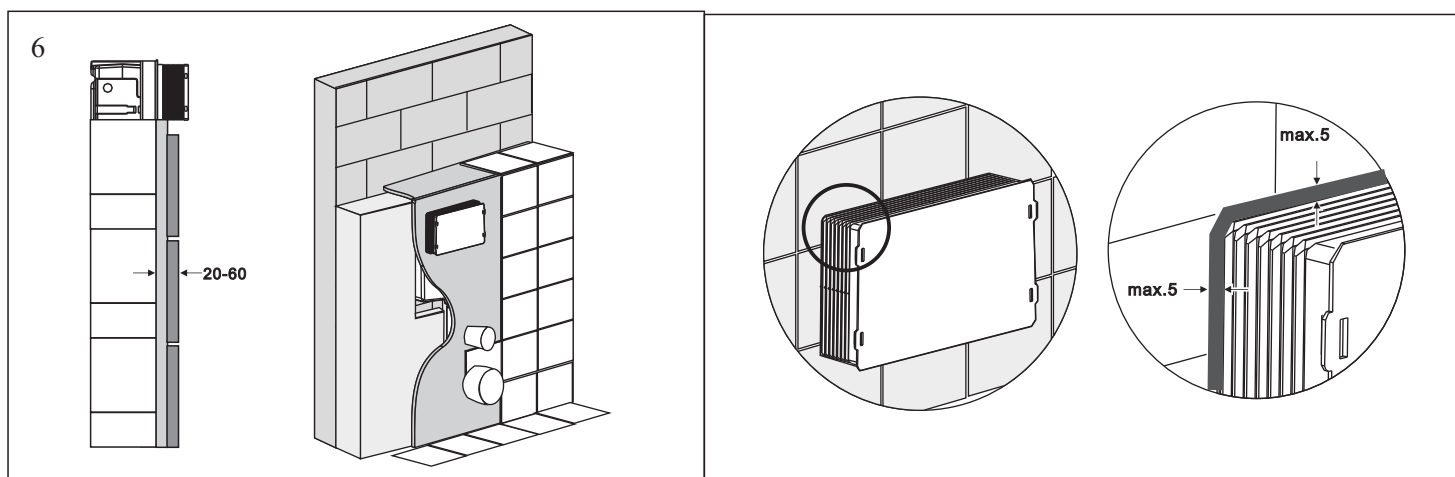

Tile partion wall ⑥ ensuring tiles are within 5mm of partion wall spacer.

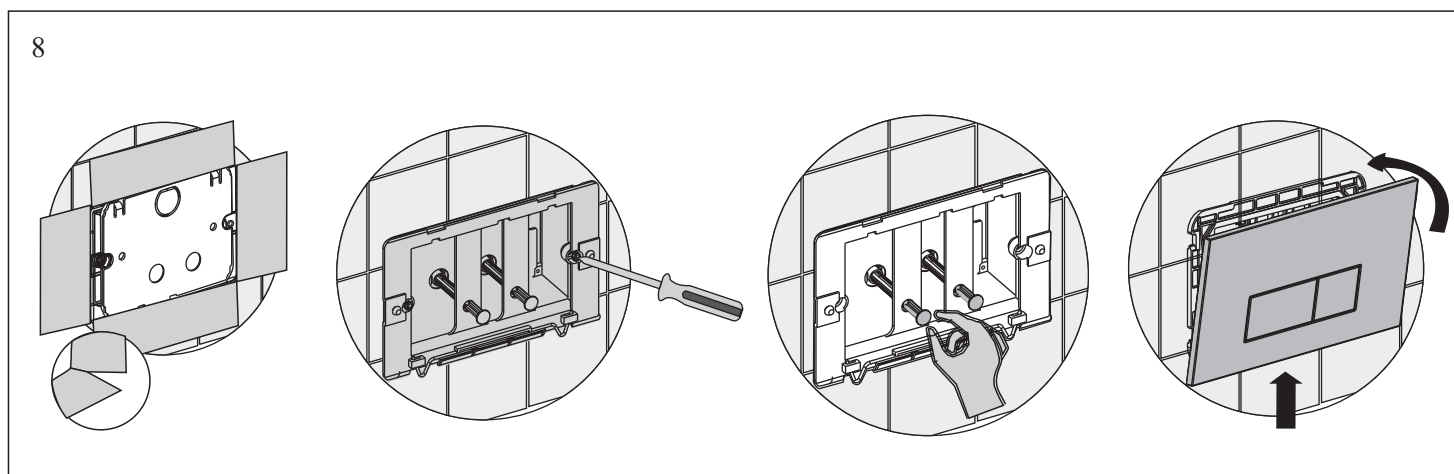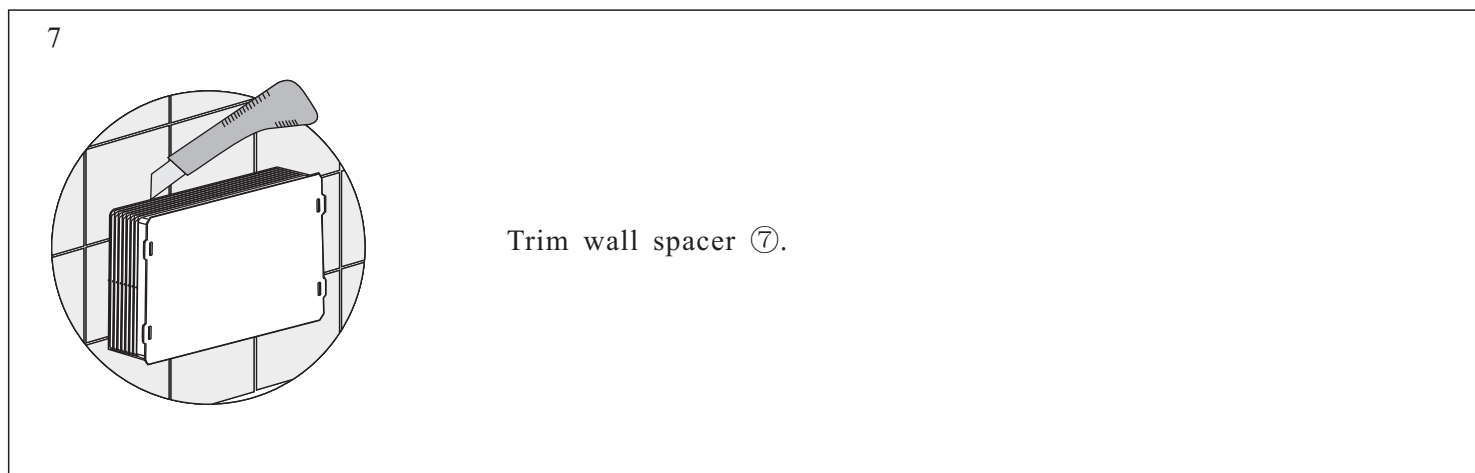


Fit flush plate bracket. Push rods should screw up to smooth shoulder, trim accordingly and install.
Fit flush plate (supplied separately).

Helpline:01452 317 890


Product Installation

This product should only be fitted by a fully qualified installer.

1

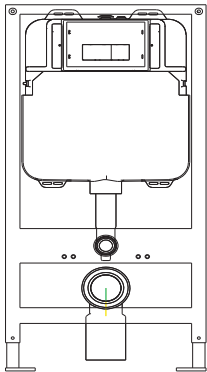


Soil pipe are not supplied

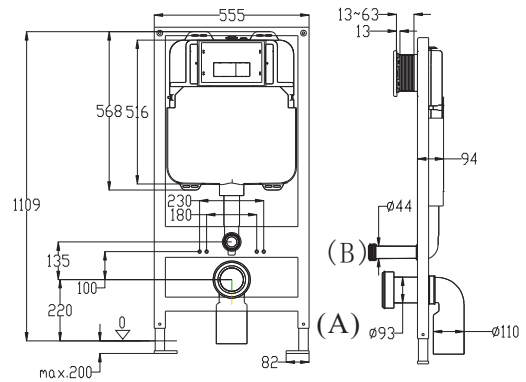


①Set frame to height required for chosen pan and soil pipe requirement. Adjust at section (A).

2

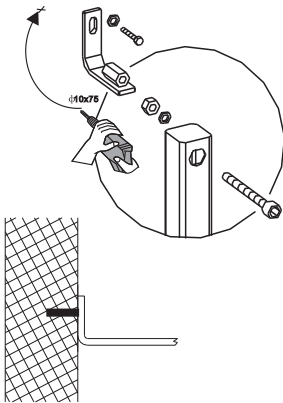


Fit wall straps to frame and attach to wall ②. Check floor fixing are in position required, then fix down with fittings supplied ③. Fit required pan connector (not supplied).


3

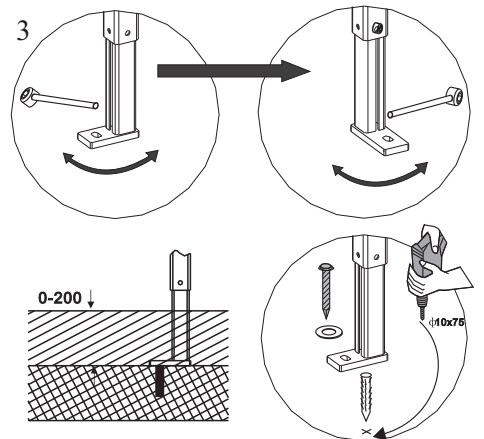



4

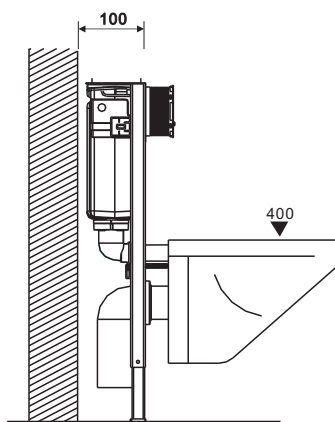

Fit chosen pan with bolts supplied ensure pan connector, bolts and male flush pipe (B) are left long enough for depth of partition wall and tiles ⑤. Test flush and check all joints for leaks. Remove pan construct partition wall. It is the responsibility of the installer to ensure an access panel is provided to enable all maintainable parts to be changed without the need for any re-tiling or grouting

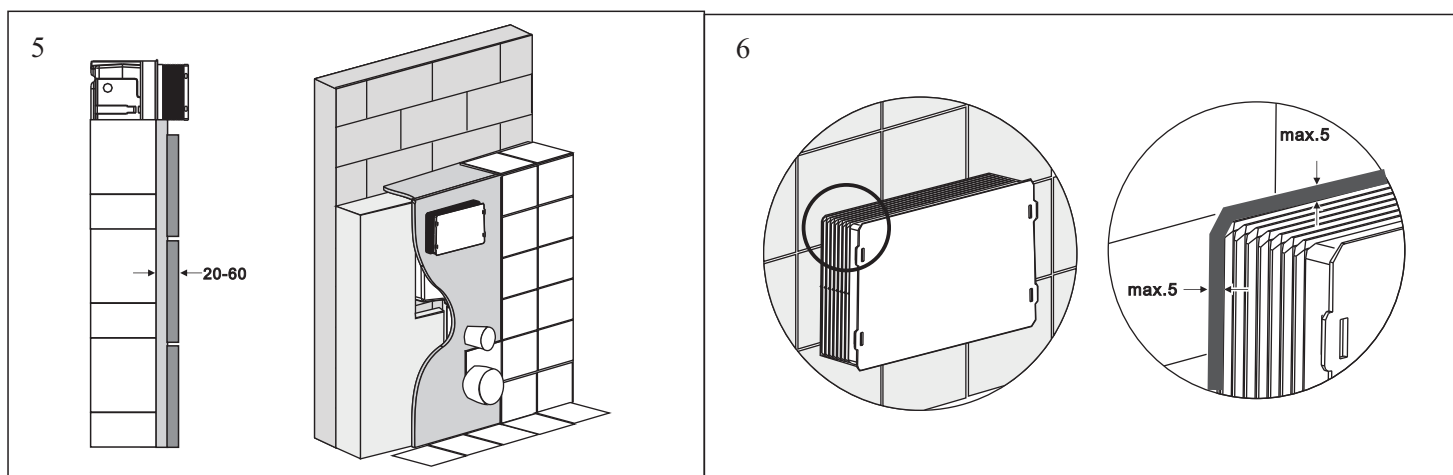

Tile partition wall ⑥ ensuring tiles are within 5mm of partition wall spacer.

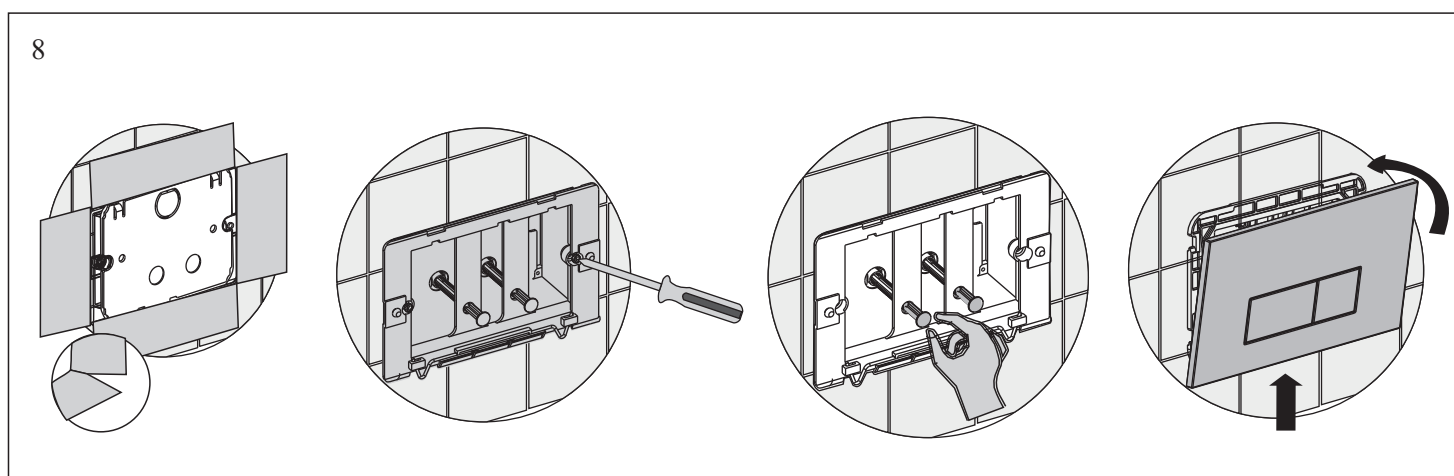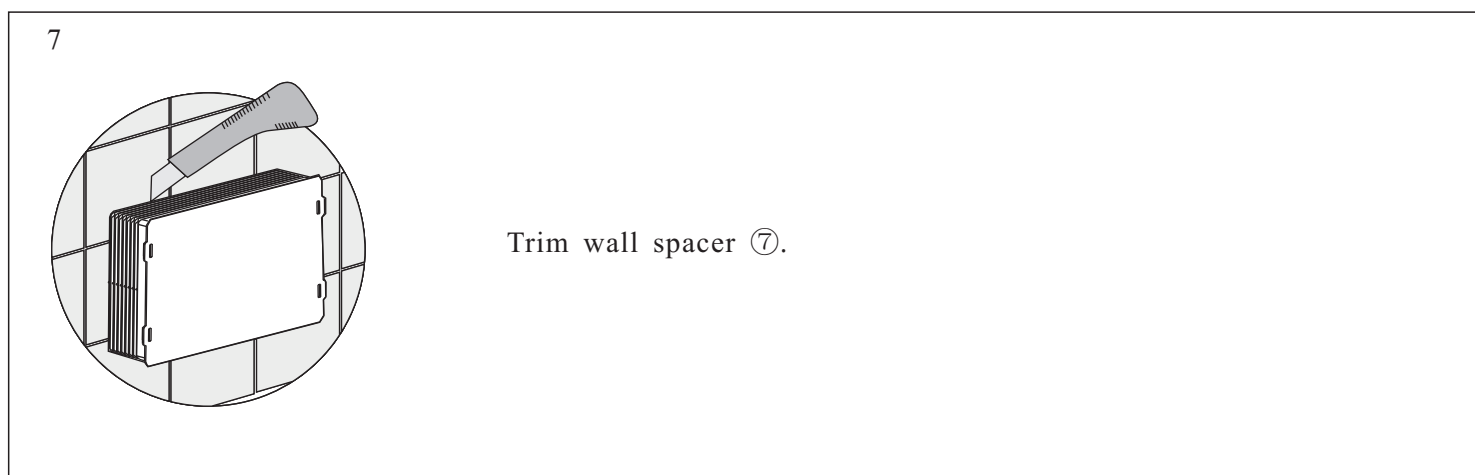

Fit flush plate bracket. Push rods should screw up to smooth shoulder, trim accordingly and install.
Fit flush plate (supplied separately).

Helpline: 01452 317 890