

Pictures for below products is for installation purpose only, actual products may differ slightly.

### BEFORE YOU BEGIN

**It is advised that the installation of this valve is carried out by a fully qualified plumber .**

#### Note to Installer

Please ensure that all items are inspected for fault / damage prior to any installation commencing. Products will not be accepted back if damage is found after installation has commenced. Please retain all original packaging in case the item is to be returned. Goods will not be accepted back unless in the original packaging.



#### Preparation

Ensure the radiator is clean from debris before you start to install the valve. Please see next page for an illustrated step by step installation guide.


#### Daily Care Instructions

1. The surface of the valve is cleaned with warm soapy water. Strong acid and alkaline cleaning agents are not suitable for the cleaning of the surface.
2. Limescale, rust, etc. on the valves. Simply wipe the surface with a damp cloth or sponge dipped in a little distilled vinegar solution, then dry with a clean rag or rinse well water.


### INSTALLATION

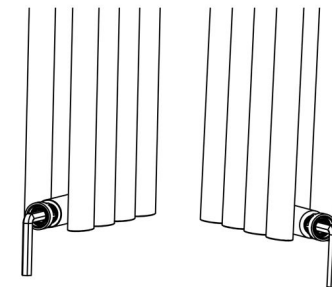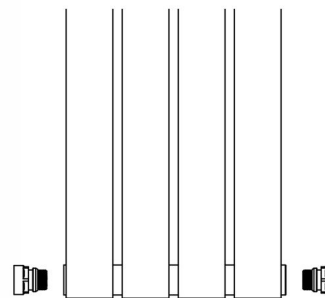


1. Fit the connector into the hex nuts.
2. Wrap PTFE tape clockwise around the connector thread and screw it onto the radiator with a hex spanner.

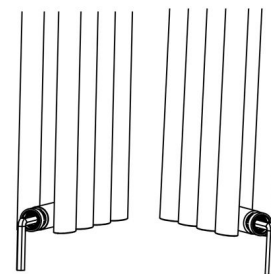

3. Screw them on.

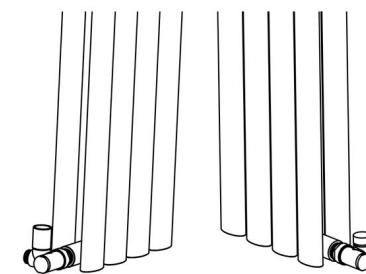

4. Fit the radiator valves.

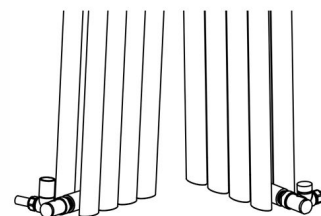

5. Fix hex nuts, clamps and pipes.