

Installation and operation instructions

I. Installation Notice.


1. Flush pipes before installation.
2. After installation, ensure you have secured connections and have no leaks.

II. Operation Notice.


1. The product is used between water pressure 0.5 to 4bar, water temperature 0-70°C.
2. **This bath filler waste is suitable to be installed in a bath tub with thickness of 1-11mm (as Figure I).**
3. Regularly clean the Mixer with soft damp cloth.
4. Read all the instructions completely before proceeding.

III. Installation steps(Figure II).

1. Remove both sides of adapter connector 2.
2. Remove lock nut 5, remove 4,3 out in order.
3. Mixer body 1 should be placed in bathtub overflow hole A (Pay attention to use S2.5 wrench adjustment M4 screw length).
4. Apply washer 3 and overflow ring 4 into mixer body in order, then tighten 5. (Pay attention to adjust the direction and the location of the overflow of Mixer body 1).
5. Clic-Clack Bath Waste 7 to be installed to bathtub .
6. Apply 10, 9, 8 into plastic pipe 6 in order and connect to bath waste 7 (inlet c), use the part 10 plastic nut to lock part 7 bath waste.
7. Apply two adapter connectors 2 in mixer body 1, and connect to inlet tube 11 (as Figure III, Pay attention to the direction of the cold and hot water inlet). Two inlet tubes(11) are prepared by user.
8. Turn on water supply valve and handle to check all the joints to ensure there is no leakage .

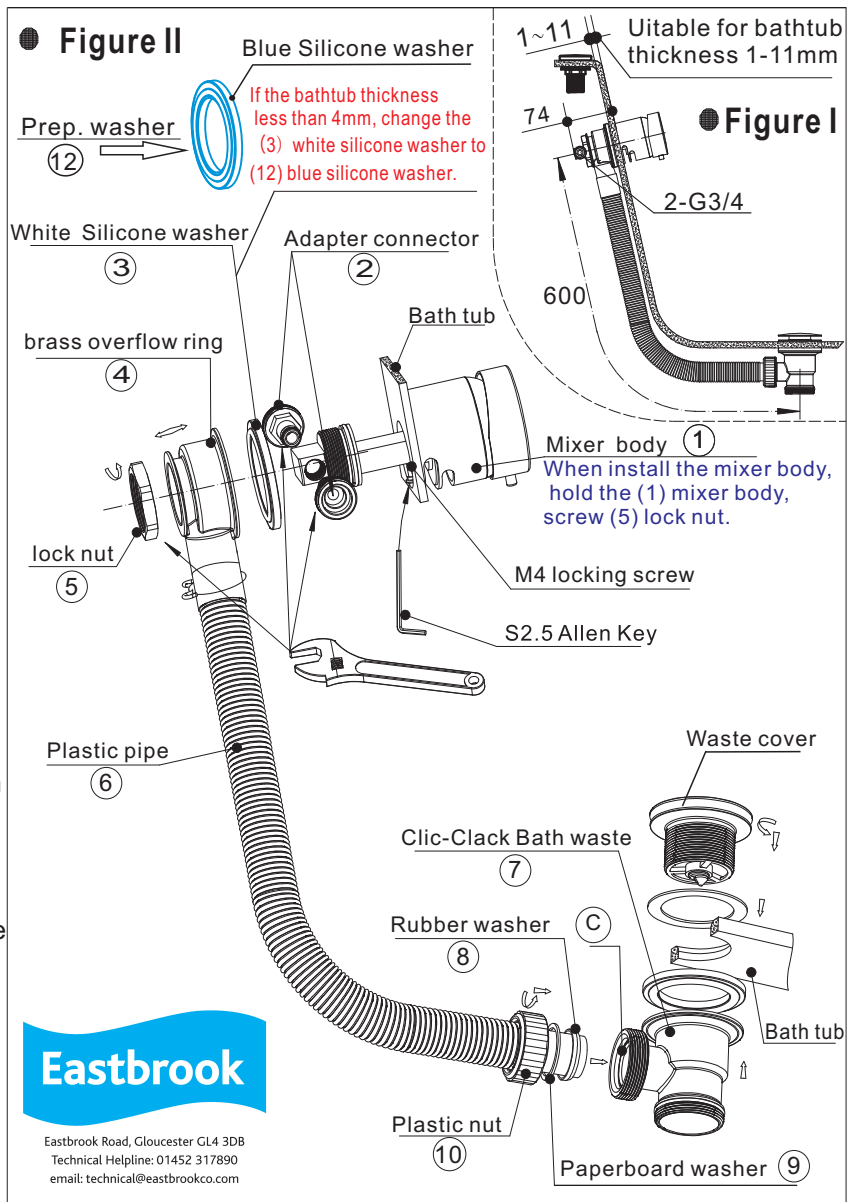


● Figure III

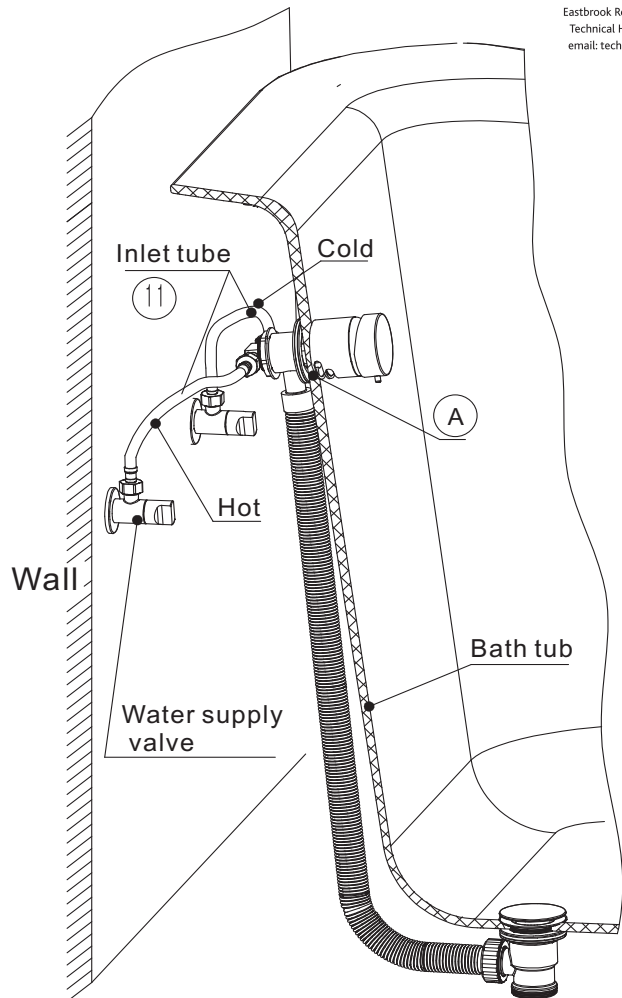

Eastbrook Road, Gloucester GL4 3DB
Technical Helpline: 01452 317890
email: technical@eastbrookco.com

● Figure IV

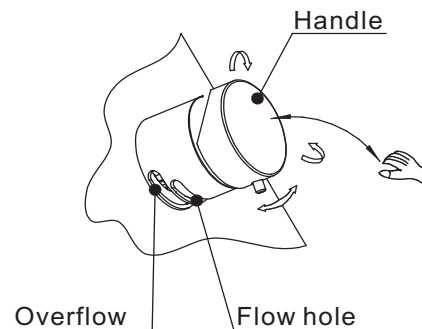

IV. Operating Instruction (Figure IV).

1. Adjusting the flow rate and the water temperature: Moving the handle left right will control the flow and temperature of the water.

Note: Once assembled, fill the bath with water, check for leaks.

