

TYPE 11 & TYPE 22 FLAT PANEL RADIATORS Instruction Manual

INSTALLATION GUIDE

1

• Choose the distance between wall and radiator (25 or 40 mm.)

2

EXAMPLE

- Screwing 25 mm side part to wall sets 40 mm distance for mounting
- Set left and right holders.

3

Radiator height	Bracket length	Connection of canal distance
300	108	40
400	208	115
500	308	215
600	408	315
900	708	615

Dimensions are mm.

- Desired height of the radiator should be 100 mm from the ground, bottom hole of the bracket should be 210 mm from the ground. For upper hold center check the diagram above.

ATTACH THE BRACKETS TO THE WALL

- Between 400 mm length and 1600 mm use two holders.
- Between 1700 mm length and 3000 mm length use three brackets

4 INSTALLATION KIT

STANDART and PANEL RADIATORS WITH COVER

PANEL LENGTH	10, 11, 20, 21, 22, 33					
	a	b	c	d	e	f
400 - 1500	L-266,6	-	133,3 Type 11 (117)	133,3 Type 11 (117)	-	-
1700, 1900.....2900	(L/2)-116,64	(L/2)-150	133,3	133,3	(L/2)+16,67	(L/2)-16,67
1600, 1800, 2000 2200, 2400, 2600 2800, 3000	(L/2)-133,3	(L/2)-133,3	133,3	133,3	L/2	L/2

5

• Insert the plastic bracket clips
(Protects radiator from damages)

BRACKET CLIPS ASSEMBLY

INSTALLATION

This product must be installed by a fully qualified engineer.

Please consider using an Eastbrook Valve Set – this will ensure that your radiator looks its best with matching radiator valves.

- On commissioning, flush the central heating system thoroughly using a proprietary solution to ensure that aggressive substances such as fluxes and manufacturing residue, from which internal surfaces of your radiator can sustain irreparable damage – are removed. It is further recommended that an appropriately approved corrosion inhibitor be subsequently added to the heating system in order to protect the radiator and other parts of the central heating system to promote extended operating lifespan.

MAINTENANCE

- From time to time it is advisable to clean your towel rail with a warm damp cloth. Never use any form of abrasive cleaner or chemical.
- Corrosion inhibitor must also be regularly maintained, please consult your engineer for details.

WARRANTY

Your Flat Panel Radiator is fully warranted for five years in respect of defective materials and workmanship and subject to installation being carried out by a qualified engineer in accordance with good practice and corrosion inhibitors being regularly maintained.

IMPORTANT

- Maximum working pressure of this radiator is 4 bar.
- This radiator is to be used on Domestic Central Heating systems only.
(Not suitable for use on direct hot water systems) Please consult your engineer or supplier.

Eastbrook 
 Eastbrook Road, Gloucester GL4 3DB
 Technical Helpline : 01452 317890
 Mon - Fri / 8am - 5pm
 Email : technical@eastbrookco.com