


HOME




HEAT SYSTEM

HEATER
CONTROLLER
-
VERTICAL

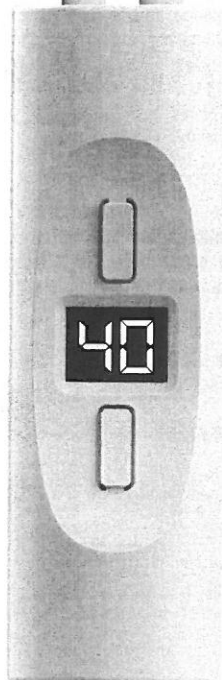

+
REMOTE
CONTROLLER

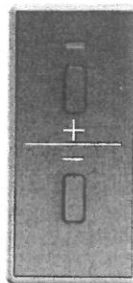


GUIDE & USER MANUAL


HEATER CONTROLLER H+ | REMOTE CONTROLER H+R



SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above a bath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. **The heater MUST BE DISCONNECTED before cleaning the casing. AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them. Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 

CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS:

Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use. Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:

Stamp of retail outlet, signature of seller



Mników 322, 32-084 Morawica, Polan
Tel/fax: +48 12 656 44 91

MADE IN EU

 
 
 
 
 
Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.

USER MANUAL: Heating element + Heater controller (vertical) H+



VIDEO available at: www.homeplus-system.com

Kit content



System option:
+ Wall clip


+ Allen key

Remote controller


Mounting in radiators



CAUTION! Do not disconnect heater controller when the system is powered

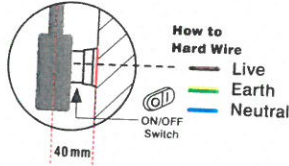


Hard wire connection


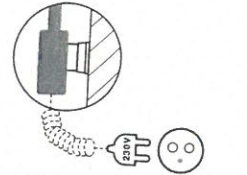



Installation options: CH system

Installation options: electric radiator


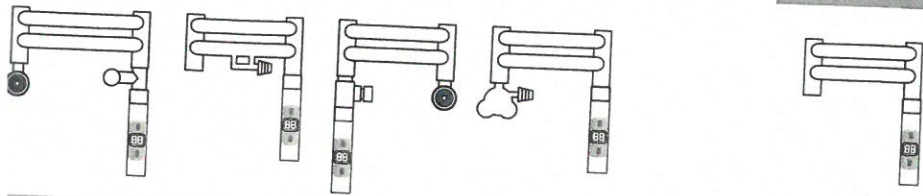


Installation details


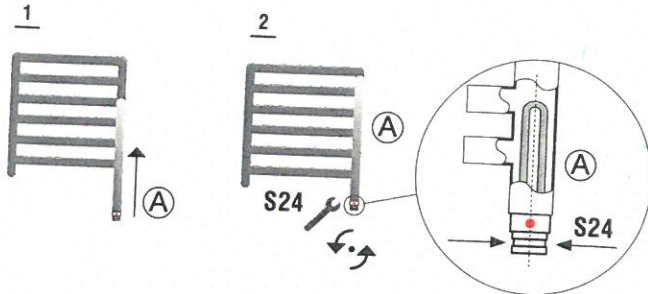
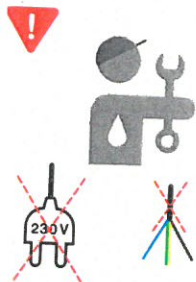


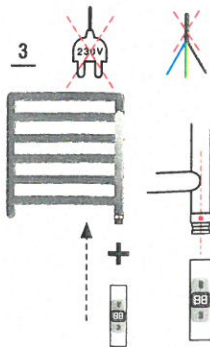


CAUTION! Do not disconnect heater controller when the system is powered.

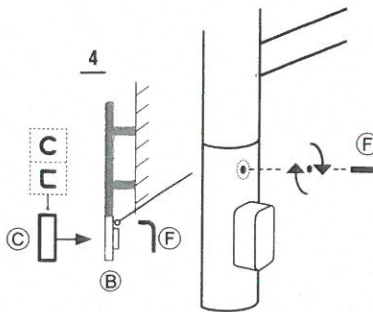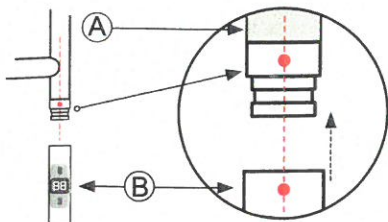

Electric radiators

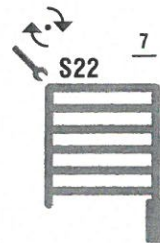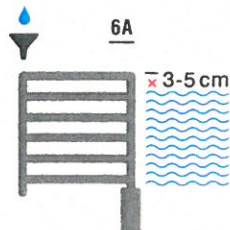
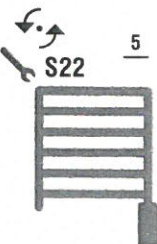


CH system

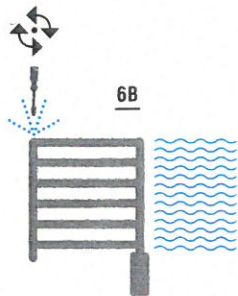


Finishing

 
Element (D) must be cut the correct length

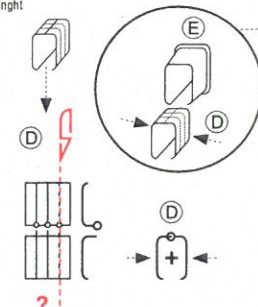


Cut to length

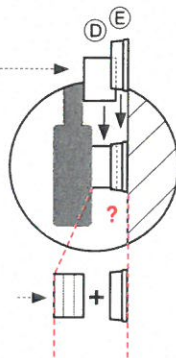

For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

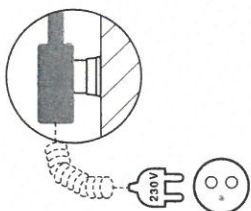


Connection with a coiled cable and a plug

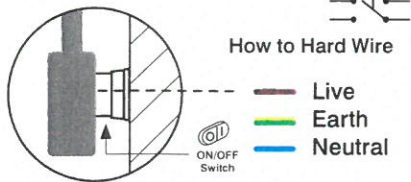

Hard wire connection

USER MANUAL: How to use heater controller (optional remote controller)


VIDEO available at www.homeplus-system.com

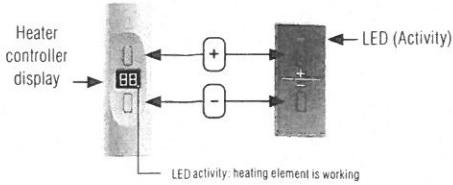

Heater controller

Remote controller

 Heater controller



Turn ON the controller

 


Remote controller

Push for pairing button using allen key to activate the controller. Locate suitable place to mount the controller.

When switched to an ambient temperature control, a remote control is simultaneously a temperature sensor


Back



Wall clip mounting

1

2

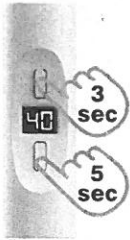

Run the controller

Hold upper button for 3 seconds

Switch off the controller

Hold lower button for 5 seconds

40°C

Standard heating temperature




20°C - 65°C

Select temperature


3

TURBO mode activation

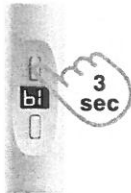

TURBO mode activation - max heating temperature

Hold button for 3 seconds

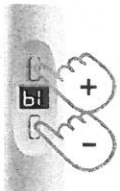


b1-b2-b3 Max heating temperature, **selection for 1/2/3 hours**

b0 Off selection


Heater controller and remote controller pairing

If you bought a remote controller together with H+heater you do not need to pair it!

Prepare remote controller + allen key for use

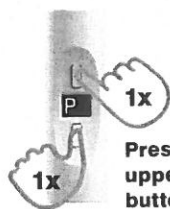

1x
Press once
upper and lower
button together

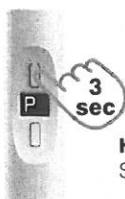

3 sec
Hold 3 sec.
Start countdown



**During countdown
within 30 seconds**

Reverse remote controller.
Push pairing button!




Pairing finished!

Remote controller
is already working




Allen key
included

Settings water or ambient temperature

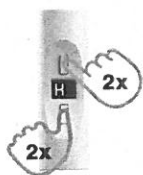

This function is available
if heater controller is paired
with remote controller

 **Press twice
upper and lower
button
together**



Temperature selection.

H Water temperature

R *Ambient temperature

Errors

- E1** No enough water in a radiator -
check a water level
- E2** Heating element damaged -
return a heater to a sale point
- E3** No communication with a remote
controller - check a remote
controller presence or replace batteries

* Remote controller is an
ambient temperature sensor




DO NOT DISCONNECT!

controller from heating element, when connected to the power sup



USER MANUAL: How to use remote controller (to control the heater controller)

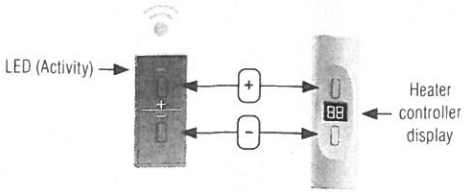


Remote controller

Heater controller

Remote controller

Push for pairing button using allen key to activate the controller
Locate suitable place to mount the clip

When switched to an ambient temperature control, a remote controller is similar a temperature sensor

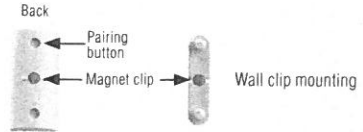

Heater controller



Turn ON the controller







1

START: Heater controller and remote controller pairing

If you bought a remote controller together with H+heater you do not need to pair it!

Prepare remote controller + allen key for use

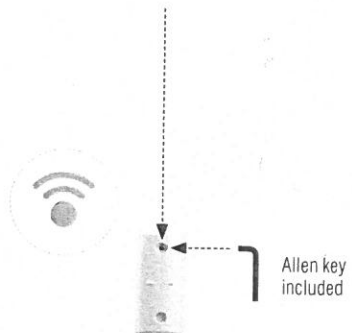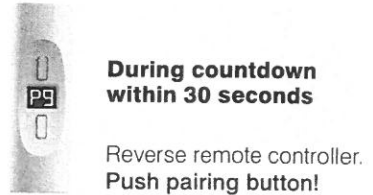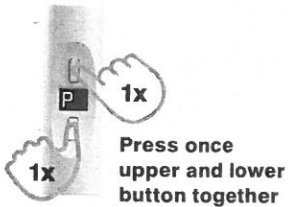

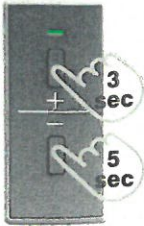

Run the heater controller via remote controller

Hold upper button for 3 seconds

Switch off the controller via remote controller

Hold lower button for 5 seconds

40°C

Standard heating temperature



20°C - 65°C

Select temperature

TURBO mode activation



TURBO mode activation - max heating temperature

Hold button for 3 seconds



b1-b2-b3 Max heating temperature, selection for 1/2/3 hours

b0 Off selection

Settings water or ambient temperature



2x

Press twice upper and lower button together



Temperature selection.

H Water temperature

R Ambient temperature

* Remote controller is an ambient temperature sensor

