

### Important Installation Considerations

- 1.NOTE: Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally showers with flow rates of less than 9L/min may not allow the following to function correctly:
- \_ some instantaneous water heaters
  - \_ some tempering valves
  - \_ some thermostatic mixing valves
- 2.When water pressure is in excess of 500kPa a pressure limiting device is required.

---

warrants this product against manufacturing defects and that it is suitable for use under the general operating conditions specified in this instruction sheet. However, regional regulations apply and may affect your warranty.

## Waterfall Spout Installation Guide

---

### Technical Specifications:

#### Operating Pressure:

Min: 150kPa/1.5bar

Max: 500kPa/5.0bar

Optimum: 150kPa/1.5bar - 500kPa/5bar

Recommended installation of pressure limiting valve if supply exceeds 500kPa

#### Operating Temperature:


Hot: Max 80°C

Cold: Min 5°C


Inlet Connections: All ½" BSP


#### NOTE:

- After installation all connections must be checked for leaks.
- All installations must be carried out in compliance with relevant water regulations.

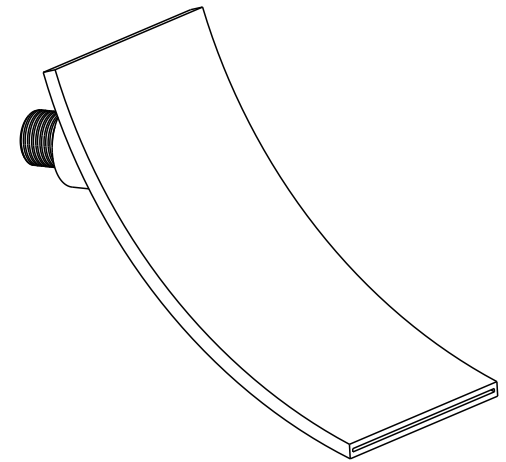


### Technical Drawing

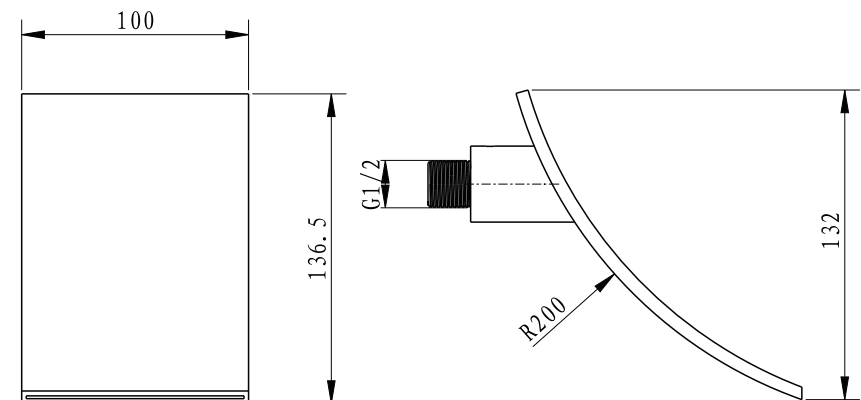


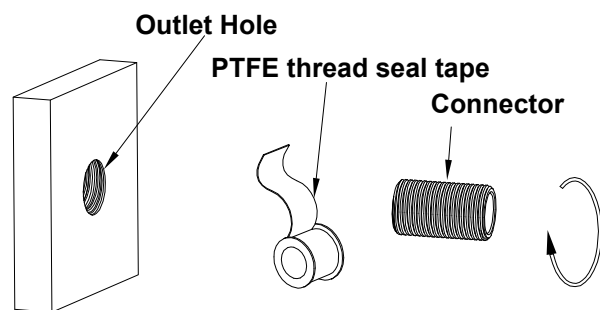


1. Wrap PTFE thread seal around the connector, and then screw it to the outlet hole.

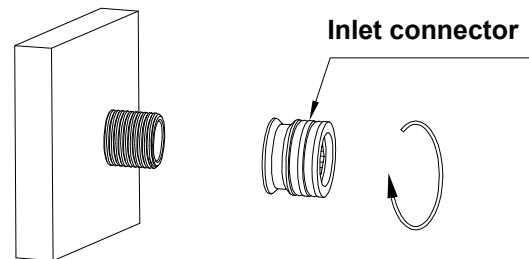

2. Screw the inlet connector like image shown.

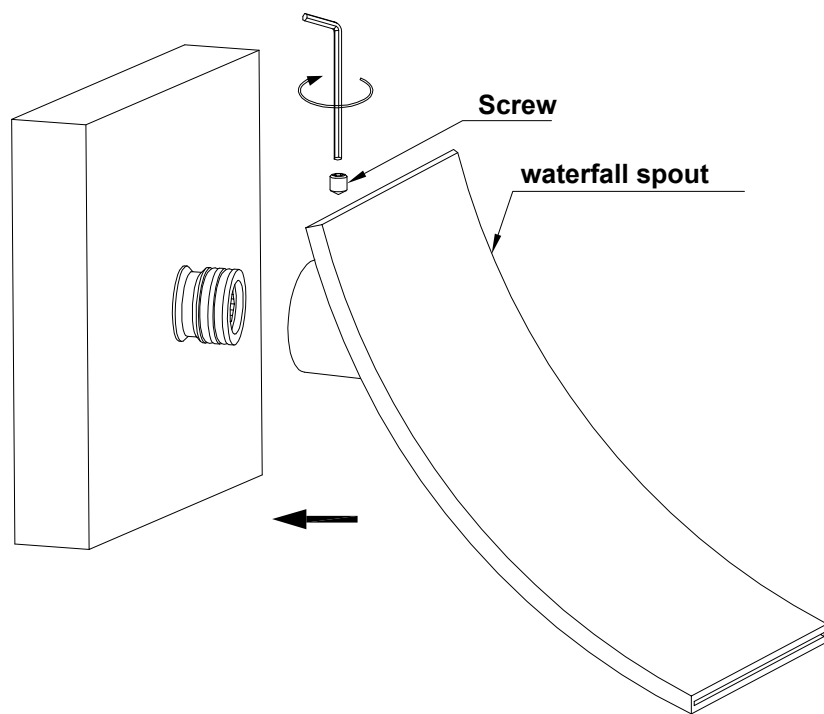

3. Install the waterfall spout and then tighten it by screw.

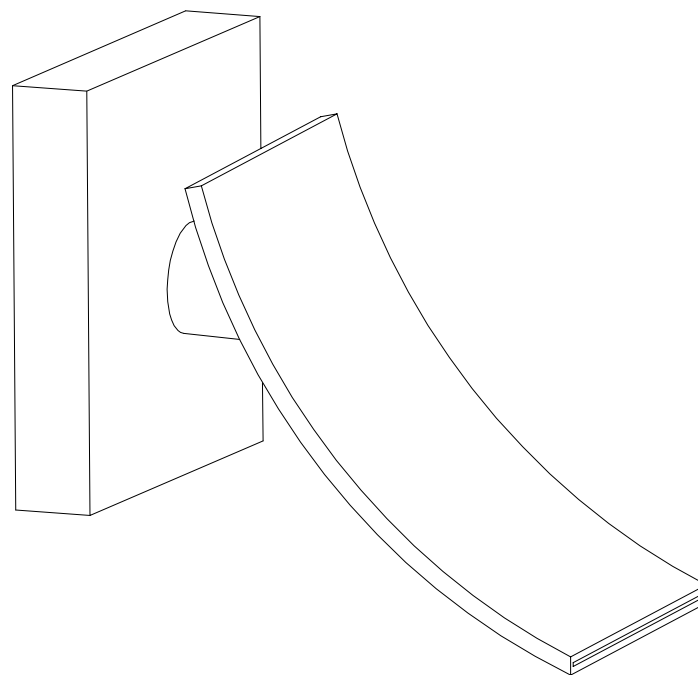

4. Finished.