

**HEATER
CONTROLLER
-
VERTICAL**



GUIDE & USE MANUAL

TYPE G ELEMENT

Eastbrook 


Eastbrook Road, Gloucester Road GL4 3DB


Technical Helpline : 01452 317890 Mon-Fri / 8am - 5pm

Email : technical@eastbrookco.com

SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above a bath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. The heater **MUST BE DISCONNECTED** before cleaning the casing. **AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them. Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 
CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS: Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use. Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:

Stamp of retail outlet, signature of sellerCaution

MADE IN EU

Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.

Eastbrook 


Eastbrook Road, Gloucester Road GL4 3DB

Technical Helpline : 01452 317890 Mon-Fri / 8am - 5pm


Email : technical@eastbrookco.com

USER MANUAL: TYPE G


Kit content

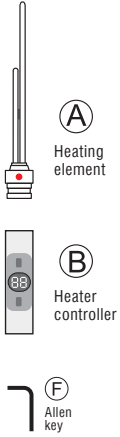


Purchase option

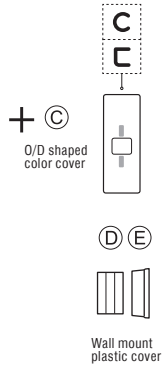


Mounting in radiators

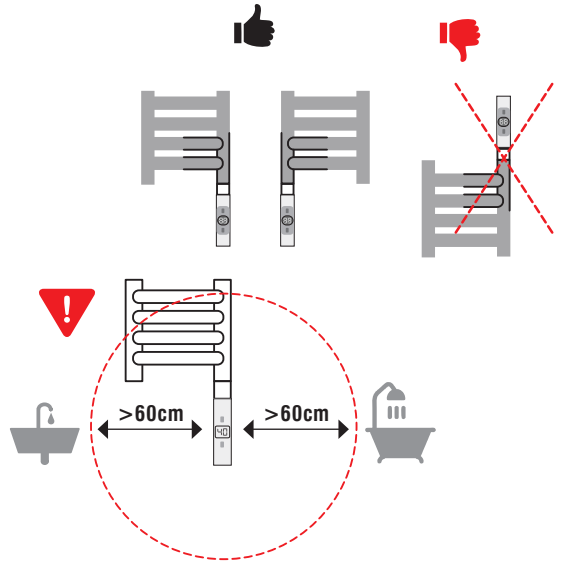



Installation options: central heating system

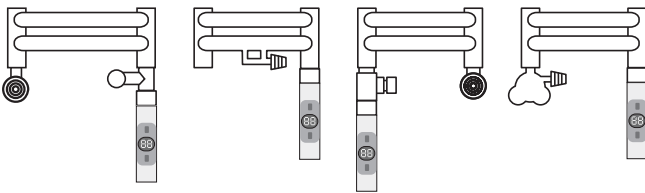

Installation options: electric radiator

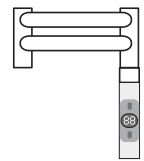


Installation details

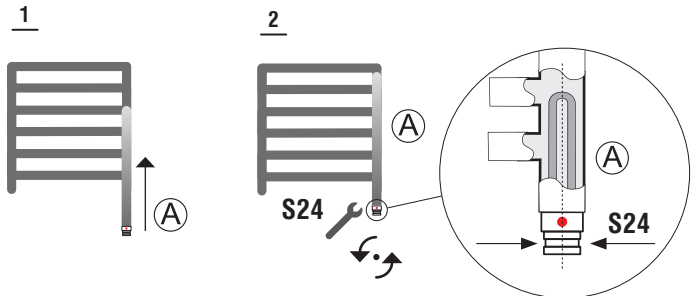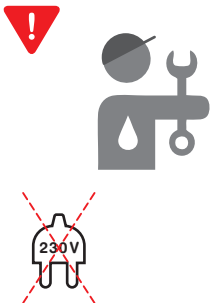


CAUTION! Do not disconnect heater controller when the system is powered.




3

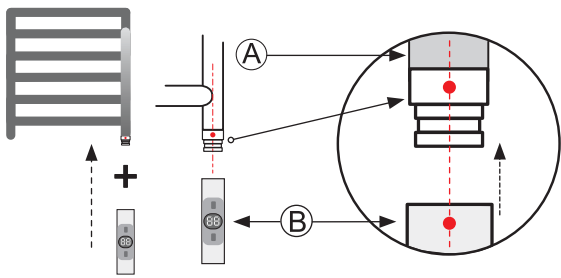


4

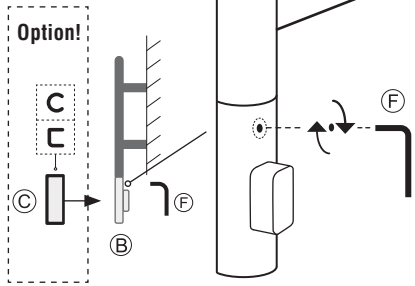

Electric radiators

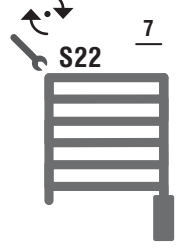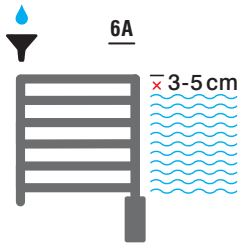 

CH system

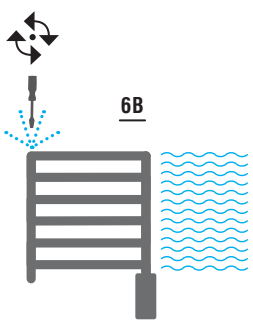

Finishing

Purchase option!

Element (D) must be cut the correct length

 


8

Cut to length




9A Connection with a coiled cable and a plug

9A Hard wire connection

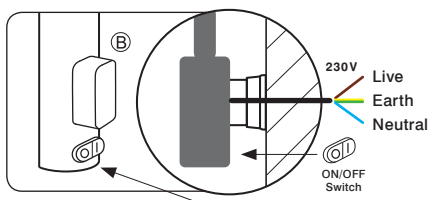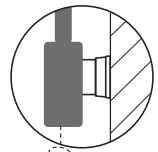

For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

 
[4]



Option! 10 After electric connection, turn on the switch (concern only hard wire connection)

USER MANUAL: HOW TO USE HEATER TYPE G

1

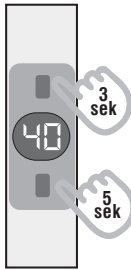


Run the controller
Hold upper button
for 3 seconds

Switch off the controller
Hold lower button
for 5 seconds

40°C
Standard, startup
temperature

2

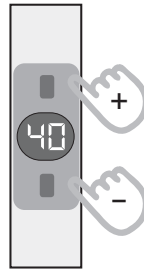

10°C - 65°C*
Select temperature


* maximum temperature
may be different, depending
the factory settings

3

TURBO mode activation



TURBO mode activation – max heating temperature
Hold button for 3 seconds

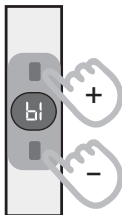


bl - b2 - b3 Max heating temperature
Selection for 1/2/3 hours

b0 Max heating TURBO

4

TIMER mode activation

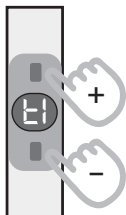

t1

1. Select temperaturea (point 2)
2. Hold button “-” for 2 seconds
“t1” symbol will appear on the display
3. Using +/- buttons set the desired number of heater
work hours (1-9)

After the programmed time expires, the heater will
turn off

ERRORS

ATTENTION: Signalling improper installation or improper use:

E1 Lack of water (or wrong choice of heating
element to the heater)

[5] E2 Damaged heating element

DO NOT DISCONNECT!

controller from heating element, when connected to
the power supply



Eastbrook 

Eastbrook Road, Gloucester Road GL4 3DB

Technical Helpline : 01452 317890 Mon-Fri / 8am - 5pm

Email : technical@eastbrookco.com

MADE IN EU