

STEP 1

Screw the chrome blanking plug and chrome air vent plug, into the top two threads in the upright channels. They can be fitted on either side. Tighten firmly with a spanner, using a cloth to prevent scratching.



STEP 2

Screw the tails from the radiator valves (not supplied) into the bottom two threads using PTFE tape to seal. Wind the tape in the opposite direction to the thread.




STEP 3

Select your desired installation position and ensure that the wall is sufficiently strong enough to hold the weight of the radiator. Brick or breezeblock walls are ideal.

STEP 4

Screw the wall supports to the wall using the screw washers and wall plugs if you are mounting to brick or breezeblock.

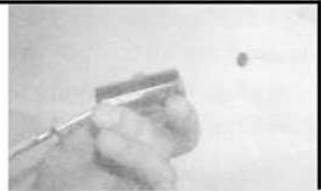

STEP 5

Screw the bracket stems to the radiator and tighten firmly with spanner.



STEP 6

Ease the fixing brackets into wall support with the radiator. Push the radiator flat against the wall and tighten the 4 x mini screws to secure.



STEP 7

Connect the radiator valve tail to the radiator valve and tighten firmly.



STEP 8

Release any air trapped in the radiator using the air vent plug. When purging air from the system, carry a large cloth to catch the water while you are re-tightening the venting plug. Finally put decorative covers onto air vent and blanking plug



CONGRATULATIONS

You are the proud owner of an exclusive Tunstall Towel Rail which has been specially produced by our craftsmen who would wish you to enjoy many years of satisfaction from it.

INSTALLATION

This product must be installed by a fully qualified engineer.

- Please consider using an Eastbrook Valve Set – this will ensure that your radiator looks its best with matching radiator valves.
- On commissioning, flush the central heating system thoroughly using a proprietary solution to ensure that aggressive substances such as fluxes and manufacturing residue, from which internal surfaces of your radiator can sustain irreparable damage – are removed. It is further recommended that an appropriately approved corrosion inhibitor be subsequently added to the heating system in order to protect the radiator and other parts of the central heating system to promote extended operating lifespan.

MAINTENANCE

- From time to time it is advisable to clean your towel rail with a warm damp cloth. Never use any form of abrasive cleaner or chemical.
- Corrosion inhibitor must also be regularly maintained, please consult your engineer for details.

IMPORTANT

- Maximum working pressure of this radiator is 4 bar.
- This radiator is to be used on Domestic Central Heating systems only. (Not suitable for use on direct hot water systems). Please consult your engineer or supplier.

WARRANTY

Your Tunstall Towel Rail is fully warranted for five years in respect of defective materials and workmanship and subject to installation being carried out by a qualified engineer in accordance with good practice and corrosion inhibitors being regularly maintained.

REMEMBER Excellence is worth looking after.