

# STEREO BLUETOOTH LOUDSPEAKER MIRROR MANUAL

## 1. Technical parameters

Voltage: 110V-240V  
IP Rating: IP44

Frequency range: 50Hz  
Accessible Distance Range: 10M

Total power: 60W


## 2. Operating Instruction

(a)



(b)



- Press the bluetooth button on the mirror, the loudspeaker will sound an acoustic warning. Subsequently, the speaker is ready to be paired.
- Go to the Bluetooth menu in your telephone and select search for devices. The telephone will detect "BL 12", simply select it. An acoustic sound will advise you of connection.
- After the connection is established, the sound of music your telephone plays will be transmitted over the loudspeaker on the mirror. When listening to music, you can answer a telephone call received. During a telephone conversation, the playing of music will be interrupted. Your call won't be transmitted through the bluetooth. Music will be automatically continue playing at the end of the call.
- Simply turn off the Bluetooth device in your telephone after you are done playing music. An acoustic sound will advise you of disconnection. And the bluetooth speaker is back to stand-by pairing mode.
- The touch sensor switch  can operate both demister pad and lights at both sides.

## 3. Notes

- The WiFi and Bluetooth in the telephone are at the same output frequency band, when both are used at the same time, as the signals interfere with each other which might slow down the download speed and cause some online music played unsmooth.
- The bluetooth won't automatically reconnect after the signal is disconnected. You need to repeat the connection process manually.
- It is normal the speaker will sound an acoustic warning when the telephone and the bluetooth on the mirror are paired or disconnected.
- After the pairing and connection is established, other telephone can't find this "BL 12" device.