

Installation:

1. Follow instructions for AB25850RMC for installation of the valve box.
2. The following should be carried out after tiling and grouting is complete and has fully dried.
3. Remove the transparent protective cover from the valve box by removing the four fixing screws identified as (F) in Fig 1.
4. Apply generous amounts of PTFE tape to the ½" thread of part (1). **Key point to observe** – Don't put any PTFE on the first thread, this will allow the thread to catch easier when screwing part (1) into the valve body.
5. Screw part (1) into the valve body using a 6mm A/F Allen-key as shown in Fig 2, **Key point to observe** – Surface (Z) identified on Fig 2 must be level with the tile front face.
6. **Important note** – Surface (Z) and (Y) must meet for the spout to be fixed later in the installation as illustrated in Fig 5.
7. Its good practice to test the integrity of the PTFE seal on part (1) before you hide the box valve with the face plate, using a bucket to capture any water, turn on the water and open the valve, inspect the PTFE seal for leaks.
8. Screw decorative valve housing cover (4) fully into position.
9. Apply a Ø1mm bead of silicone to the back of the face plate (2) surface (Y) as illustrated in Fig 3.
10. Fix the Face plate (2) into position pushing it tight to the tile, clean off any excess silicone with a cloth.
11. Fix the spout (3), using grub screws (3.1). Ensure grub screws (3.1) are fully loosened so that they are not protruding through spout valve connector (1). This is to ensure O-rings (1.1) are not damaged by screws (3.1).
12. Screw the decorative valve nut cover (5) onto the valve retaining nut as illustrated in Fig 2.
13. Remove the dust cover part (6.1), loosen grub screw (6.2) and fit the handle (6), tighten the grub screw (6.2), and refit the dust cover (6.1).
14. If using this product as a bath filler, please use aerator key provided to switch aerator (7) from the installed 8lpm version to a higher flow version. This can also be switched if you are fitting the product as a basin mixer and require more flow rate. Please see minimum operating pressures below.

After Installation:

Once you have visually checked the new fittings and connections, ensure that all taps and drains are closed except the new product which should be **left open**. Turn on (reconnect) the water supplies, check carefully for leaks around the installation and product function. Once you are sure of no leaks, close the new product and recheck for leaks, turn on the water heating power. Clean and dry the product of any marks from installation then cover the product with the bag provided to protect it until use.

Important Technical Data

Minimum operating pressure Basin: 0.4 bar (no limiter), 1 bar (with limiter)
Minimum operating pressure Bath: 1.2 bar (no limiter)
Maximum operating pressure: 5.5 bar*

Flow characteristics: Single flow
Maximum hot water temperature: 60°C*
Recommended hot water temperature: 46°C

*If these temperatures or pressures are exceeded, even for short periods, damage can result and will void your warranty. In these instances, reduce the incoming water temperature and or install a pressure reducing valve. Ensure that your Abode product is fitted in accordance with Local Water Byelaws or regulations by a qualified installer. These installation guidelines have been prepared for your direction and you must exercise due care at all times. We do not accept responsibility for problems that may occur through improper installation. Whilst installing the product take care not to accidentally loosen any screwed assemblies.

Manufacturers Product Reference: AB2790RMC, AB2791RMC

©Abode - 01/2024


Unit L, Zenith Park, Whaley Road, Barnsley, S75 1HT
Tel: (+44) 01226 283434 or www.abodedesigns.co.uk

All errors and omissions excepted.

abode

Levarto Wall Basin / Bath - Decorative

abode

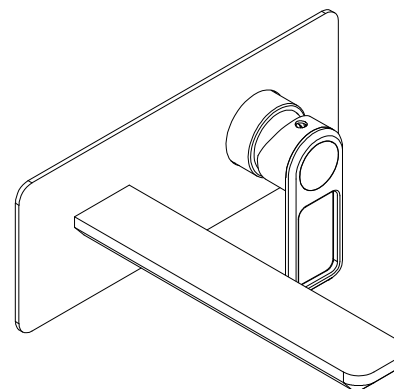

Warranty:

All Abode products are made using the highest quality materials and components, to ensure that they meet or exceed all UK or European Standards.

All products are thoroughly tested, and quality checked.

All products are backed with a comprehensive warranty and we are confident that they will give many years of trouble-free service.

The warranty applies to products used for normal domestic purposes and where the installation, care and maintenance instructions have been observed.

The warranty extends to the original purchaser only.

Details of Warranty duration and Terms & Conditions for each product type can be found on our website (www.abodedesigns.co.uk).


Important Care Instructions for your Product:

To maintain the appearance of this product, ensure that it is regularly cleaned only using a clean, soft damp cloth. A solution of warm water and a mild liquid detergent may be used where necessary, and then the fitting rinsed thoroughly and wiped dry. Any other cleaning action or use of common domestic cleaning products will invalidate your warranty.

If the product has a plastic aerator insert at the end of the spout it should be unscrewed and the plastic internal insert only removed and cleaned or descaled to maintain flow performance. Do not use descaling solution on any decorative metal housing, rinse the insert thoroughly before reattaching in the reverse order.


Abrasive cleaners, scouring cleaners and acidic cleaners **must not be used on this product** under any circumstances. Avoid contact with all solvents (including chlorinated solvents, ketones or acetones as these may result in surface deterioration or etching). Also avoid contact with any harsh household chemicals such as oven cleaners, drain cleaners, rust removers, paint strippers and toilet bowl cleaners, bar keepers friend or Brasso.

Please leave these instructions for your customer.

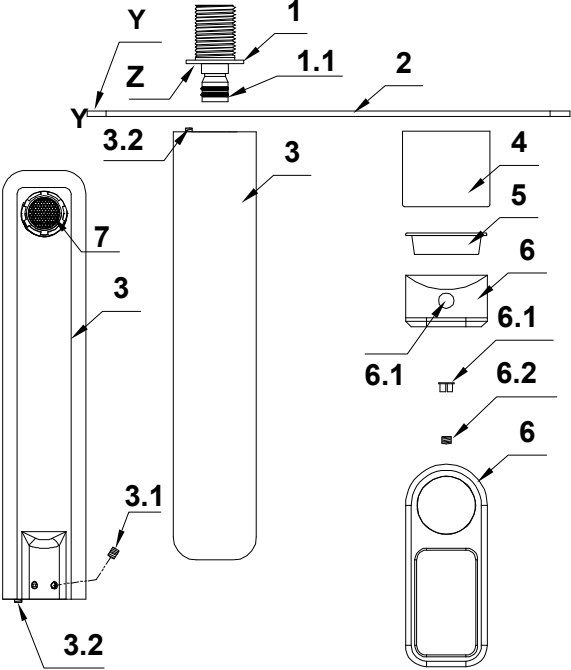

Key	Description	Qty
1	Spout to valve connector	1
1.1	O-rings (plus 2 x spares)	2
2	Decorative face plate	1
3	Spout	1
3.1	Spout fixing screws	2
3.2	Anti rotate grub screw	1
4	Decorative valve cover	1
5	Decorative valve nut cover	1
6	Handle	1
6.1	Decorative dust cap	1
6.2	Handle Grubscrew	1
7	Standard aerator / 8lpm aerator	1
Y	Back of decorative face plate	N/A
Z	Face of spout connector	N/A

Fig 1.

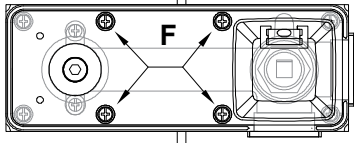

Installation Instructions:
Preparation

Before installing the new product, it is essential that you thoroughly flush through the supply pipes in order to remove any remaining solder, swarf or impurities from your system. Failure to carry out this simple procedure could cause problems or damage to the workings of the product or reduce performance invalidating the warranty.

We strongly recommend best practice of installing particle filters and isolation valves to both the hot and cold feed pipes in an accessible position. This will help to prevent premature failure of the valves and ease any future maintenance.

All parts should be removed from their packaging and inspected for any transport damage prior to installation.

Shut off (isolate) your hot and cold-water supply locally at the point of installation before continuing with the installation. If the water cannot be isolated locally the turn off the mains stopcock and power to any heating system, now open the lowest tap or drain point in the system until both hot and cold supplies are fully drained.

Loosely position the product and fittings to check if any alteration to the existing pipework is required, if needed, do this now.

If the product is single flow (see section important technical data “flow characteristics”) then non return (check) valves must be installed to comply with regulations. Some products are supplied with non-return valves this will be noted in the instructions.

Fig 2.

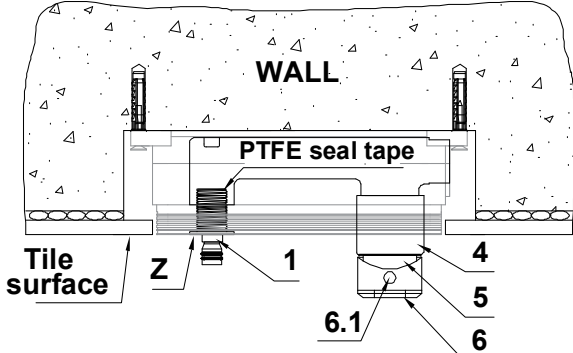


Fig 3.

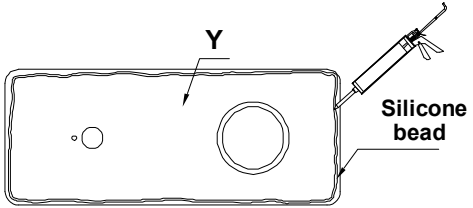


Fig 4.

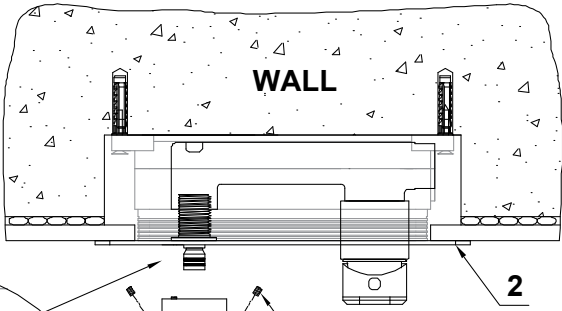


Fig 5.

