

OPTIONS

Flush Volume

1.6 gpf (6.0 Lpf) (1.6)

3.5 gpf (13.2 Lpf) (3.5)

1.28 gpf (4.8 Lpf) (1.28)

Water Efficiency

Low Consumption

Water Saver

High Efficiency

L Dimension

2"-10 3/4" (51-273mm)

11"-12 3/4" (279-324mm)

2"-6 3/4" (51-171mm)

13"-14 3/4" (330-375mm)

15 3/4" (400mm) (15-3/4-LDIM)

2"-14 3/4" (51-375mm)

Override

Electrical

True Mechanical (TMO)

Wall Box

With (W/BOX)

Small (SWB)

Push Button

Metal Button Panel Mount (MBPM)

Outlet Tube

Trap Primer (TP)

Special Features

Whitworth Thread (WWT)

Compliances & Certifications

ADA Compliant

BAA Compliant

BABAA Compliant

UL Certified

cUPC Certified

UPC Certified

BREEAM Water Credit

Green Globes Water Credit

LEED V4 Water Efficiency Credit

Satisfies LEED Credits

NOTES

For product line drawings, view model-specific spec sheets.

All information contained within this document subject to change



DESCRIPTION

Royal® Concealed Sensor Hardwired Water Closet Flushometer

FEATURES

- Flush volumes start as low as 1.28 gpf/4.8 Lpf
- Water conservation is aided by the ADA-compliant, non-holdopen handle, which prevents toilet from exceeding intended flush volume
- Flush accuracy is controlled by CID™ technology, also enhancing water efficiency
- Integrity of the product is maintained with the vandalresistant stop cap
- Durability is facilitated with high copper, low zinc brass castings for dezincification resistance
- Adjustable tailpiece
- PERMEX synthetic rubber diaphragm with Dual Filtered Fixed Bypass
- Valve body, Cover, Tailpiece and Control Stop shall be in compliance with ASTM Alloy Classification for Semi-Red Brass
- Valve shall be in compliance to the applicable sections of ASSE 1037.

DOWNLOADS

- Royal ESS Concealed and Exposed Installation Instructions
- Royal 152/195 ESS TMO (Spanish) Installation Instructions
- Royal 152/195 ESS TMO Installation Instructions
- Royal 152/195 ESS TMO Concealed SWB Installation Instructions
- Royal 152/195 SWB ESS TMO (Spanish) Installation Instructions
- Royal 152/195 ESS TMO SBX Installation Instructions



without notice.

- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Optima ESS Repair and Maintenance Guide
- Optima ESS TMO Concealed Repair and Maintenance Guide
- Optima ESS TMO SWB Concealed Repair and Maintenance
- Flushometer Pressure gauges
- Additional Downloads

VIDEOS



ESS Flushometer