

Titan-SF-RK SmartFlow™ Rebuild Kit

The SmartFlow adapter allows for the exhaust of outflow air prior to entering the breather. This protects the breather from oil mist and system humidity, resulting in longer breather life.



Titan SmartFlow PowerBreathers* are only usable with Titan SmartFlow Adapters

*Titan SmartFlow™ PowerBreathers (Titan-XXXX-SF) consist of all check valves positioned inward to exclusively inhale from the atmosphere, and therefore must be used with the Titan-SF-A1 (1" BSP) or Titan-SF-A2 (2" BSP) SmartFlow™ Adapters to exhale all air out of the system.

Ordering Information

Model	Description
Titan-SF-RK	SmartFlow Adapter Body Rebuild Kit

Packaging dimensions and weights may vary, please contact the facility for more information.

Titan-SF-A2-BSP SmartFlow™ Adapter

The SmartFlow adapter allows for the exhaust of outflow air prior to entering the breather. This protects the breather from oil mist and system humidity, resulting in longer breather life.



Titan SmartFlow PowerBreathers* are only usable with Titan SmartFlow Adapters

*Titan SmartFlow™ PowerBreathers (Titan-XXXX-SF) consist of all check valves positioned inward to exclusively inhale from the atmosphere, and therefore must be used with the Titan-SF-A1 (1" BSP) or Titan-SF-A2 (2" BSP) SmartFlow™ Adapters to exhale all air out of the system.

Ordering Information

Model	Description
Titan-SF-A2-BSP	Body, Adapter, SmartFlow 2" Female BSP

Check valves can be removed and replaced without the purchase of a new SmartFlow adapter. Packaging dimensions and weights may vary, please contact the facility for more information.

Titan-SF-A1-BSP SmartFlow™ Adapter

The SmartFlow adapter allows for the exhaust of outflow air prior to entering the breather. This protects the breather from oil mist and system humidity, resulting in longer breather life.



Titan SmartFlow PowerBreathers* are only usable with Titan SmartFlow Adapters

*Titan SmartFlow™ PowerBreathers (Titan-XXXX-SF) consist of all check valves positioned inward to exclusively inhale from the atmosphere, and therefore must be used with the Titan-SF-A1 (1" BSP) or Titan-SF-A2 (2" BSP) SmartFlow™ Adapters to exhale all air out of the system.

Ordering Information

Model	Description
Titan-SF-A1-BSP	Body, Adapter, SmartFlow 1" Female BSP

Check valves can be removed and replaced without the purchase of a new SmartFlow adapter. Packaging dimensions and weights may vary, please contact the facility for more information.