

Cleaning Instructions

Always remove the Power Bank and USB cable before cleaning the Waist Band.



Spot clean only using warm soapy water.

DO NOT DRY CLEAN, DO NOT WRING, DO NOT SPIN DRY,

DO NOT TUMBLE DRY.

Ensure the Waist Band completely cools down before cleaning.

Line Dry Only

DO NOT USE IF WET OR DAMP

Waist Band conforms to the WEEE standard - it should be recycled at the end of its life and NOT disposed of in household waste.

STORAGE: Fold and store in a dry, cool place. Avoid sharp objects.

Beamfeature EU (P. Ruia)

Gartenstraße 22, 82067, Schäftlarn, Deutschland.


beamfeature.eu@beamfeature.co.uk

Manufacturer: BFL - M32 0TP - UK.

**UK
CA**




Heated Waist Band Use and Safety Instructions

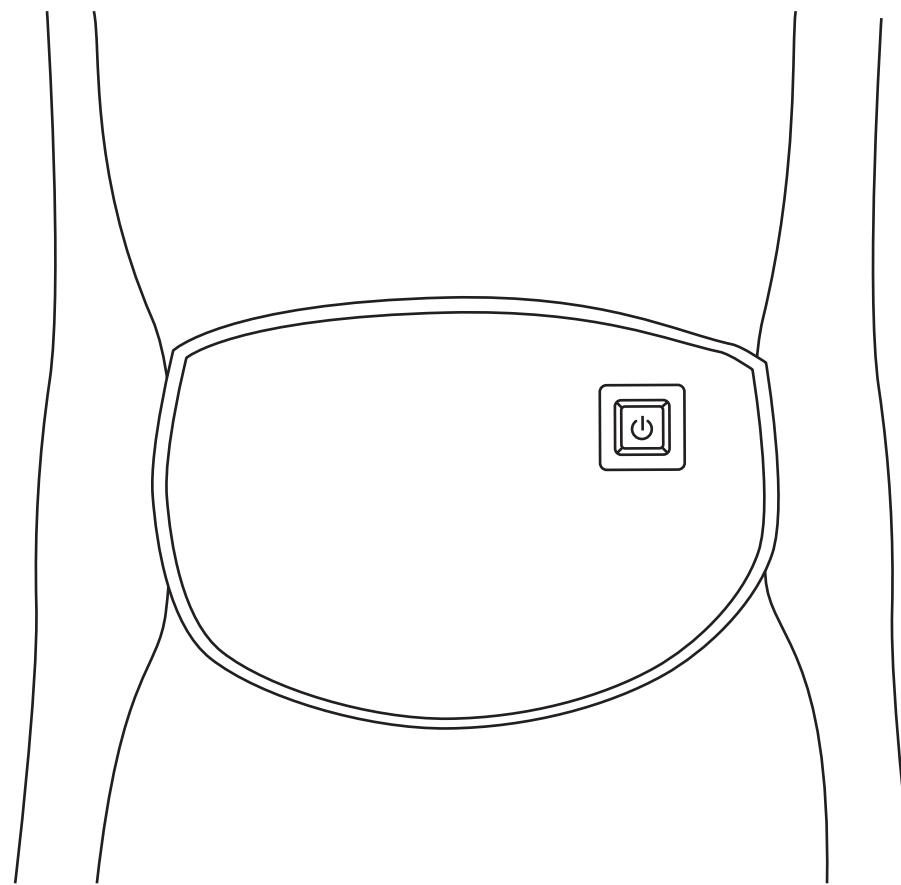

Heated Waist Band

Use and Safety Instructions

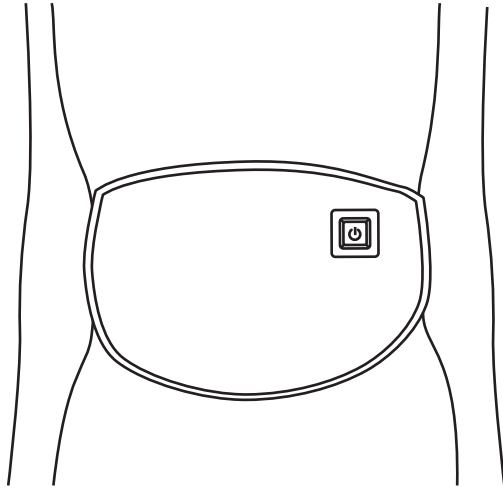

CONTENT-

- I X Heated Waist Band
- I X USB A to USB C Cable

Important – please carefully read all use and safety instructions before using the Heated Waist Band and retain these instructions for future reference.

Examine the Waist Band frequently for signs of wear or damage. If there are any signs of wear or damage or if it has been misused, stop using the Waist Band immediately.

When using this Heated Waist Band, to reduce the risk of fire, electric shock and/or injury to persons, the following basic safety precautions **MUST** always be followed.

To avoid burn/scalding of the body, do not use with a helpless person, a person sensitive to heat or other very vulnerable persons who are unable to react to overheating.

Do not use when sleeping.

Do not use if damp or wet.

Do not allow the Power Bank (not supplied) to get damp or wet.

Do not use under blankets or pillows - Overheating can occur and cause a risk of fire and personal injury.

Stop use if area of body becomes too warm.

Recommended Max of 2 hours use in any session.

Do not insert or use pins on the Heated Waist Band. Do not attempt to secure the Heated Waist Band with pins or other metal objects. Do not scratch with sharp devices or beat the Heated Waist Band with blunt devices.



Not recommended for use by young children. Any child using this Waist Band must only do so under close adult supervision and controls have been pre-set by an adult and should only be set to lowest warming setting.



Do not use near heat sources (stoves/hot plates), flames or fire.

If you spill any liquids on the product, stop use immediately, turn off, unplug Power Bank and dry thoroughly before further use. Always ensure that the Power Bank is not wet/damp. Always use with a good quality power bank at least 10,000 mAh Do not use any other power source. Always disconnect power bank when not in use.

Do not use when folded or bunched up!



Using your Heated Waist Band

Avoid direct skin contact, use over clothing (e.g. T-Shirt)

Wrap the band around your waist with the metallised cloth area (heating area) over the area you wish to warm.

Insert one end of the power cable into the USB A socket on a Power Bank.

Switch the Power Bank on. Put the Power Bank into the pocket on the side of the Waist Band. Connect the other end of the power cable into the USB C socket on top of the Power button. Then press and hold the power button on the Waist Band for 3-5 seconds and the Waist Band will begin to pre-heat. Power button will turn red once Waist Band is switched on.

To select the heat setting click the power button on the Waist Band –

the coloured light indicates the heat setting:

Green Light = Lowest Heat Setting

Blue Light = Medium Heat Setting

Red Light = Highest Heat Setting

To turn off press and hold the power button until the light switches off.

Unplug the Power Bank when not in use.

