

Unisex Heated Gilet

Use and Safety Instructions



Do not insert or use pins on the Gilet. Do not attempt to secure the Heated Gilet with pins or other metal objects. Do not scratch with sharp devices or beat the Heated Gilet with blunt devices.



Not recommended for use by young children. Any child using this Gilet must only do so under close adult supervision and controls have been pre-set by an adult and should only be set to lowest warming setting.



Do not use near heat sources (stoves/hot plates), flames or fire.

If you spill any liquids on the product, stop use immediately, turn off, unplug Power Bank and dry thoroughly before further use. Always ensure that the Power Bank is not wet/damp.

Always use with a good quality power bank with a USB Type A socket. Do not use any other power source. We recommend 10,000 mAh minimum. Always disconnect power bank when not in use.

Using Your Heated Gilet

- Put on the Gilet and put your power bank (not included) in to the inner pocket.
- Insert the power cable (inside inner pocket) into the USB A socket on the power bank.
- Switch on the power bank.
- To turn on press and hold the power button for 3 seconds – you can select Back or front heat separately or have both heated at the same time by activating both buttons.
- The heat setting will always be at the highest (Red light) when turned on but you can select the heat setting to suit your requirement.
- RED light – Highest heat setting
- WHITE light – Medium Heat Setting
- BLUE Light – Lowest Heat Setting.



BACK 1 FRONT 1



BACK 2 FRONT 2



BACK 3 FRONT 3

- To turn off press and hold the power button(s) for 3 seconds until the light goes out.
- Unplug from power bank when not in use.


NOTE: You can have the Back and Front settings at different heat settings to be suit your requirements.

We recommend not to use on highest heat setting for a prolonged period of time – use on high setting initially to get warm and then reduce heat setting to maintain a comfortable temperature.

For use in ambient temperatures between -20°C and +15°C

Heated Gilet

Use and Safety Instructions

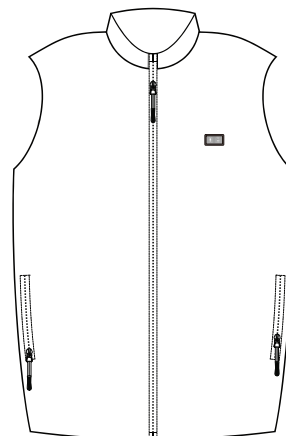

Important – please carefully read all use and safety instructions before using the Heated Gilet and retain these instructions for future reference.

Examine the Gilet frequently for signs of wear or damage. If there are any signs of wear or damage or if it has been misused, stop using the Gilet immediately.

When using this Heated Gilet, to reduce the risk of fire, electric shock and/or injury to persons, the following basic safety precautions **MUST** always be followed.

To avoid burn/scalding of the body, do not use with a helpless person, a person sensitive to heat or other very vulnerable persons who are unable to react to overheating.

Do not use when sleeping.

Do not use if damp or wet.

Do not allow the Battery Pack to get damp or wet.

Never use directly against the skin always wear a base layer.

Do not use whilst pregnant.

Washing Instructions

Always remove the Power Bank before washing or cleaning the Gilet.

Ensure the USB cable is inside the inner pocket, the cap is placed firmly over the USB connector and zip the pocket closed before washing.



Hand Wash or Delicate machine wash at 30 degrees or less.

DO NOT DRY CLEAN, DO NOT WRING, DO NOT SPIN DRY, DO NOT TUMBLE DRY, DO NOT IRON.

Ensure the Power Bank is unplugged before cleaning.

Ensure the Vest completely cools down before washing.

DO NOT wash the Power Bank.

Wash in a mesh laundry bag (not included)

Line Dry Only

DO NOT USE IF WET OR DAMP

Vest conforms to the WEEE standard - it should be recycled at the end of its life and NOT disposed of in household waste.

Product Code: BAC235894

Batch: 2024000149

Beamfeature Limited – M32 0TP

