

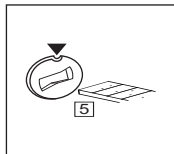
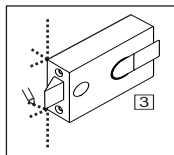
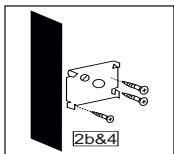
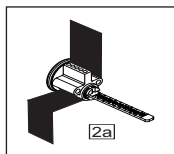


### Fitting Instructions


1. Before starting Select desired height for lock & identify your lock as standard or narrow style. For a standard lock, mark 60mm from the edge of the door; for a narrow lock, mark 40mm from the edge.
2. Remove the key from cylinder then insert it through the cylinder collar and place it in the 32mm diameter hole. The connecting bar protrudes through the central hole of the fixing plate hole the fixing plate against the inside of the door. At the position 3mm from the edge, mount the fixing plate to the door with the two wood screws supplied.
3. Position the lock by placing it on the fixing plate with the cylinder removed. Mark the forend lip, prepare the edge of the door to accept the lip.
4. Put back the cylinder into the drilled hole, shorten the connecting bar by using the hand saw, make sure that the tall of the bar project beyond the face of the door by 10mm. Use the flat ended connecting screws which inserted through the top pair of the hole in the centre of the fixing plate, to secure the cylinder to the fixing plate. For doors which are less than 54mm thick please shorten the connecting screws so that they fit tight onto the fixing plate.
5. Before you fit the lock case, make sure that the notch on the rotatable cap follower is aligned with the arrow on the cap. Place the lock case over the fixing plate and make sure that the flat connecting bar is inside the slot on the lock case. You may need a small piece of card to manipulate the connecting bar to assist this action.

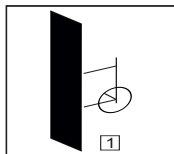

6. Push the lock case down onto the fixing plate trimly, slide the lock case sideways to its final position then flush with the edge of the door. Use the two small screws provided to secure the lock case to the fixing plate.

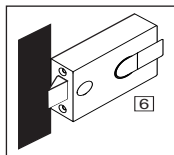

7. Shut the door use lock case as a guide, mark a position for the remaining component which the staple on the door frame. Chisel out an angle recess in the door frame, hold the staple flush with the frame, then fix it with the screws supplied. (The gap between the latch and the staple should be around 3mm.) Now the fitting of your new "Timco" lock is complete.

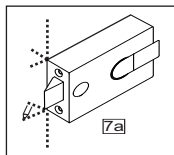

Check latch operation :

RB Nightlatch n Bolt is withdrawn with handle form inside and key from outside.

Care of your Cylinder Rim Lock

To lubricate the cylinder please use graphite. Please do not oil or paint the cylinder.

Lock

If necessary grease the moving parts (inside components) from time to time.

