Protrad 4 in 1 Monobloc

abode

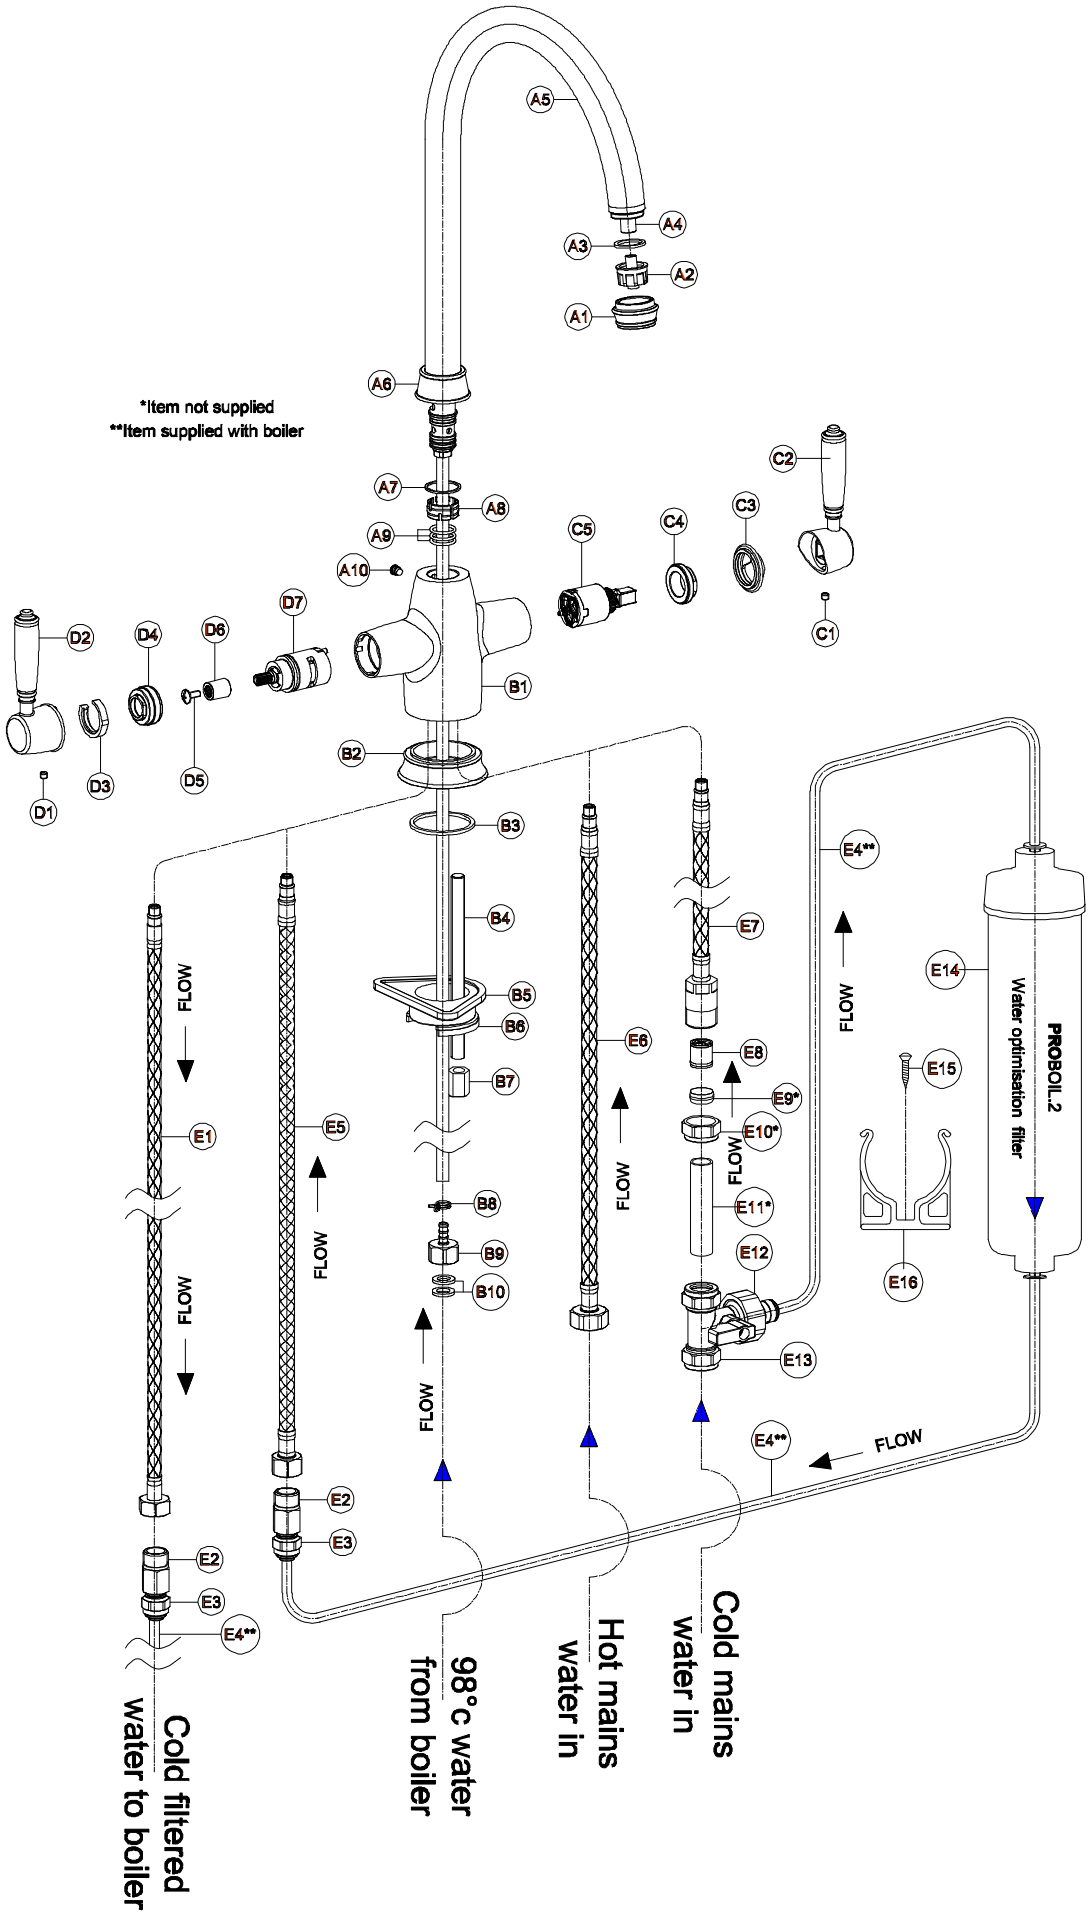

ProTrad 4 in 1 Monobloc

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot, cold and boiling water and power supplies, before starting any maintenance allow the boiler to cool, once isolated you should drain any residual water from your system.

To replace the cold/hot water valve:

1. Loosen grub screw (C1) on the underside of handle (C2) using a 2.5mm A/F Allen key.
2. Pull the handle (C2) horizontally away from the tap body (B1).
3. Pull off decorative cover (C3) horizontally away from tap body (B1)
4. Using an adjustable spanner, open-ended spanner or an IXEF1022 key, unscrew and remove valve retaining nut (C4).
5. Pull the valve (C5) horizontally away from tap body (B1).
6. Clean the Inside of chamber of (B1) with a soft wet cloth.
7. Reassemble the tap in the reverse order.

To replace the boiled water/filter valve:

1. Loosen grub screw (D1) on the underside of handle (D2) using a 2.5 mm A/F Allen key.
2. Using a precision screwdriver remove handle stop bush (D3).
3. Remove screw (D5) and bush (D6).
4. Using a 16 mm long reach socket remove valve retaining nut (D4).
5. Pull the valve (D7) from the valve chamber, you may need to use long nose pliers
6. Clean the Inside of valve chamber (B1) with a soft wet cloth
7. Replace the faulty valve (D7) with the new one and reassemble in reverse order. (Important Note – The valve will only go in one way the locating pins on the end of the valve are slightly misaligned to ensure the orientation of the valve is correct)

To replace the spout O-rings:

1. Loosen grub screw (A10) on the rear of body (B1) using a 2.5mm A/F Allen key.
2. Vertically retract aesthetic cover (A6) and O-ring (A7).
3. Pull the spout (A5) vertically away from the body (B1).
4. Remove the old O-rings (A9) using a small screwdriver or similar.
5. If worn, remove the white PTFE spacer (A8).
6. Clean the inside of the spout body chamber (B1) and the spout base (A5) with a soft wet cloth.
7. If required locate the new white PTFE spacer (A8).
8. If required replace O-ring (A7).
9. Carefully locate the new O-rings (A9) onto the spout base (A5).
10. Grease the O-rings (A7 & A9) thoroughly with silicone or alternative similar grease.
11. Reassemble the tap in the reverse order.

To replace/clean the spout aerator:

1. Unscrew aerator housing (A1).
2. Pull aerator (A2) vertically away from the brass tube connector (A4) located inside spout. Hold connector (A4) when doing this.
3. If required replace aerator seal (A3).
4. Hold the brass tube connector (A4), and **firmly** push the new or cleaned aerator (A2) onto the brass tube connector (A4).
5. Place aerator housing (A1) over aerator (A2) and screw back onto spout (A4).

Important: You must ensure that the spout inner tube, connector (A4) and aerator (A2) are firmly pushed together on reassembly. Should you accidently let go of the inner spout tube a pen, paper clip or thin screw driver can be used to pull it outside of the spout again.