Knurle Single Lever Swan

abode

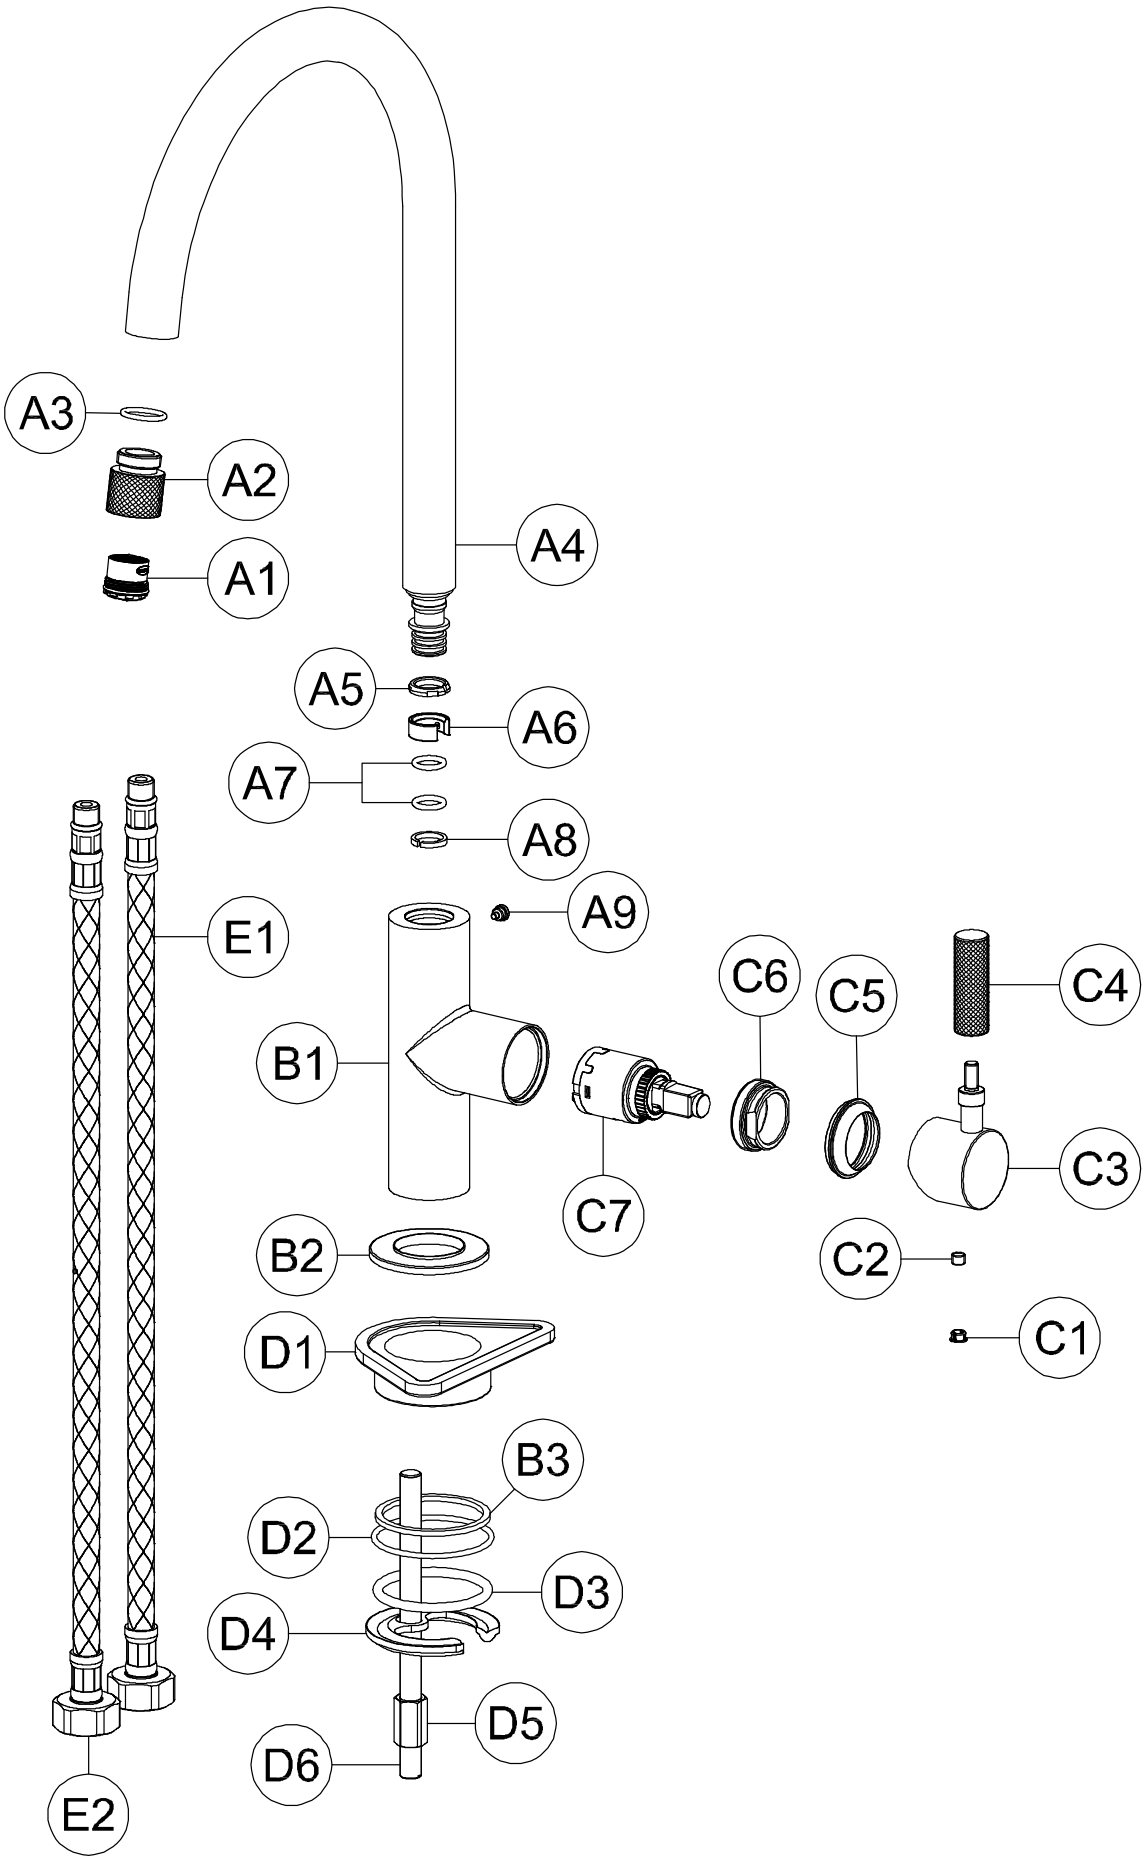

Knurle Single Lever Swan

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Remove dust cap (**C1**) and loosen grub screw (**C2**) on the underside of handle (**C3**) using a 2.5mm A/F Allen key.

2. Pull the handle (**C3**) horizontally away from the tap body (**B1**).

3. Unscrew the decorative cover (**C5**) horizontally away from tap body (**B1**) by hand.

4. With the tap (**B1**) fixed to the sink/base unit, using an adjustable spanner unscrew the valve lock nut (**C6**).

5. Remove valve (**C7**) and clean the Inside of chamber (**B1**) with a soft wet cloth.

6. Replace the faulty valve (**C7**) with the new one and assemble in reverse order.

To replace the spout O-rings:

1. Loosen grub screw (**A9**) on the back of body (**B1**) using a 2.5mm A/F Allen key.

2. Pull the spout (**A4**) vertically away from the tap body (**B1**).

3. Remove upper PTFE ring (**A5**, **A6** & **A8**) and O-rings (**A7**) using a precision screwdriver and replace with new ones.

4. Reassemble the tap in reverse order.

To clean the aerator:

1. Hold the spout (**A4**) firmly.

2. Unscrew the aerator (**A1**) using an aerator key, slotted screwdriver or coin

3. Clean the aerator (**A1**).

4. Reassemble the tap in the reverse order.