Ornate Monobloc

abode

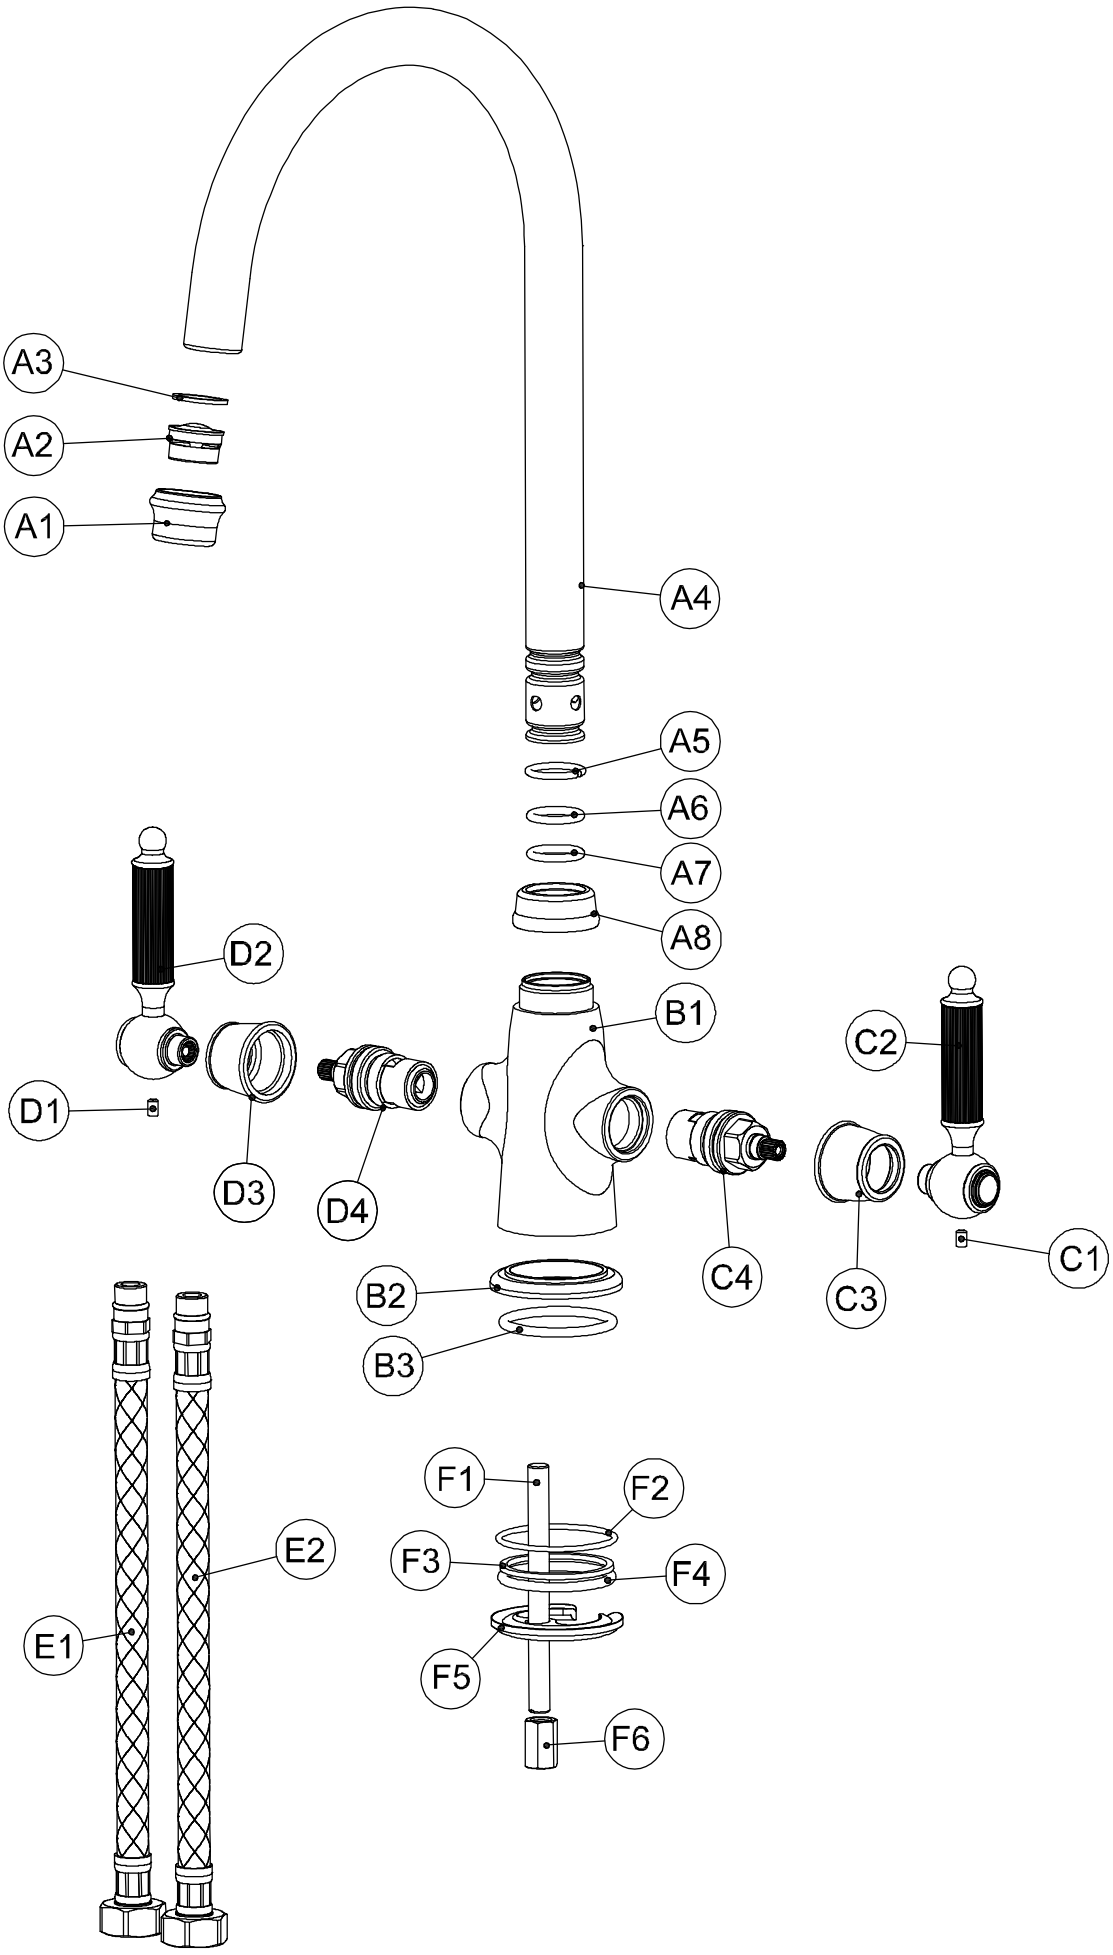

Ornate Monobloc

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Unscrew the grub screw (**D1**) using a 2mm A/F Allen key.
2. Pull the handle (**D2**) horizontally away from the tap body (**B1**).
3. Unscrew the valve cover (**D3**) from the valve (**D4**) by hand.
4. Holding the tap body (**B1**) unscrew the valve (**D4**) using a 17mm ring spanner or adjustable wrench.
5. Clean any debris from the chamber in the tap body (**B1**).
6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Whilst holding body (**B1**) unscrew the spout locking collar (**A8**)
2. Pull the spout (**A4**) vertically away from the body (**B1**).
3. Remove the old O-rings (**A6** & **A7**) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (**A5**).
5. Ensure the inside of the body (**B1**) and the spout base (**A4**) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (**A5**).
7. Carefully locate the new O-rings (**A6** & **A7**) onto the spout base (**A4**).
8. Grease the O-rings (**A6** & **A7**) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.