
Tubist Single Lever

abode

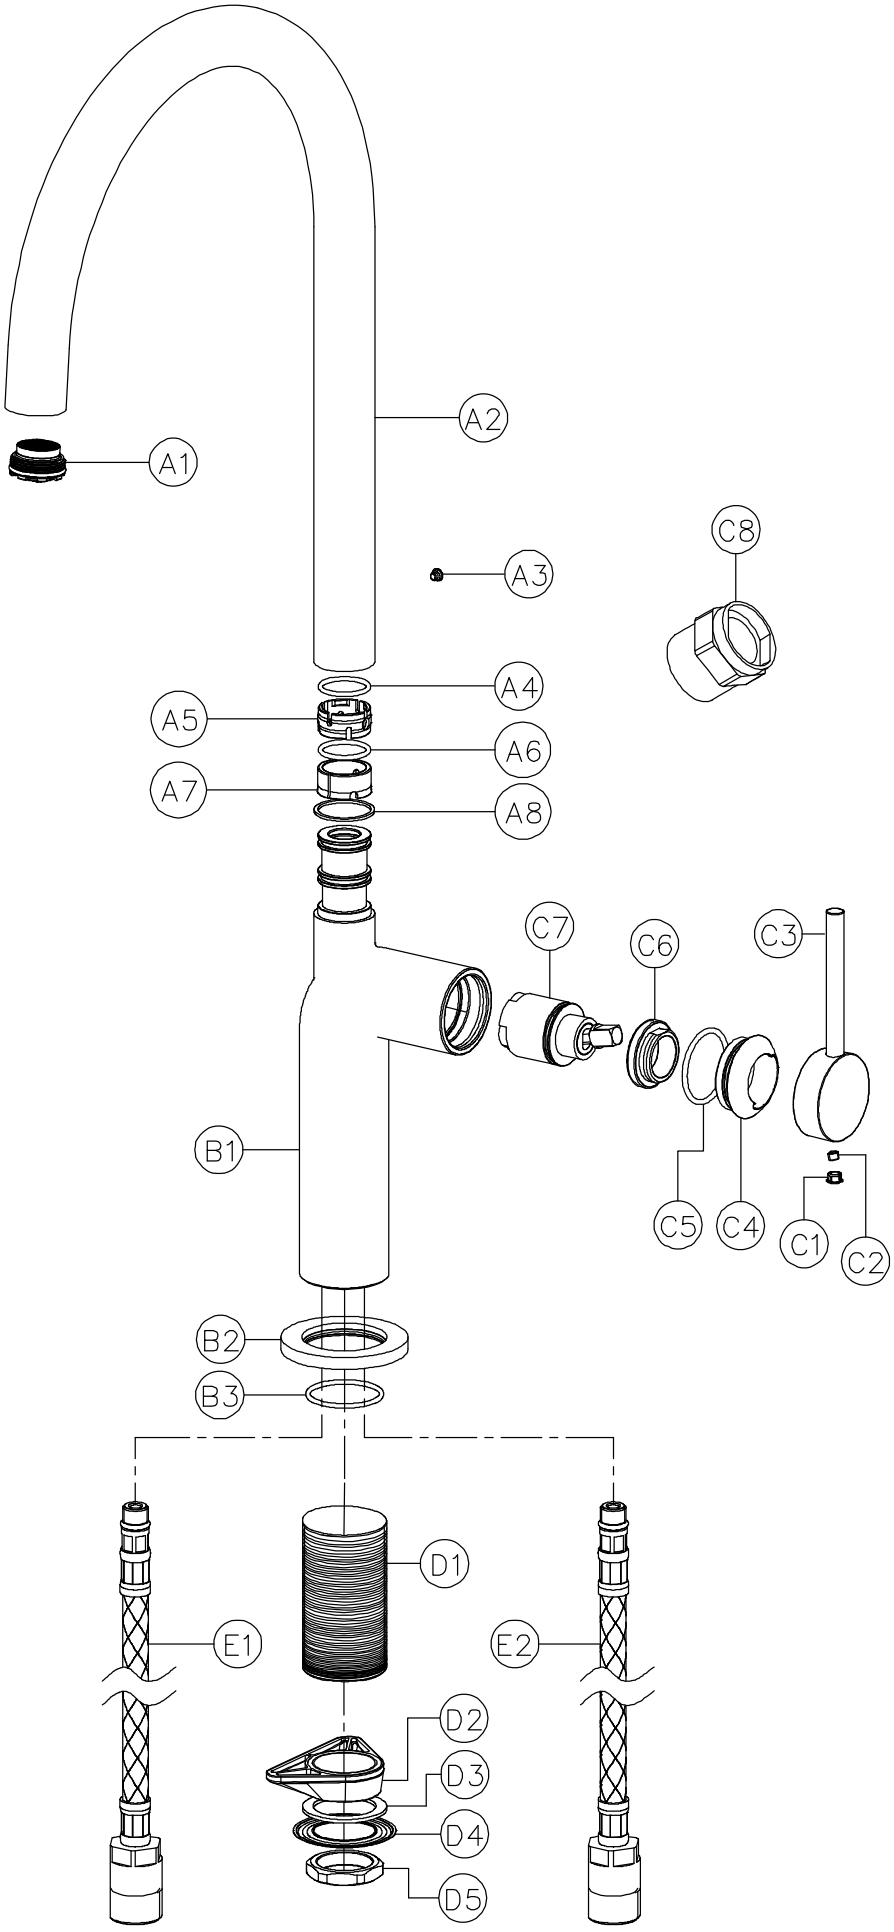

Tubist Single Lever

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Remove dust cap (C1) and unscrew grub screw (C2) using a 2.0 mm A/F allen key.
2. Pull the handle (C3) horizontally away from the tap body (B1).
3. Remove the decorative cover (C4) using a small electrical screwdriver pull away from tap body (B1)
4. O-ring (C5) should still be located on (C4).
5. Remove brass locknut (C6) using a valve adaptor tool (C8).
6. Clean the inside of chamber (B1) with a soft wet cloth.
7. Replace the faulty valve (C7) with the new one and assemble in reverse order.

To replace the spout o-rings:

1. Loosen grub screw (A3) on the back of the spout (A2) using a 2 mm A/F allen key.
2. Pull the spout (A2) vertically away from the tap body (B1).
3. Remove O-rings (A4 & A6) using a precision screwdriver.
4. Clean the base (B1) with a soft wet cloth.
5. Replace the O-ring (A4 & A6).
6. Typically, the PTFE rings (A5, A7 & A8) do not wear, replace if necessary.
7. Reassemble the tap in reverse order.

To clean the aerator:

1. Hold the spout head (A2) firmly.
2. Unscrew the aerator (A1) using a coin.
3. Extract the aerator (A1) and clean.
4. Reassemble the aerator in the reverse order.