
Zest Dual Lever Pull Out

abode

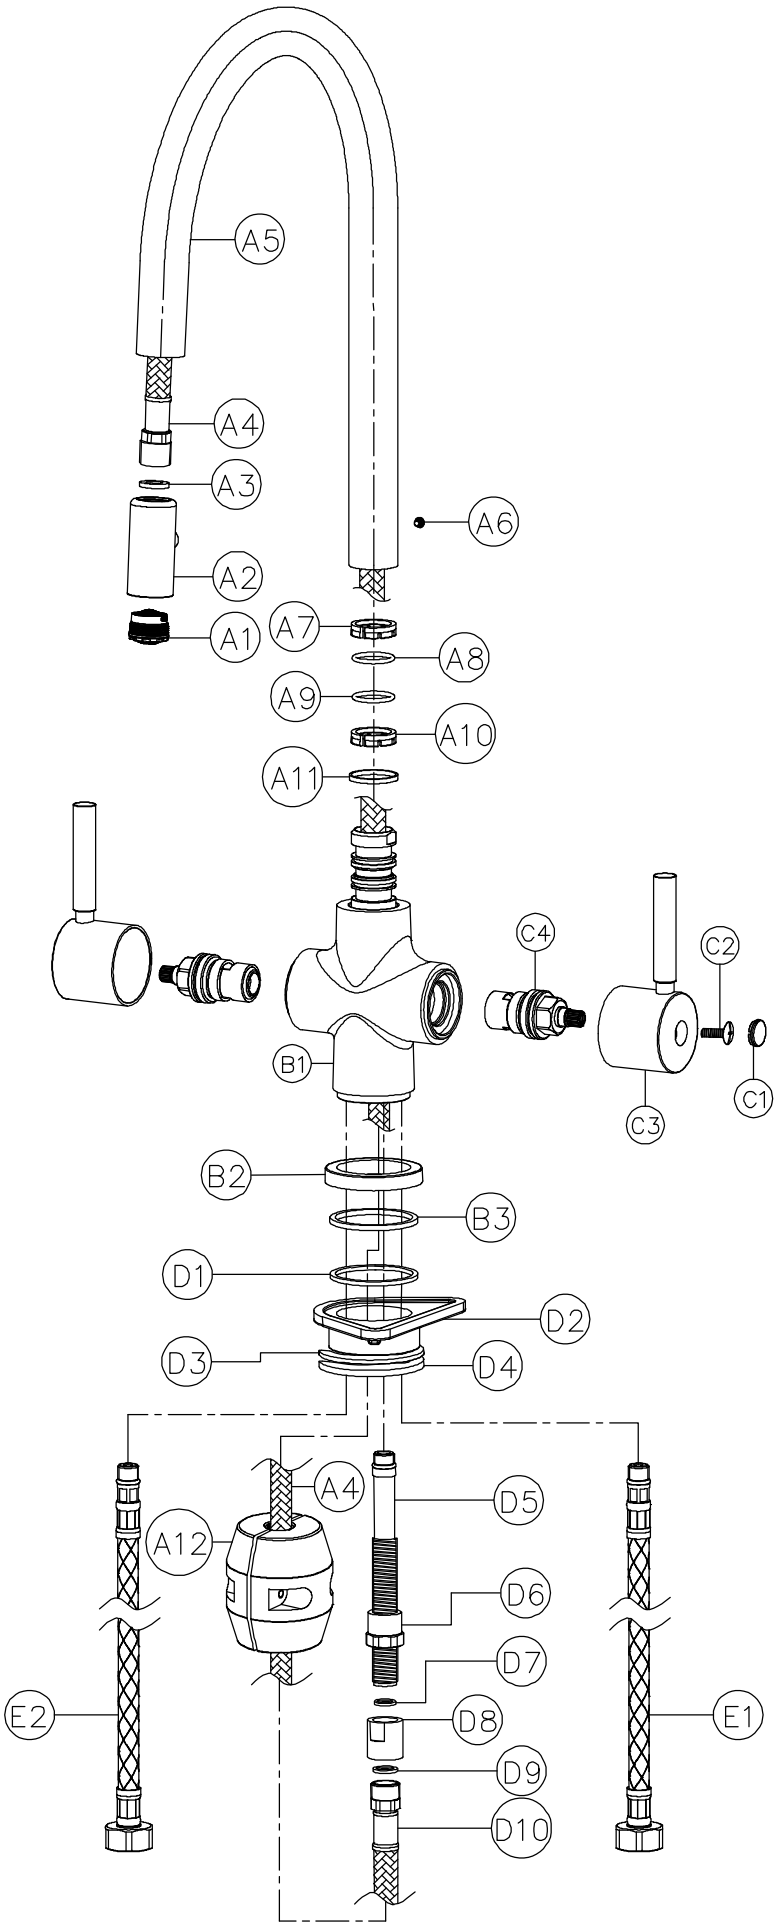

Zest Dual Lever Pull Out

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Remove indices dust cap (C1) and remove screw (C2).
2. Pull the handle (C3) horizontally away from the tap body (B1).
3. Remove valve (C4) using a 17mm socket.
4. Clean the Inside of chamber (B1) with a soft wet cloth.
5. Replace the faulty valve (C4) with the new one and assemble in reverse order.

To clean the aerator:

1. Hold the spray head (A2) firmly.
2. Unscrew the aerator (A1) using a coin.
3. Extract the aerator (A1) and clean.
4. Reassemble the aerator in the reverse order.

To replace the assembled spray head:

1. Hold the spray head (A2) firmly.
2. Unscrew the swivel nut on braided hose (A4) in an anti-clockwise direction.
3. Replace the spray head and be sure to include rubber washer (A3).
4. Assemble the spray head in reverse order.