
# Agilis Single Lever

abode

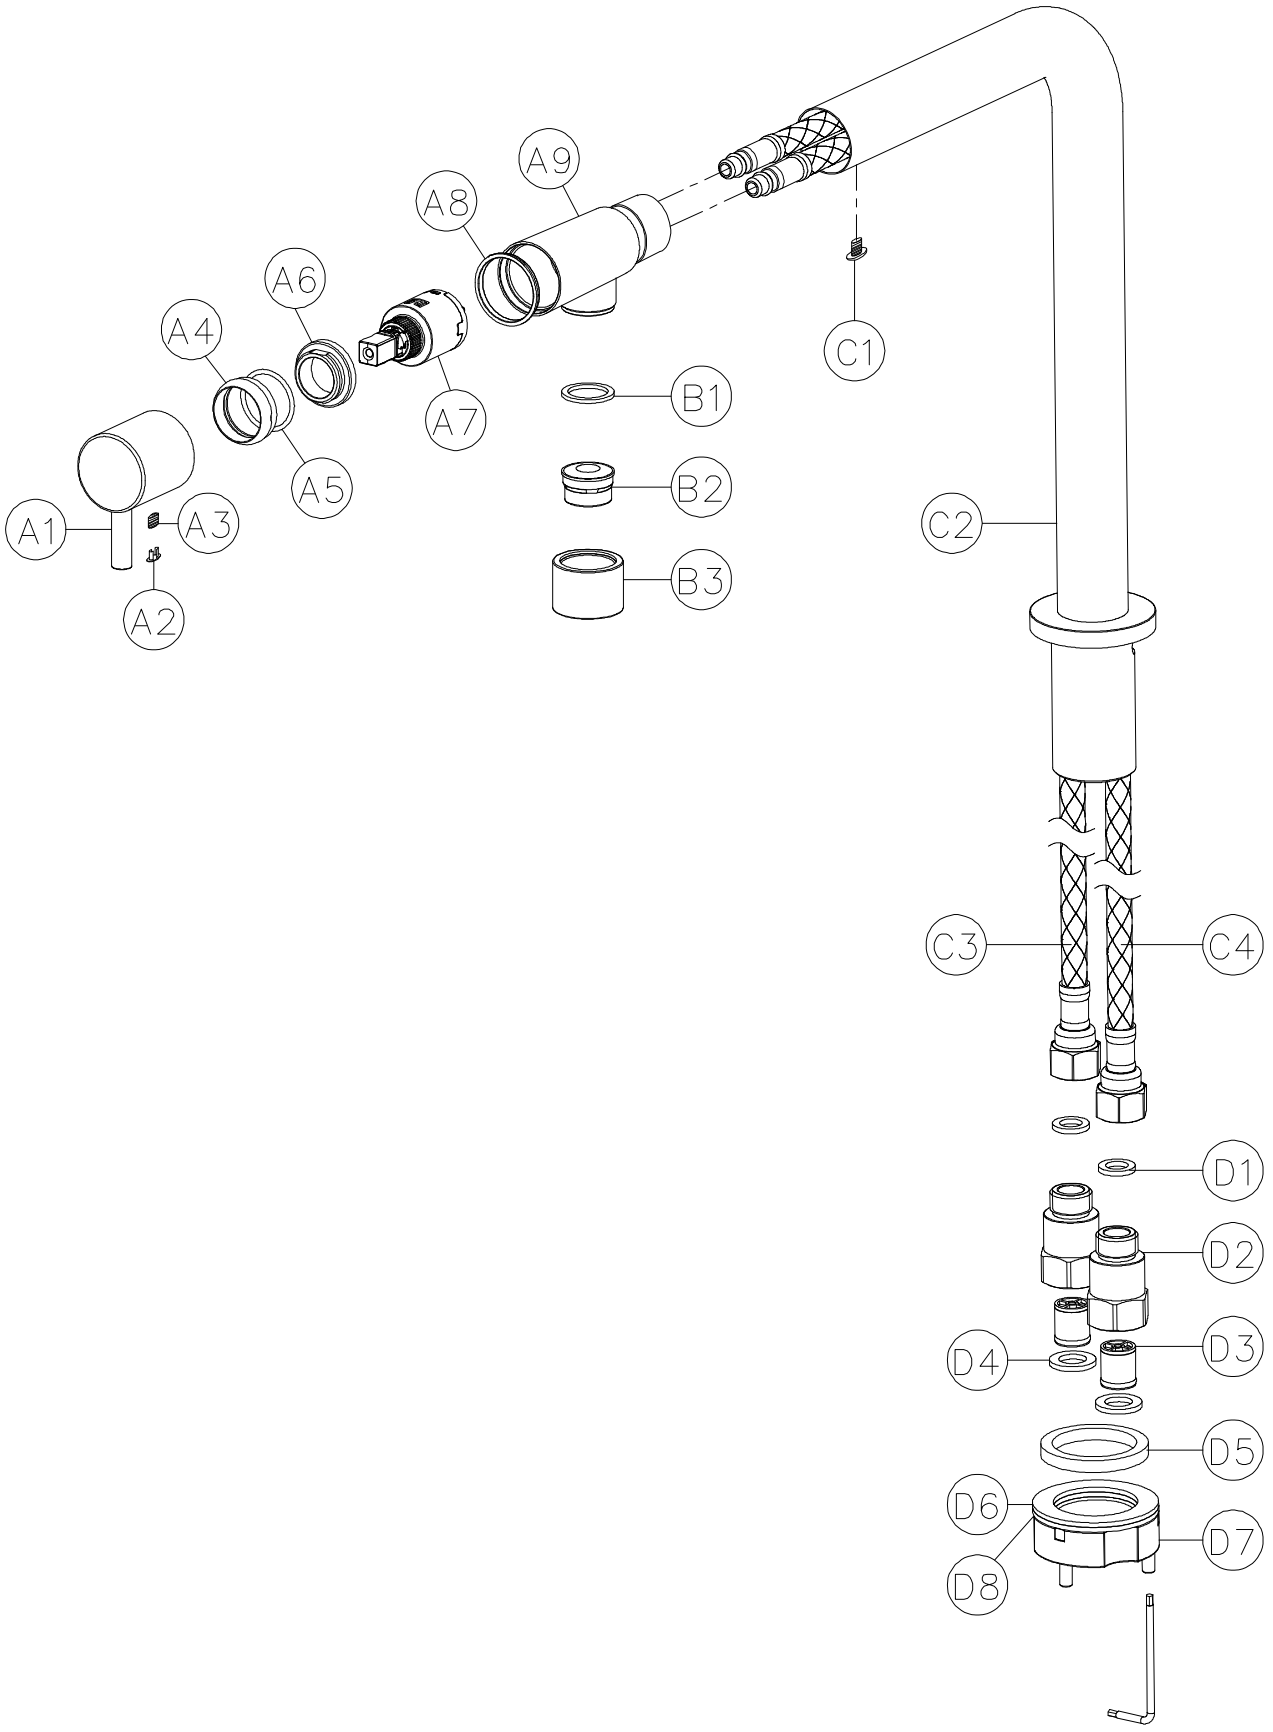

# Agilis Single Lever

**General Advice:**

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are watertight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

**To replace the valve:**

1. Remove the dust cover (A2) to expose grub screw (A3).
2. Unscrew grub screw (A3) in an anticlockwise direction using a 2.5mm A/F allen key.
3. Pull handle (A1) away from valve housing (A9).
4. Remove decorative cover (A4), O-ring (A5) will come off at the same time.
5. Remove indices ring (A8).
6. Remove valve retaining nut (A6) in an anticlockwise direction.
7. Replace the faulty valve (A7) with the new one and assemble in reverse order.

**To clean the aerator:**

1. Hold the valve housing (A9) firmly.
2. Unscrew the aerator housing (B3) by hand.
3. Clean the aerator (B2).
4. Reassemble the tap in the reverse order, ensure to include seal (B1).

**Important note** – Braided hoses (C3 & C4) are a non-serviceable parts.