
Atlas Quad Monobloc

abode

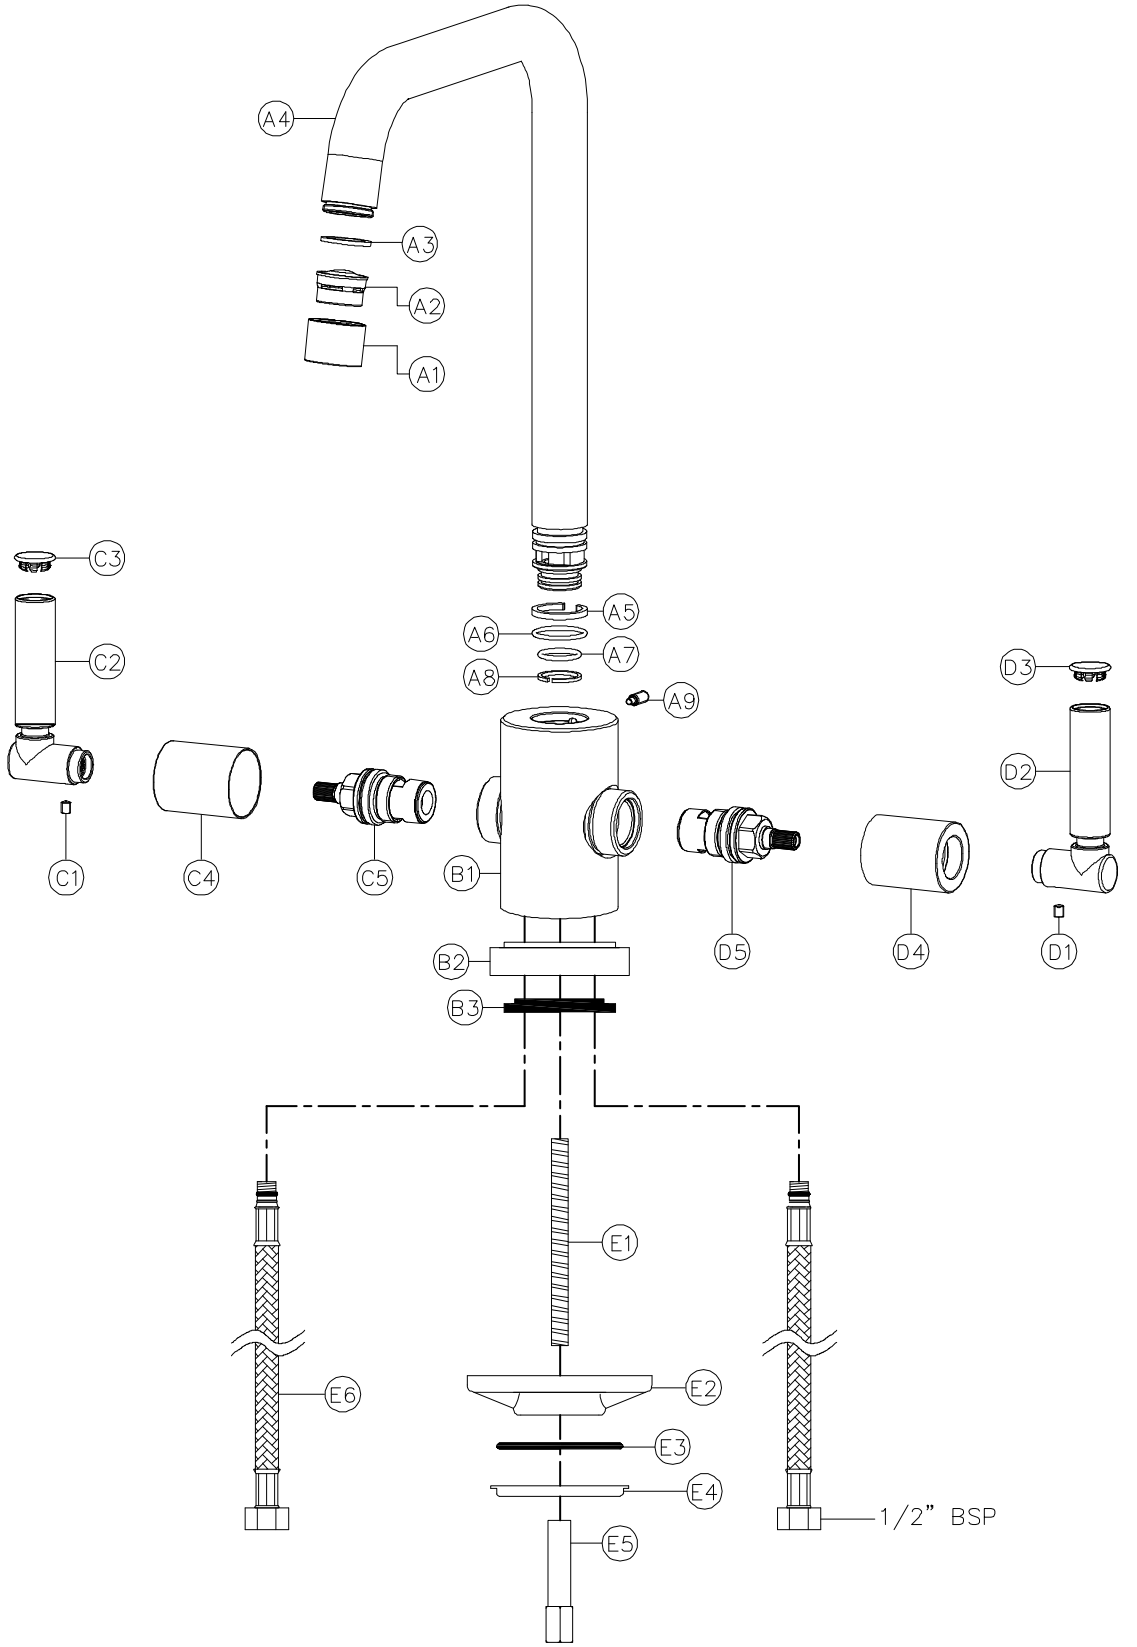

Atlas Quad Monobloc

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are watertight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the cold valve:

1. Loosen grub screw (D1) on the underside of handle (D2) using a 2mm A/F allen key.
2. Pull handle (D2) horizontally away from the body (B1).
3. Unscrew the valve shroud (D4) and remove
4. Using a socket unscrew valve (D5) anticlockwise.
5. Replace the faulty valve (D5) with the new one and assemble in reverse order.

To replace the hot valve:

6. Loosen grub screw (C1) on the underside of handle (C2) using a 2mm A/F allen key.
7. Pull handle (C2) horizontally away from the body (B1).
8. Unscrew the valve shroud (C4) and remove
9. Using a socket unscrew valve (C5) anticlockwise.
10. Replace the faulty valve (C5) with the new one and assemble in reverse order.

To replace the spout o-rings:

1. Loosen grub screw (A9) on the back of body (B1) using a 2.5mm A/F allen key.
2. Pull the spout (A4) vertically away from the tap body (B1).
3. Remove upper PTFE ring (A5 & A8) and O-rings (A6 & A7) using a precision screwdriver
4. Clean the spout base (A4) with a soft wet cloth then replace the new O-rings carefully.
5. Reassemble the tap in reverse order, ensure the gap in upper PTFE ring (A5) aligns with the grub screw (A9)

To clean the aerator:

1. Hold the spout (A4) firmly.
2. Unscrew the aerator housing (A1) by hand
3. Clean the aerator (A2).
4. Reassemble the tap in the reverse order, ensure to include seal (A3).