TAP3250-51 – Garda Dual Lever Tap

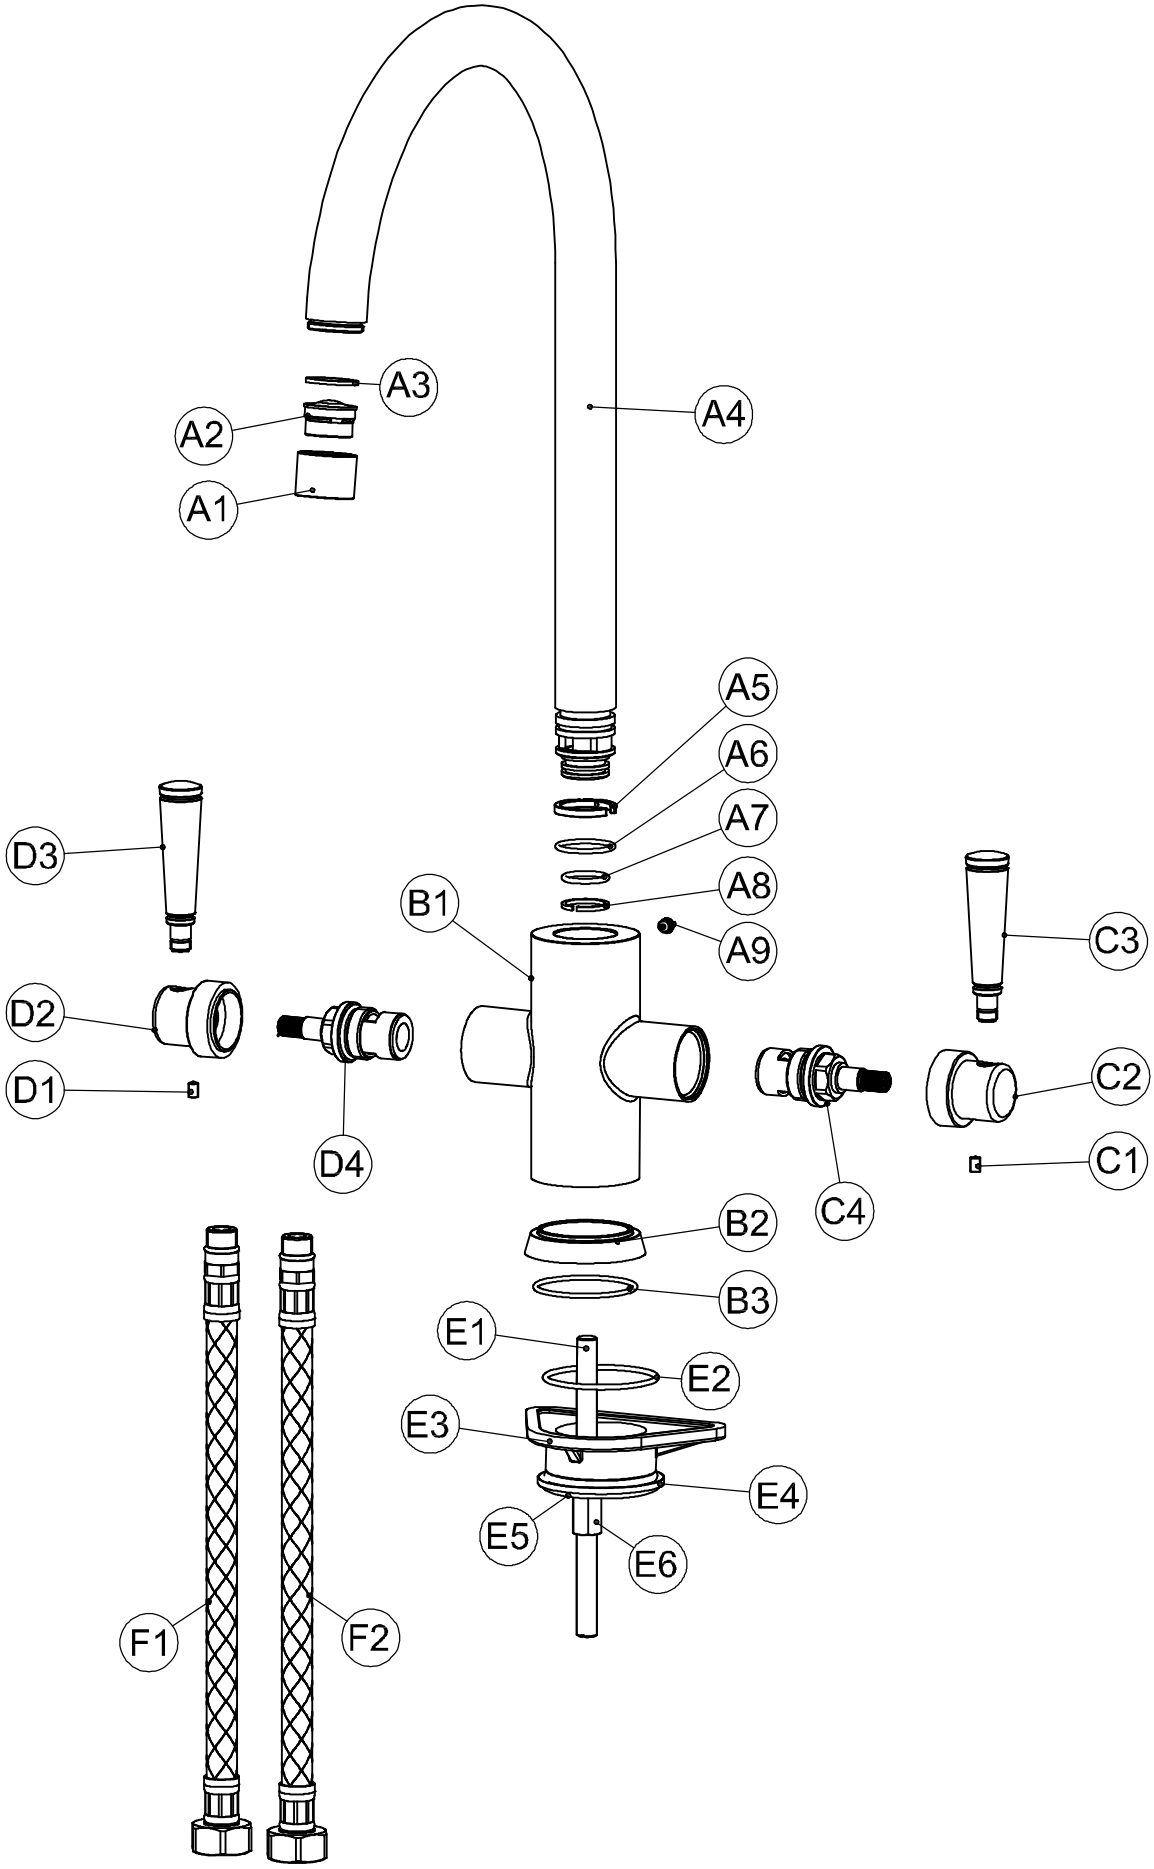

© Abode Home Products Limited

TAP3250-51 – Garda Dual Lever Tap

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are watertight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Unscrew the grub screw (C1) using a 2mm A/F Allen key.
2. Pull the handle (C2) horizontally away from the tap body (B1).
3. Holding the tap body (B1) unscrew the valve (C4) using a 17mm ring spanner or adjustable wrench.
4. Clean any debris from the chamber in the tap body (B1).
5. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Loosen grub screw (A9) on the rear of body (B1) using a 2.5mm A/F Allen key.
2. Pull the spout (A4) vertically away from the body (B1).
3. Remove the old O-rings (A6 & A7) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A5 & A8).
5. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A5 & A8).
7. Carefully locate the new O-rings (A6 & A7) onto the spout base (A4).
8. Grease the O-rings (A6 & A7) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.

© Abode Home Products Limited