TAP3254-55 – Garda Single Lever Pull Out Tap

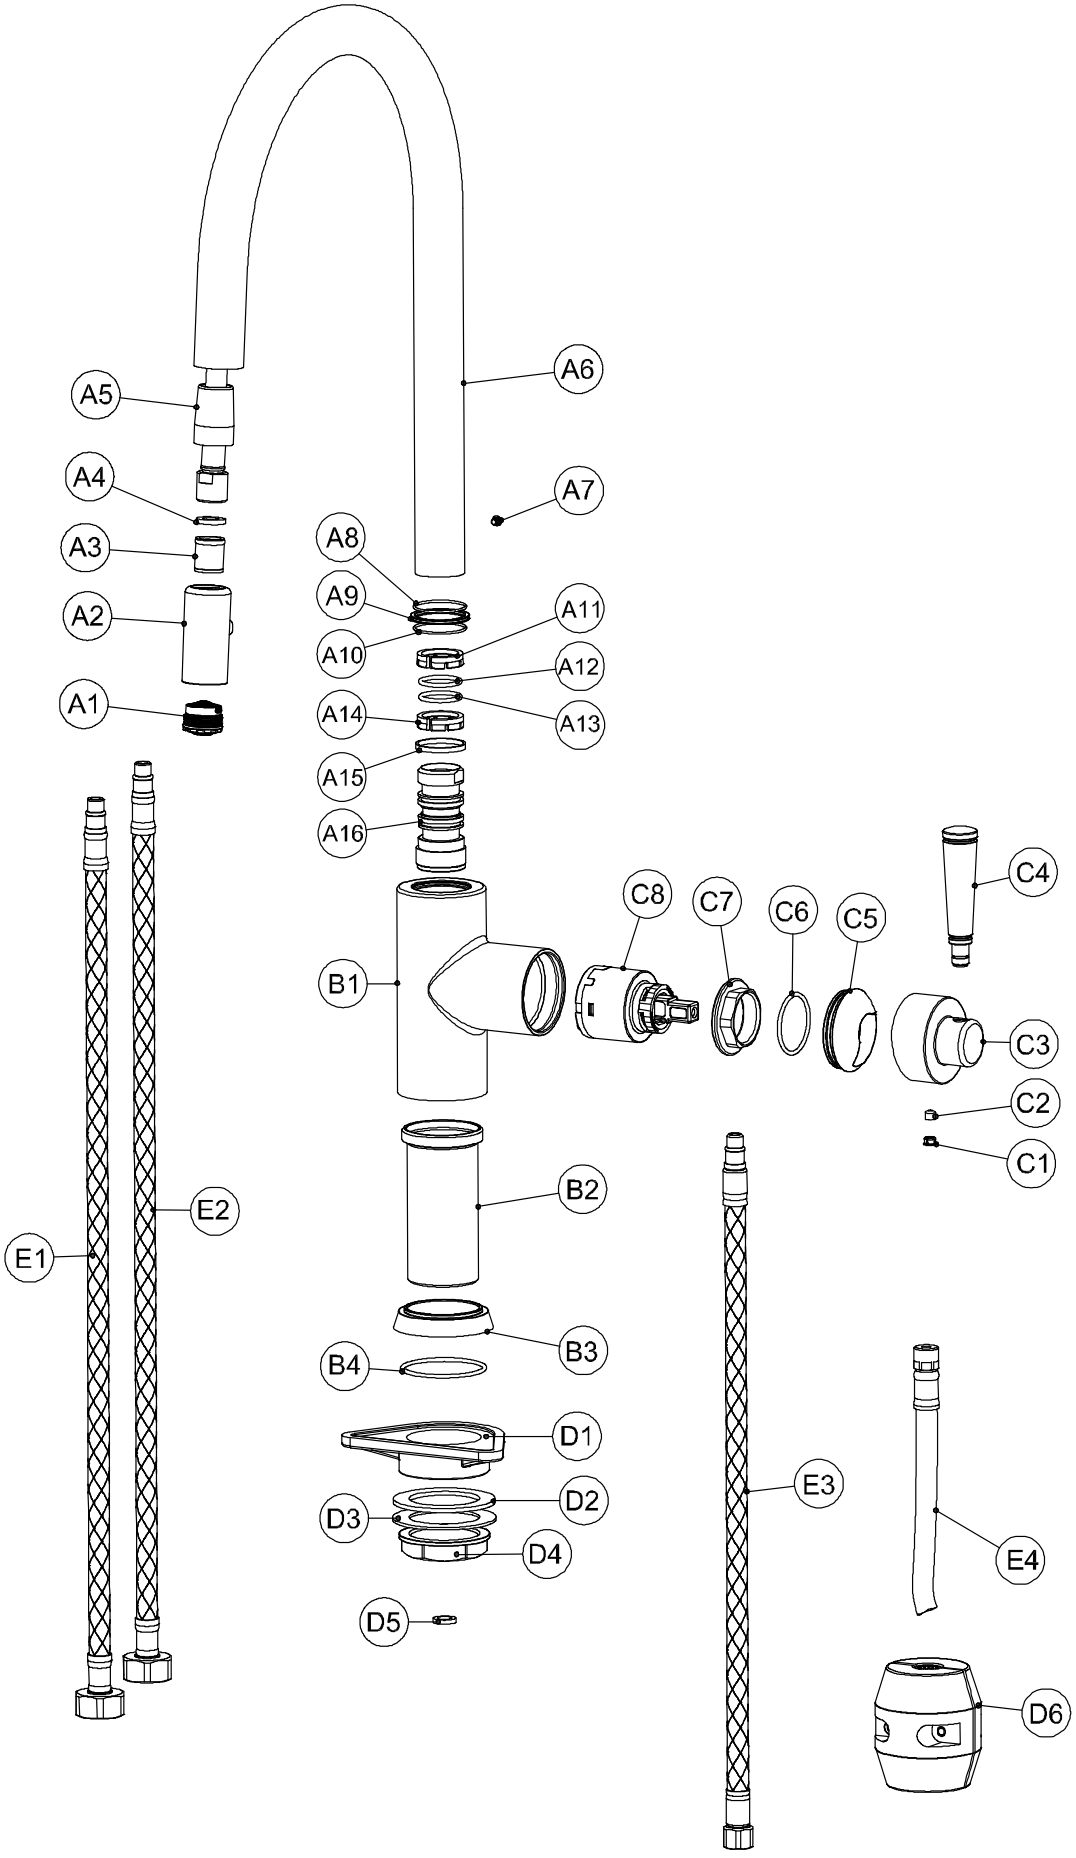

© Abode Home Products Limited

TAP3254-55 – Garda Single Lever Pull Out Tap

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are watertight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Remove dust cap (C1) and loosen grub screw (C2) using a 2.5mm A/F Allen key.
2. Pull the handle (C3) horizontally away from the tap body (B1).
3. Pull decorative cover (C5) horizontally away from tap body (B1).
4. Holding the tap body (B1) unscrew the valve nut (C7) using an adjustable wrench or 27mm socket.
5. Remove the valve (C8).
6. Clean any debris from the chamber in the tap body (B1).
7. Replace the faulty valve (C8) with the new one and assemble in reverse order.

© Abode Home Products Limited