TAP8318 – Victorian Bridge (Aged Brass)

Key:	Description:	APX size (mm):	Base material:	Colour:	QTY:
A1	Aerator housing	M22 F	Brass	Aged Brass	1
A2	Aerator	Neoperl Honeycomb	Plastic	Blue/Grey	1
A3	Rubber gasket	21 x 1.4	Rubber	Black	1
A4	Spout	210 x 210	Brass	Aged Brass	1
A5	Spout locking collar	16 x 31	Brass	Aged Brass	1
A6	Anti friction split ring	22 OD	Plastic	White	1
A7	O-ring	18 OD	Rubber	Black	1
A8	O-ring	18 OD	Rubber	Black	1
B1	Tap body	205 x 65	Brass	Aged Brass	1
B2	Inlet seal	2 x 25	Rubber	Black	2
B3	Inlet leg	187 x 48	Brass	Aged Brass/Brass	2
B4	Base plinth	50 x 6	Brass	Aged Brass	2
C1	Indices	14 x 7	Plastic	Aged Brass	1
C2	Handle	81 x 13	Mazak/Plastic	Aged Brass/White	1
C3	Grub screw	M4 x 6	Metal	Silver	1
C4	Valve cover	19 x 29.5	Brass	Aged Brass	1
C5	Hot valve	½" CD, length 53mm	Brass	Brass	1
D1	Indices	14 x 7	Plastic	Aged Brass	1
D2	Handle	81 x 13	Mazak/Plastic	Aged Brass/White	1
D3	Grub screw	M4 x 6	Metal	Silver	1
D4	Valve cover	19 x 29.5	Brass	Aged Brass	1
D5	Hot valve	½" CD, length 53mm	Brass	Brass	1
E1	Upper/Lower seal	46 x 4	Rubber	White	4
E2	Fixing nut	38.5 x 11	Plastic	Black	2
X1	Spout base assembly	N/A	N/A	N/A	1
X2	Fitting assembly	N/A	N/A	N/A	1

© Abode Home Products Limited

TAP8318 – Victorian Bridge (Aged Brass)

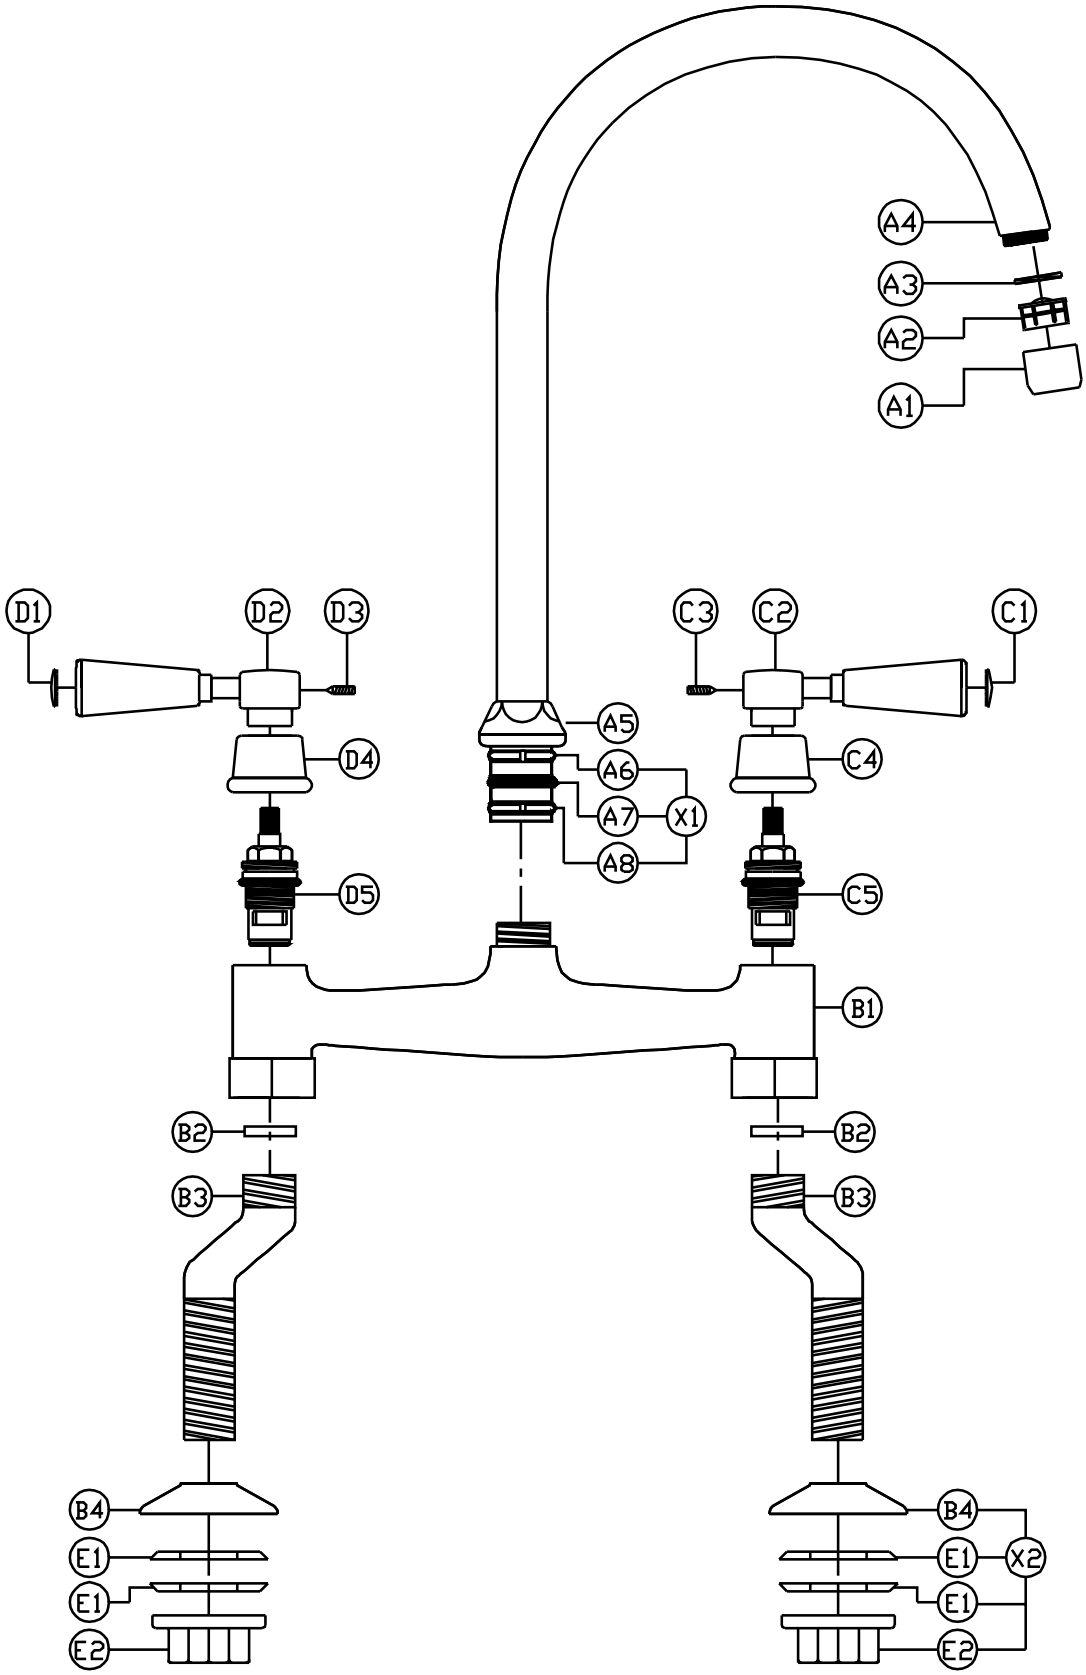

© Abode Home Products Limited

TAP8318 – Victorian Bridge (Aged Brass)

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Unscrew the grub screw (D3) using an allen key.
2. Pull the handle (D2) vertically away from the tap body (B1).
3. Unscrew the valve cover (D4) from the valve (D5) by hand.
4. Holding the tap body (B1) unscrew the valve (D5) using a 17mm ring spanner or adjustable wrench.
5. Clean any debris from the chamber in the tap body (B1).
6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Whilst holding body (B1) unscrew the spout locking collar (A5)
2. Pull the spout (A4) vertically away from the body (B1).
3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A6).
5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A6).
7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
8. Grease the O-ring (A7 & A8) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.

© Abode Home Products Limited