TAP9159 – Lanzo Single Lever Tap (Chrome)

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Aerator housing	22 x 10	Metal	Silver	1
A2	Aerator	M22	Plastic	Grey/Green	1
A3	Spray head	58 x 24	Brass	Chrome	1
A4	Rubber seal	17 x 1.8	Rubber	Black	1
A5	Spray head connector	53 x 28.5	Brass	Chrome	1
A6	Spray hose	1.5m x 17.5	PVC	Black	1
A7	Bracket	215 x 48 x 38.5	Brass	Chrome	1
A8	Rubber seal	17 x 1.8	Rubber	Black	1
A9	Spout section	144 x 24	Brass	Chrome	1
A10	PTFE spacers	17 x 10	Plastic	White	2
A11	Spout O-rings	17.5 x 1.6	Rubber	Black	2
A12	Spacer	24 x 1	Plastic	Black	1
A13	Spout grub screw	5 x M4	Metal	Silver	1
B1	Tap body	80 x 70 x 43	Brass	Chrome	1
B2	Lower body section	71 x 48	Zamak	Chrome	1
B3	Upper seal	2.0 x 40 OD	Rubber	White	1
C1	Handle grub screw	6 x M4	Metal	Silver	1
C2	Handle	102 x 42 x 25	Zamak	Chrome	1
C3	Decorative cover	38 x 12	Plastic	Chrome	1
C4	Valve lock nut	36 x 10	Brass	Brass	1
C5	Cartridge	35mm Single Lever Ceramic	Plastic	Light blue	1
D1	Fixing stud	M8 x 140	Metal	Silver	1
D2	Body fixing nut	4 x 15	Metal	Silver	1
D3	Lower seal	3.5 x 44 OD	Rubber	Black	1
D4	Metal horseshoe	51 x 4.5	Steel	Silver	1
D5	Fixing nut	15 x 11 AF	Brass	Brass	1
D6	Hot flexi tail	½" BSP Male x 355mm	Stainless braided hose	Silver/Red	1
D7	Cold flexi tail	½" BSP Female x 360mm	Stainless braided hose	Silver/Blue	1
D8	Non-return valve	16 x 15	Plastic	White	1

© Abode Home Products Limited

TAP9159 – Lanzo Single Lever Tap (Chrome)

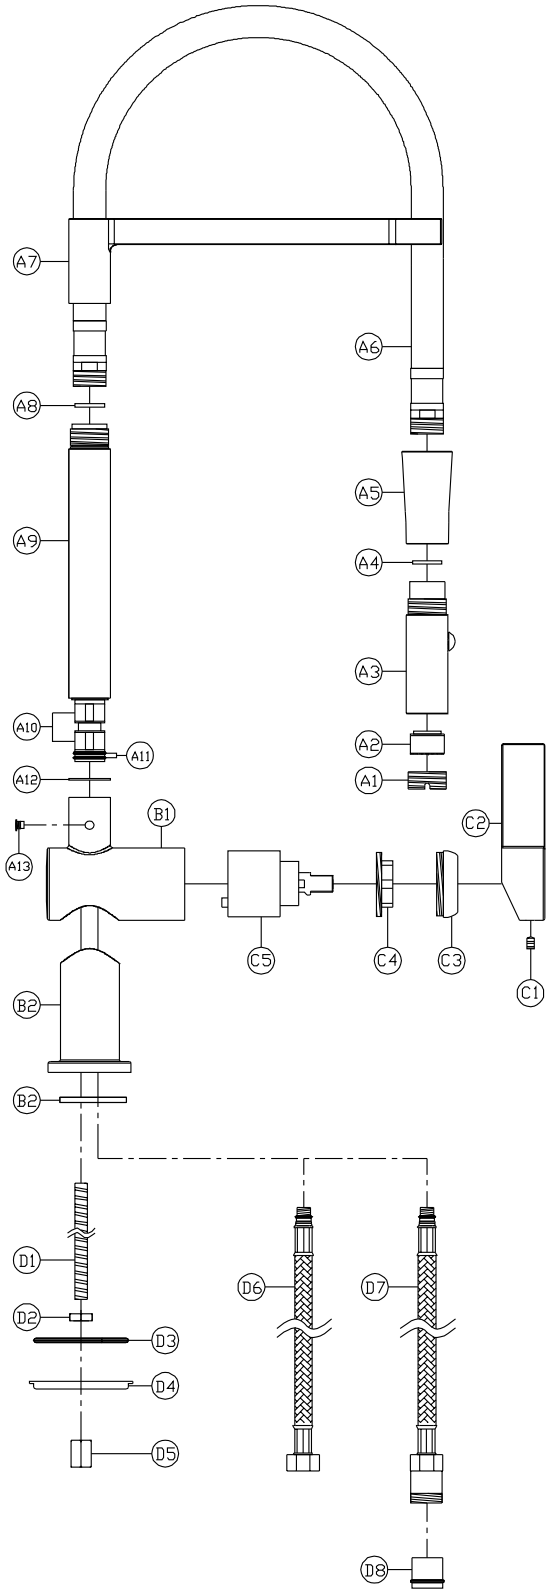

LAMONA
Exclusive to Howdens Joinery Co.

TAP9159 - Lanzo Single Lever service drawing v1

our policy is to continually improve and develop products, and accordingly we reserve the right to amend specifications without prior notice

© Abode Home Products Limited

TAP9159 – Lanzo Single Lever Tap (Chrome)

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Loosen grub screw (C1) on the underside of handle (C2) using a 2.0mm A/F Allen key.

2. Pull the handle (C2) horizontally away from the tap body (B1).

3. Unscrew the decorative cover (C3) horizontally away from tap body (B1) by hand.

4. With the tap (B1) fixed to the sink/base unit, using an adjustable spanner unscrew the valve lock nut (C4).

5. Clean the Inside of chamber (B1) with a soft wet cloth.

6. Replace the faulty valve (C5) with the new one and assemble in reverse order.

© Abode Home Products Limited