TAP3464 Sennen Single Lever Pull Out

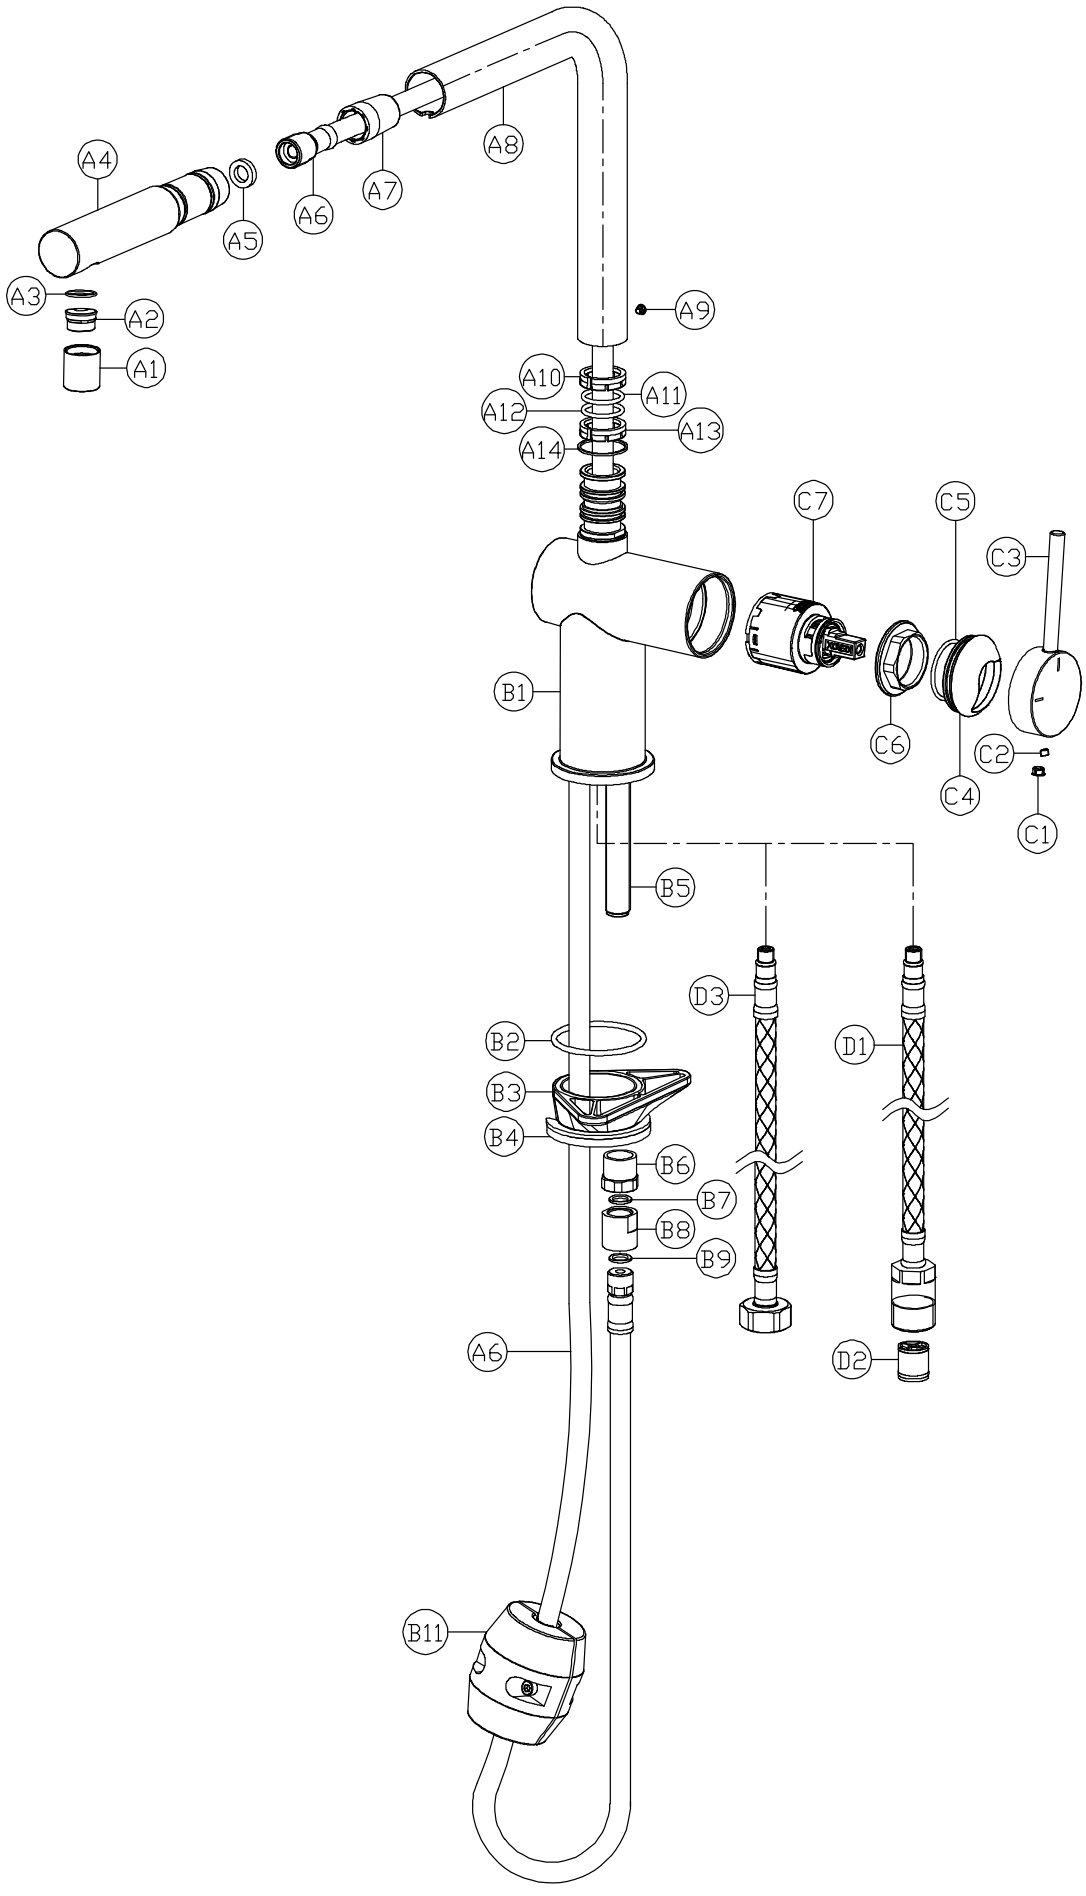

© Abode Home Products Limited

TAP3464 Sennen Single Lever Pull Out

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the cold valve:

1. Remove dust cap (C1) and loosen grub screw (C2) on the underside of handle (C3) using an 2mm A/F Allen key.
2. Pull the handle (C3) horizontally away from the tap body (B1).
3. Pull decorative cover (C4) horizontally away from tap body (B1) by hand.
4. O-ring (C5) should be attached to decorative cover (C4).
5. With the tap (B1) fixed to the sink/base unit, use a standard 27mm socket to unscrew the valve lock nut (C6).
6. Clean the Inside of chamber (B1) with a soft wet cloth.
7. Replace the faulty valve (C7) with the new one and assemble in reverse order.

To clean the aerator:

1. Hold the spray head (A4) firmly.
2. Unscrew the aerator housing (A1).
3. Extract the aerator (A2) and clean.
4. Reassemble the aerator in the reverse order, ensure flat rubber washer (A3) is in place during reassembly.

To replace the assembled spray head:

1. Hold the spray head (A4) firmly.
2. Unscrew the decorative housing (A7).
3. Using a small adjustable spanner unscrew the brass swivel threaded bar (A6) in an anti-clockwise direction whilst holding spray head (A4).
4. Reassemble in reverse order, ensure flat rubber washer (A5) is in place during reassembly.

© Abode Home Products Limited