TAP6070, TAP6071 BLACKWATER Professional

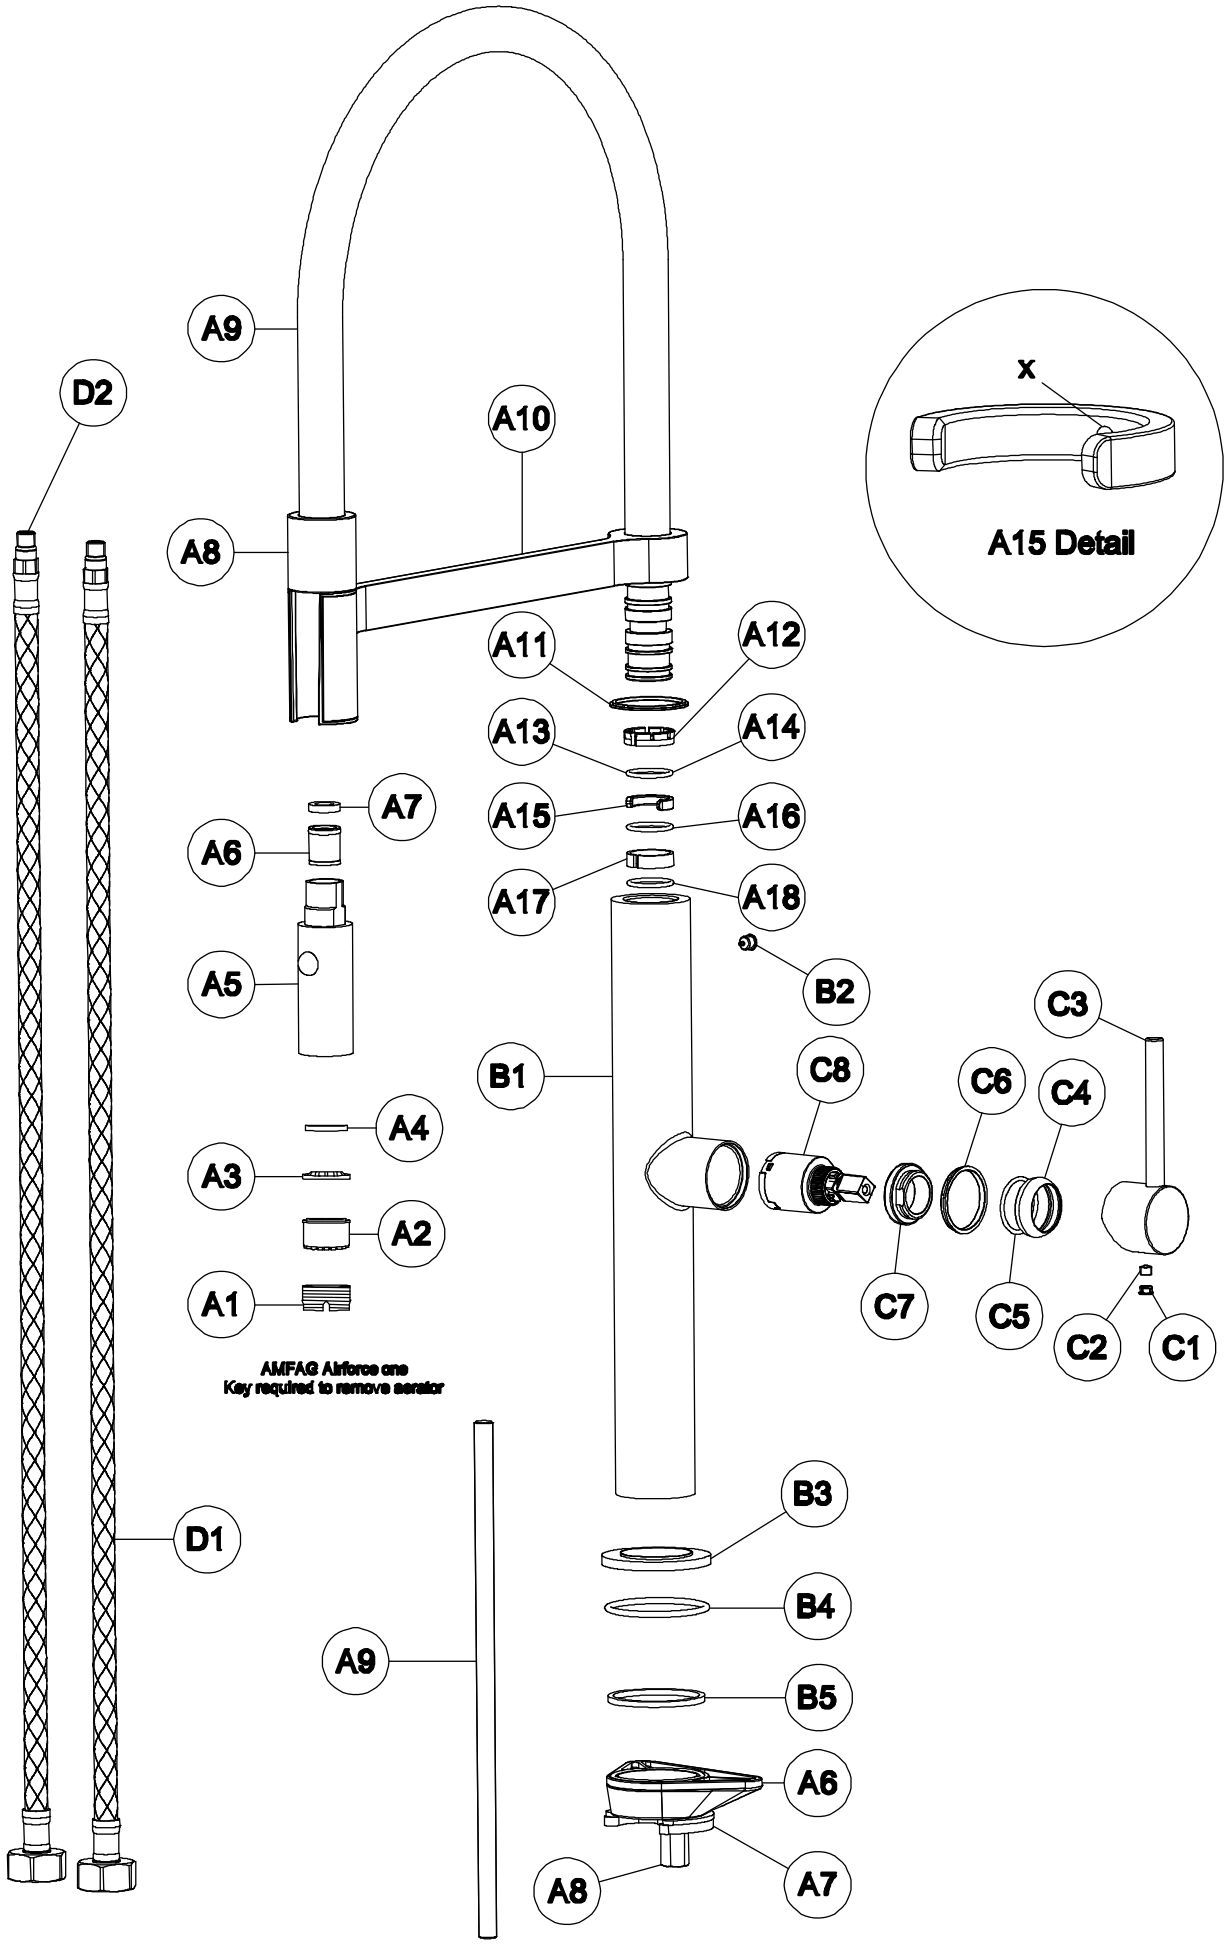

TAP6070, TAP6071 BLACKWATER Professional

General Advice:

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are watertight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace a valve:

1. Using a precision screwdriver remove decorative cover (C1)
2. Loosen grub screw (C2) using a 2.5mm A/F allen key.
3. Pull control handle (C3) away from the body (B1).
4. Using a precision screwdriver remove decorative cover (C4)
5. Remove the indices ring (C6)
6. Using a 20mm open end spanner or adjustable spanner remove valve retaining nut (C7).
7. Remove old valve (C8) and replace with the new one – note the orientation of the locating lugs on the bottom of the valve and ensure they align with the holes inside the valve body (B1).
8. Assemble in reverse order.

To replace the spout o-rings:

1. Remove grub screw (B2) using a 3mm A/F allen key.
2. Pull the spout (A9) vertically away from the tap body (B1).
3. Remove O-ring's and PTFE rings (A11) to (A18) using a precision screwdriver, please note that (A11) is a thin spacing washer that sits on the tap body (B1)
4. Clean the spout base (A9) with a soft wet cloth then carefully fit the new O-rings. ***Important note*** – PTFE ring (A15) has a location hole for grub screw (B2) (Shown as detail x).
5. Reassemble the tap in reverse order ensuring the hole in PTFE ring (A15) aligns with the hole for grub screw (B2).

To clean the aerator:

1. Hold the spout head (A5) firmly.
2. Using an 'AMFAG air-force key' remove the aerator housing (A1).
3. Clean the aerator.
4. Reassemble in reverse order taking care to replace the seals (A3) & (A4) in the correct order.