# Knurle Dual Lever

abode

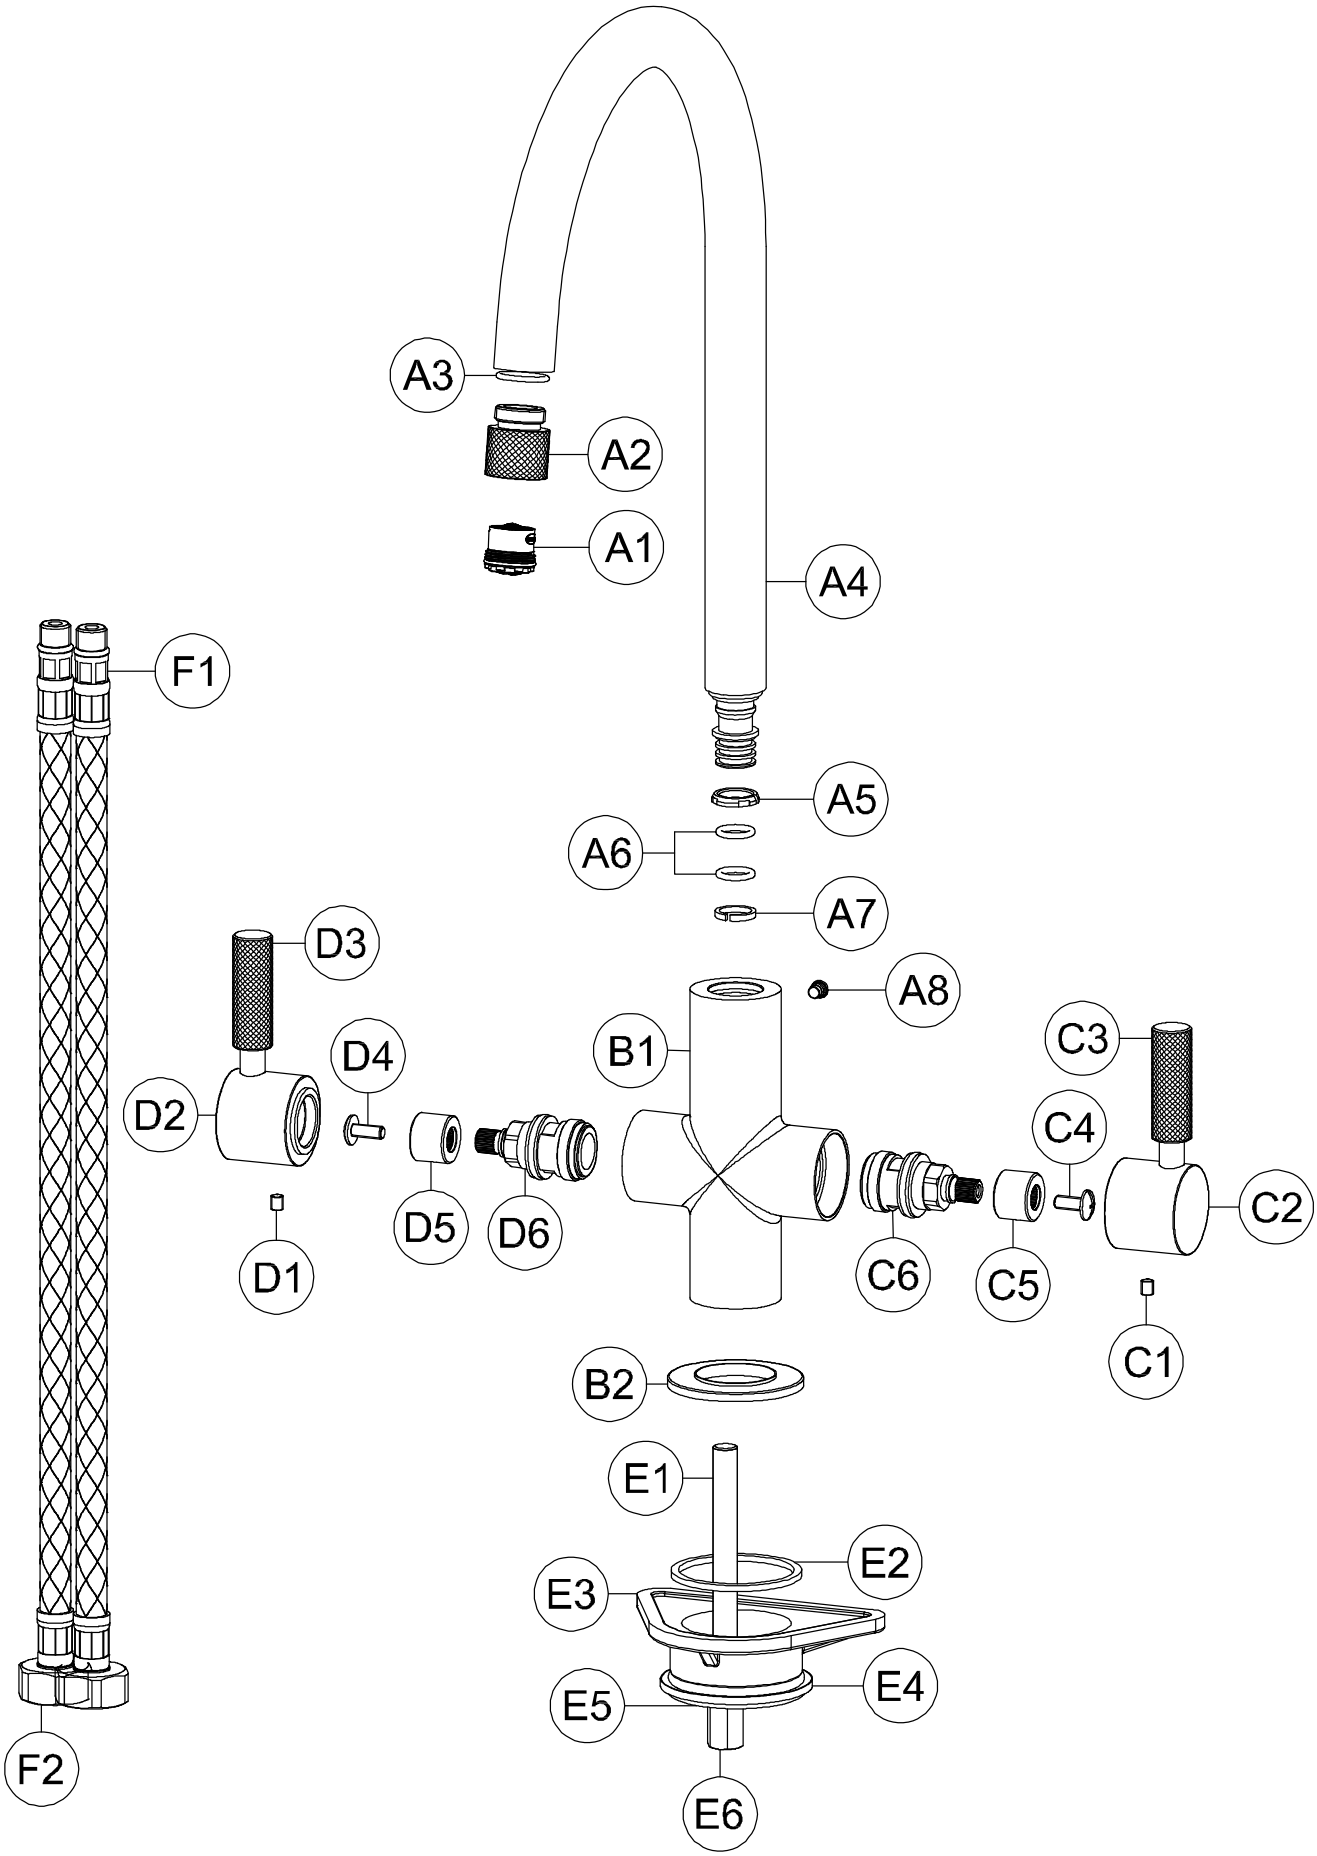

# Knurle Dual Lever

**General Advice:**

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

**To replace the hot valve:**

1. Loosen grub screw (**D1**) on the underside of handle (**D2**) using a 2.5mm A/F Allen key.
2. Pull handle (**D2**) horizontally away from the body (**D1**).
3. Unscrew screw (**D4**) and pull bush (**D5**) horizontally away from valve (**D6**).
4. Using a socket unscrew valve (**D6**) anticlockwise.
5. Replace the faulty valve (**D6**) with the new one and assemble in reverse order.

**To replace the spout o-rings:**

1. Loosen grub screw (**A8**) on the back of body (**B1**) using a 2.5mm A/F Allen key.
2. Pull the spout (**A4**) vertically away from the tap body (**B1**).
3. Remove upper PTFE ring (**A5** & **A7**) and O-rings (**A6**) using a precision screwdriver and replace with new ones.
4. Reassemble the tap in reverse order.

**To clean the aerator:**

1. Hold the spout (**A4**) firmly.
2. Unscrew the aerator (**A1**) using an aerator key, slotted screwdriver or coin
3. Clean the aerator (**A1**).
4. Reassemble the tap in the reverse order.