


## BR10 Mini Lock Fitting Instructions

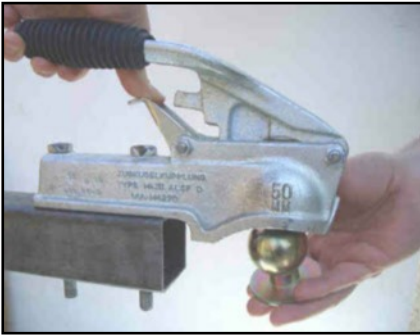

1. Insert the dummy ball when the trailer is unhitched by lifting the handle upwards, push the dummy ball into the socket and lower the handle. Insert the key into the lock and turn it a quarter turn anticlockwise, remove the lock bolt from the hitchlock and leave in the unlocked position.



2. With the blanked end of the bottom channel nearest the towing socket, position the channel under the hitch. With the open end of the top box nearest the towing socket place it over the bottom channel.



3. With the top box resting on the top of the handle of the hitch, position the bottom channel so both sets of holes line up.



4. With the lock bolt in the unlocked position, insert it through the holes, place the cup over the end of the locking bolt and lock in position by turning the key a quarter turn clockwise.

**WARNING:** Before unlocking Mini Lock with keys provided, please remember to support base with hand **I.e Mind your feet**

### Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171 Fax: 01952 728117

Email [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com) [www.bulldogsecure.com](http://www.bulldogsecure.com)

### Lock Lubrication.

**IMPORTANT** - To ensure free movement of the lock, spray lock Mechanism & ball bearings with WD40 (or equivalent) minimum every four months.