




Lockmakers since 1780

Recoding Instructions

How to recode the CP50

Lock Diagram

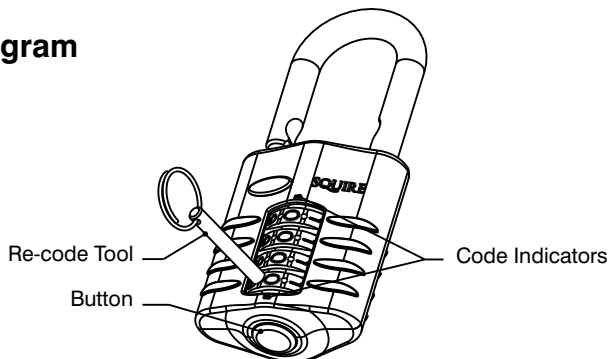

Instructions

1. The lock is pre-set at 0000. Set the wheels to this code and press the button on the bottom of the lock to open it. The code can only be changed when the lock is open.
2. To set your own code, first write down your new code in the box provided below. Choose a code which is easy to remember but is not easily guessed.
3. Insert the re-code tool into the wheel you wish to change.
4. Using the re-code tool as a lever, rotate the wheel to the required number, then go past the code indicator until the lever stops on the lock body, now turn the wheel back until the required number lines up with the code indicator, you will feel it click into place. You may rotate the wheel in either direction. Ensure that the number lines up with the code indicators.
5. Repeat instructions 3-4 for the additional wheels you wish to change.
6. Close shackle and test the code by pressing the button to re-open the lock. If the shackle does not lock it is because one or more numbers are not in line. Repeat the procedure above.
7. Your lock is now ready to use.
8. Remember to scramble the wheels when closing the lock.

--	--	--	--

Record your code & store in a safe place

IMPORTANT - Lubricate frequently with WD40 or a light oil

Henry Squire & Sons Limited

Hilton Cross Business Park, Cannock Road, Featherstone, Wolverhampton, WV10 7QZ

Tel: 01902 308050

Fax: 01902 308051

E-Mail: info@henry-squire.co.uk

Website: www.squirelocks.co.uk