


AI20 Airline Lock Fitting Instructions

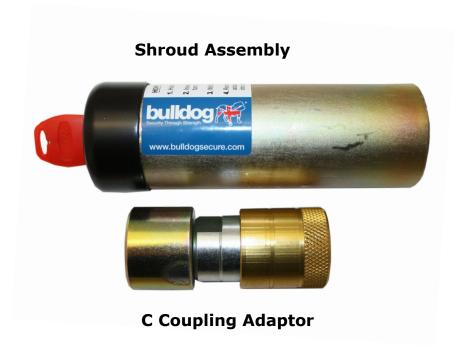

How To Lock.

- 1. Insert the key and turn a quarter of a turn anticlockwise to release C coupling adaptor.
- 2. Gently tip the assembly forward so the adaptor slides out.
- 3. Push the C coupling complete with adaptor onto the male connector of the red airline of the trailer.
- 4. Push the lock assembly over the coupling and lock in position using the key.

How To Unlock.

- 1. Hold the outer shroud.
- 2. Insert the key and turn a quarter of a turn anticlockwise.
- 3. Withdraw shroud.
- 4. Remove C coupling adaptor and lock back in place in the shroud.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH. Tel: 01952 728171 Fax: 01952 728117

Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.