
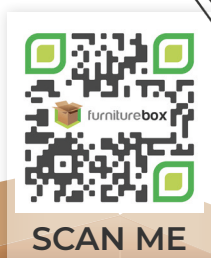


OXFORD BEDSIDE TABLE

ASSEMBLY GUIDE

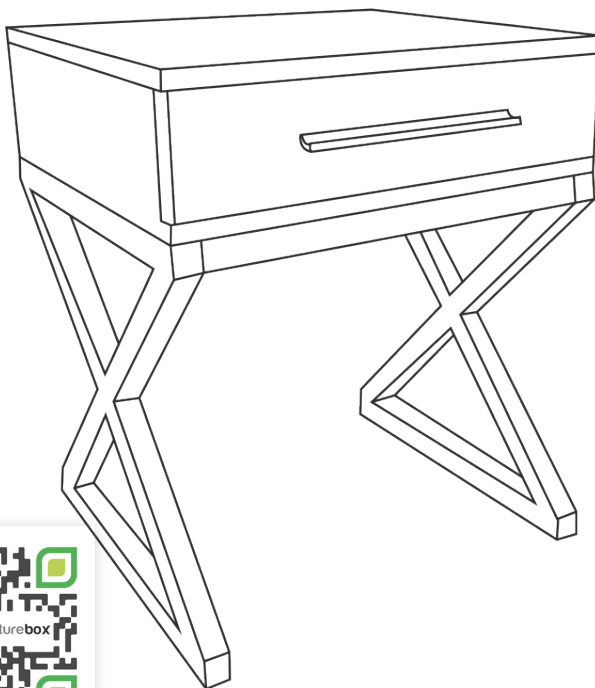

www.furniturebox.co.uk

Scan QR code for more tips, advice
and assembly video or visit
furniturebox.co.uk/club/oxford-bedside

Important - Please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre



Follow us on Instagram
@furniturebox_uk

IMPORTANT INFORMATION



45 MINUTE
BUILD





TWO
PERSON



MAXIMUM
CAPACITY 100Kg

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL
FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

① x2 	② x2 
③ x1 	④ x1 
A x8  M6X10mm	B x4  M6X45mm
C x12  Ø6X18mm	D x1  M4
E x2  M4X18mm	

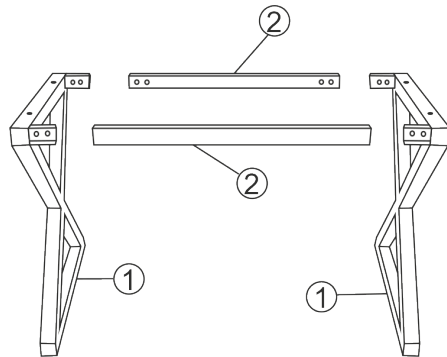

NOTE: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.





furniturebox

STEP 1

Use a clear, flat, soft surface to avoid bumps or scratches.

First assemble the bottom chrome frame. Set out the end pieces [1] and cross bars [2] as per the diagram and align the holes.

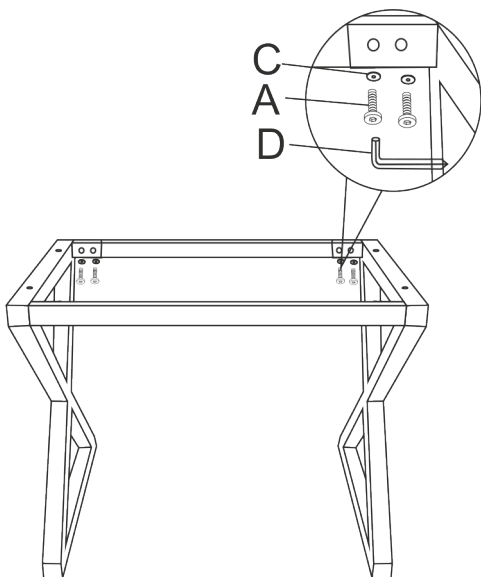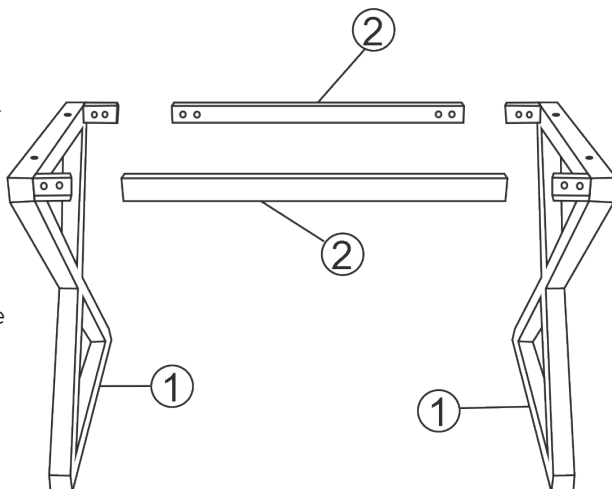

STEP 2



Connect the end pieces [1] to the cross bars [2] using 2 x washer [C] followed by 2 x screw [A] in each corner. Tighten with Allen Key [D].



Follow us on Instagram
@furniturebox_uk

STEP 3

Place the high-gloss drawer unit [3] upside down on the soft flat surface. Place the chrome frame onto the drawer unit [3] and align the holes. Connect the chrome frame to the drawer unit using 2 x washer [C] and 2 x screw [B] on each side. Tighten with Allen Key [D].

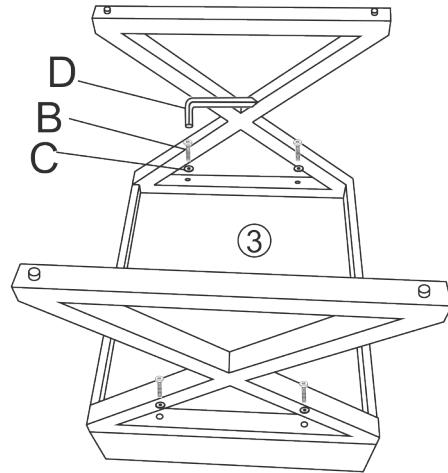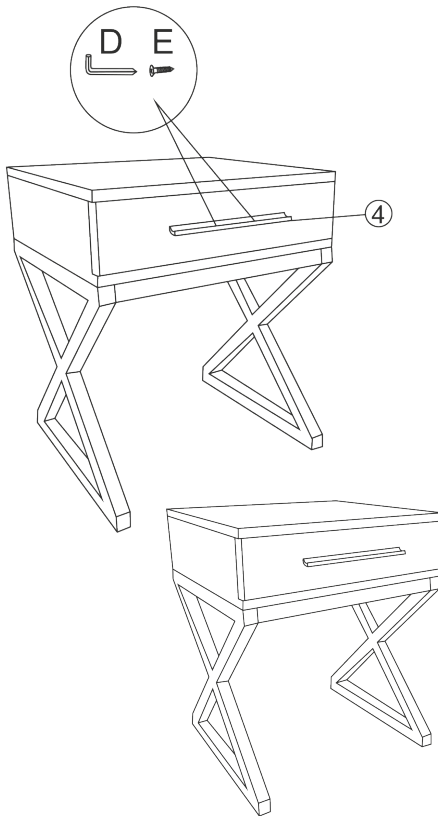

STEP 4

ATTENTION: Carefully flip the bedside table the correct way up so it stands on its chrome legs. Attach drawer pull handle [4] to the front of the drawer using 2x screws [E]. Tighten with Allen Key [D].



furniturebox



WE **L♥VE** INTERIORS! SHARE
YOURS WITH US ON SOCIAL MEDIA

1. follow us on Instagram
2. post your interior
3. tag us to be featured



@furnitureboxUK




@furniturebox_uk



@furnitureboxuk

LOOKING GOOD!

Now you've assembled your product find out how to care for your item and keep it looking brand new.

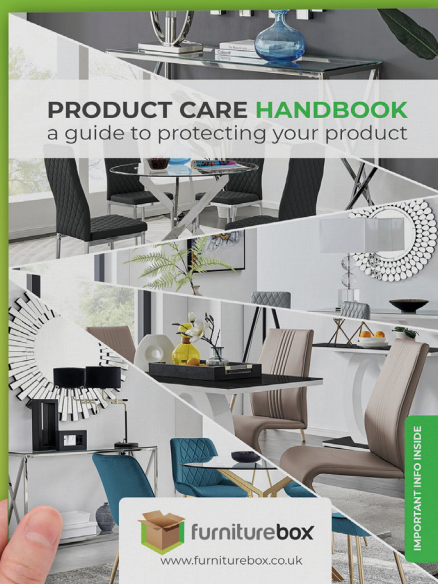

Look for your care guide in the box or visit:
www.furniturebox.co.uk/club/care-guide

www.furniturebox.co.uk



OUR 2 YEAR* GUARANTEE

our products come with a 2 year guarantee
to give you peace of mind shopping at
Furniturebox

*excludes some garden furniture items
which have a 1 year guarantee



WHAT THE GUARANTEE COVERS



PRE-INSERTED FIXINGS
e.g. lose metal threads



FAULTY JOINTS
e.g. legs bending



EXTERNAL FIXING FAULTS
e.g. bonding/glue



STRUCTURAL INTEGRITY
e.g. the frame of the
product



ACTIVATE YOUR GUARANTEE ONLINE

scan this QR code with your phone to read
the full guarantee online and register your
product. It only takes a moment to fill out.
Or visit: furniturebox.co.uk/our-guarantee

Furniturebox UK, Unit 6, St Modwen's Park,
Chippenham, SN15 5BD
Tel: 01747 863333 Email: sales@furniturebox.co.uk