


# AZURE DOUBLE

## ASSEMBLY GUIDE

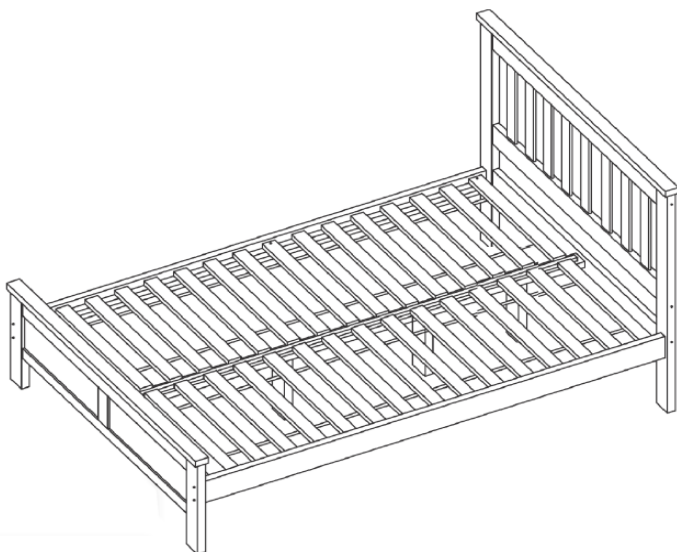

SCAN ME

[www.furniturebox.co.uk](http://www.furniturebox.co.uk)

Scan QR code for more tips,  
advice and assembly video or visit  
[furniturebox.co.uk/club/azure-double-and-king](http://furniturebox.co.uk/club/azure-double-and-king)

**Important - Please read these instructions fully before starting assembly**



### **SAFETY AND CARE ADVICE**



### **NO POWER TOOLS**

## **SAFETY AND CARE ADVICE**

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre



**Follow us on Instagram**  
**@furniturebox\_uk**

## IMPORTANT INFORMATION



45 MINUTE  
BUILD




TWO PERSON  
BUILD




MAXIMUM  
CAPACITY 200Kg

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

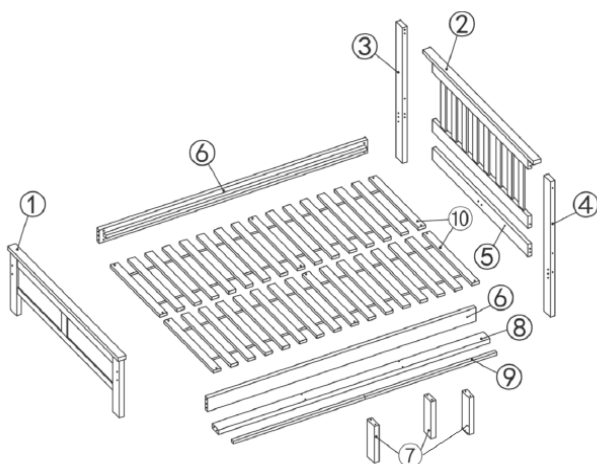

|   |                                                                                               |    |
|---|-----------------------------------------------------------------------------------------------|----|
| A |  M6X70mm   | 08 |
| B |            | 14 |
| C |  Ø8X30mm   | 08 |
| D |  Ø3.5X25mm | 19 |


|   |                                                                                              |    |
|---|----------------------------------------------------------------------------------------------|----|
| E |  Ø7x50mm  | 08 |
| F |           | 01 |
| G |  M6X105mm | 06 |
| H |  Stopples | 14 |

**NOTE:** The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

## STEP 1

Use a clear, flat, soft surface to avoid bumps or scratches.

Construct the headboard first. Take headboard piece [2] and support piece [5] and insert 4 x wooden dowels [C] as indicated in diagram.

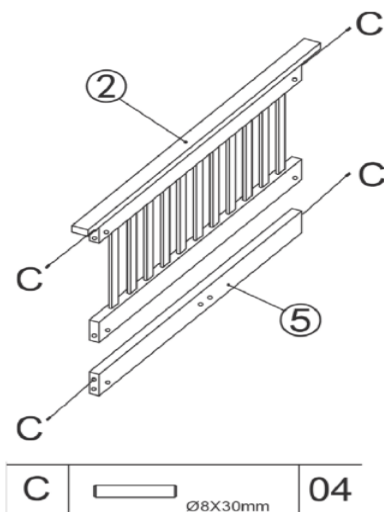


## STEP 2

Next, attach side pieces to headboard.

Take side supports [3] and [4] and slot onto dowels in headboard [2] and support piece [5].


Screw it all together using 6 x bolts [G] and 6 x cam locks [B] as per the diagram. Use Allen key [F].

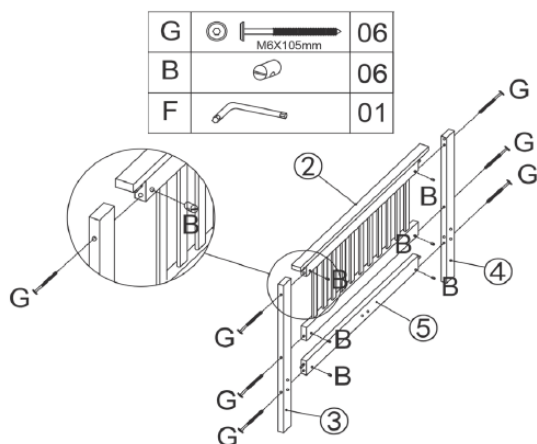

### STEP 3

Take 2 x side pieces [6] and add 4 x dowels [C] into the ends as per diagram - 1 dowel either end of each side piece. Construct central support beam - take support beam [8] and attach 3 x feet [7] using 6 x bolts [E]. Use Allen key [F].

|   |                                                                                   |    |   |                                                                                   |    |
|---|-----------------------------------------------------------------------------------|----|---|-----------------------------------------------------------------------------------|----|
| C |  | 04 | E |  | 06 |
| F |  | 01 |   |                                                                                   |    |

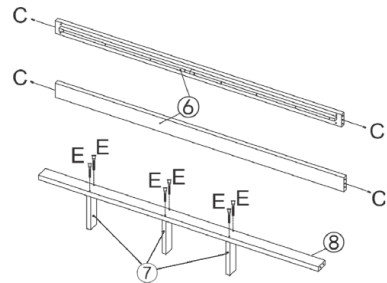

### STEP 4


Construct bed frame.

Align headboard [2], footboard [1], side pieces [6] and central support beam/legs [8/7] as per diagram - get all the pieces into correct position before screwing anything together.

Connect side pieces to headboard and footboard with 8 x bolts [A] and 8 x cam locks [B] - 2 at each end, on both sides,

Attach central support beam to headboard using 2 x bolt [E], and to footboard using 1 x screw [D]

|   |                                                                                     |         |    |   |                                                                                   |    |
|---|-------------------------------------------------------------------------------------|---------|----|---|-----------------------------------------------------------------------------------|----|
| A |    | M6x70mm | 08 | D |  | 01 |
| B |    |         | 08 |   |                                                                                   |    |
| E |   | Ø7x50mm | 02 |   |                                                                                   |    |
| F |  |         | 01 |   |                                                                                   |    |

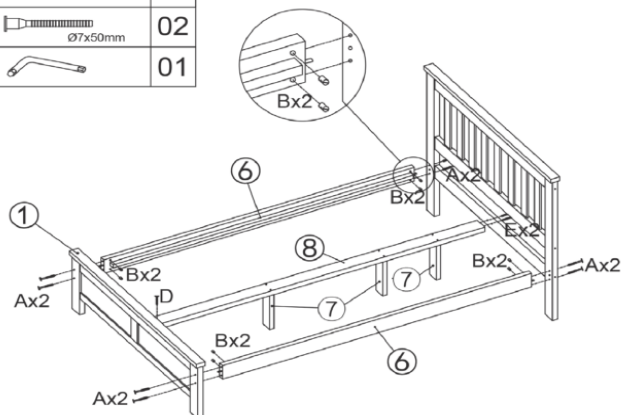


## STEP 5

Place 2 x slats runners [10] onto frame with central runner beam [9] in the middle, as per diagram.

Screw slats and central runner into place using 18 x screw [D]


Finally, cover all exposed holes on outside of frame with stopples [H] - x 14 in total.

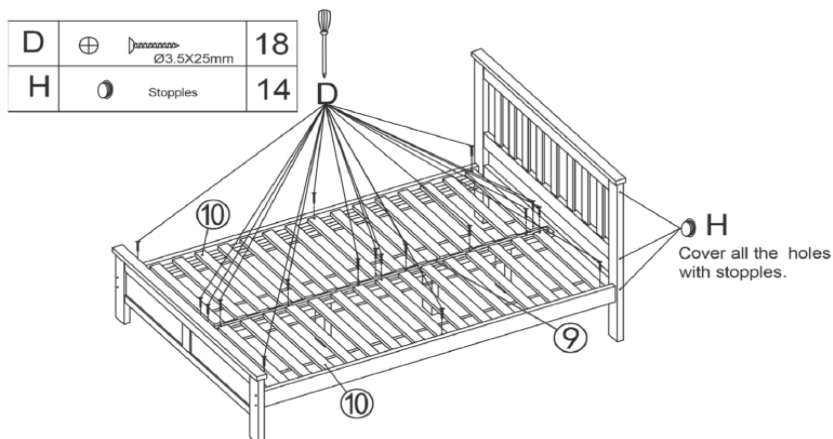

## STEP 6


Your bed is now complete!

**ATTENTION:** Should you need to move the bedframe after assembly, carefully lift and re-position with the help of at least one other person. Do not attempt to drag the frame or you could risk damaging the structure.

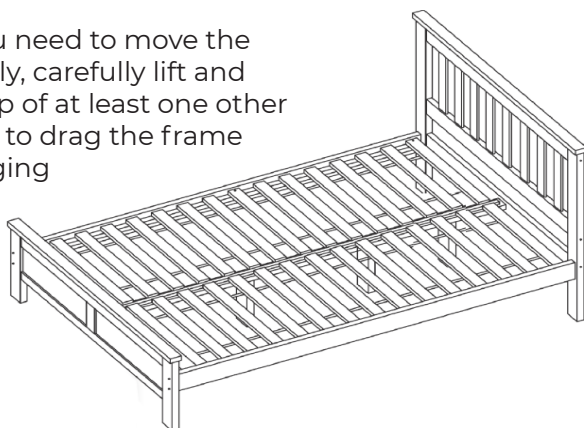

# LOOKING GOOD!

Now you've assembled your product find out how to care for your item and keep it looking brand new.

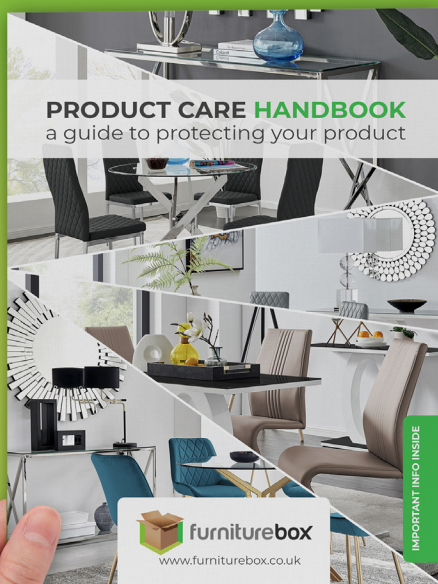

Look for your care guide in the box or visit:  
**[www.furniturebox.co.uk/club/care-guide](http://www.furniturebox.co.uk/club/care-guide)**



## OUR 2 YEAR\* GUARANTEE

our products come with a 2 year guarantee to give you peace of mind shopping at Furniturebox

\*excludes some garden furniture items which have a 1 year guarantee



## WHAT THE GUARANTEE COVERS



### PRE-INSERTED FIXINGS

e.g. lose metal threads



### FAULTY JOINTS

e.g. legs bending



### EXTERNAL FIXING FAULTS

e.g. bonding/glue



### STRUCTURAL INTEGRITY

e.g. the frame of the product



## ACTIVATE YOUR GUARANTEE ONLINE

scan this QR code with your phone to read the full guarantee online and register your product. It only takes a moment to fill out. Or visit: [furniturebox.co.uk/our-guarantee](https://furniturebox.co.uk/our-guarantee)



Furniturebox UK, Unit 6, St Modwen's Park,  
Chippenham, SN15 5BD  
Tel: 01747 863333 Email: [sales@furniturebox.co.uk](mailto:sales@furniturebox.co.uk)