



# Assembly Instructions

## Installation Steps

1. Identify all components are present prior to installation
2. Flush pipes to remove any debris in pipes before installation
3. Position overflow body (C). Ensure washers (Item D and E) are in place and push the overflow cover (A) into lock nut (B)
4. Assemble waste outlet (J). Ensure washers (Items H and I) and Flange (G) are in place and tighten.
5. Fill the bath with water and check all joints to ensure there are no leaks. This is best done in stages starting with a small amount of water before fully filling the bath
6. Once fitting has been completed, carefully clean all plated surfaces. The finish surface of the product should be cleaned on a regular basis to maintain their appearance.
7. Product is suitable for bathtub thickness 5-15mm. They should only be cleaned with warm soapy water and then wiped with a dry cloth.

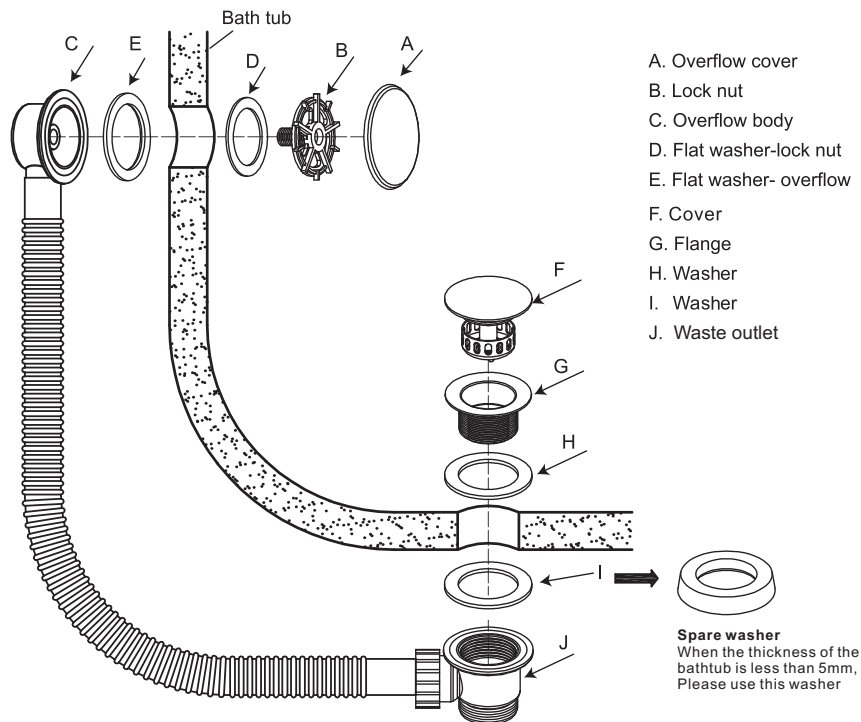

**Once assembled, fill the bath with water, check for leaks.**

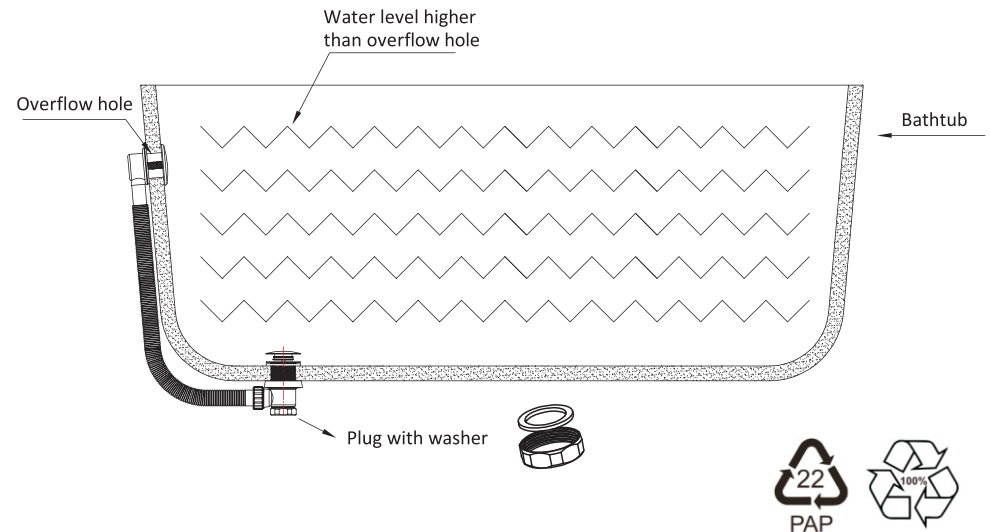

## Aftercare:

The end user is required to regularly maintain and clean product using warm soapy water and a soft cloth for the product warranty to be valid. Surfaces should be maintained using a clean damp cloth, NO corrosive and abrasive agents or materials should be used or come into contact with the surface finish, as this will invalidate your product warranty.